
DO NOT DRAG
2 MAN LIFT

Ellesmere

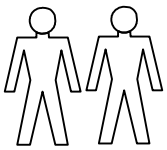

Dresser

Assembly instruction




IMPORTANT: RETAIN FOR FUTURE REFERENCE:
READ CAREFULLY IND. 4022547


BEFOR ASSEMBLY

MAIN COMPONENTS

-unpack all the parts and identyfy them against the fitting and components list.
-do not discard any packaging untill you have checked that you have all parts as shown below.
-you may find the construction of your dresser easier if you have the help of another person.
-crosshead screwdriver (not provided).

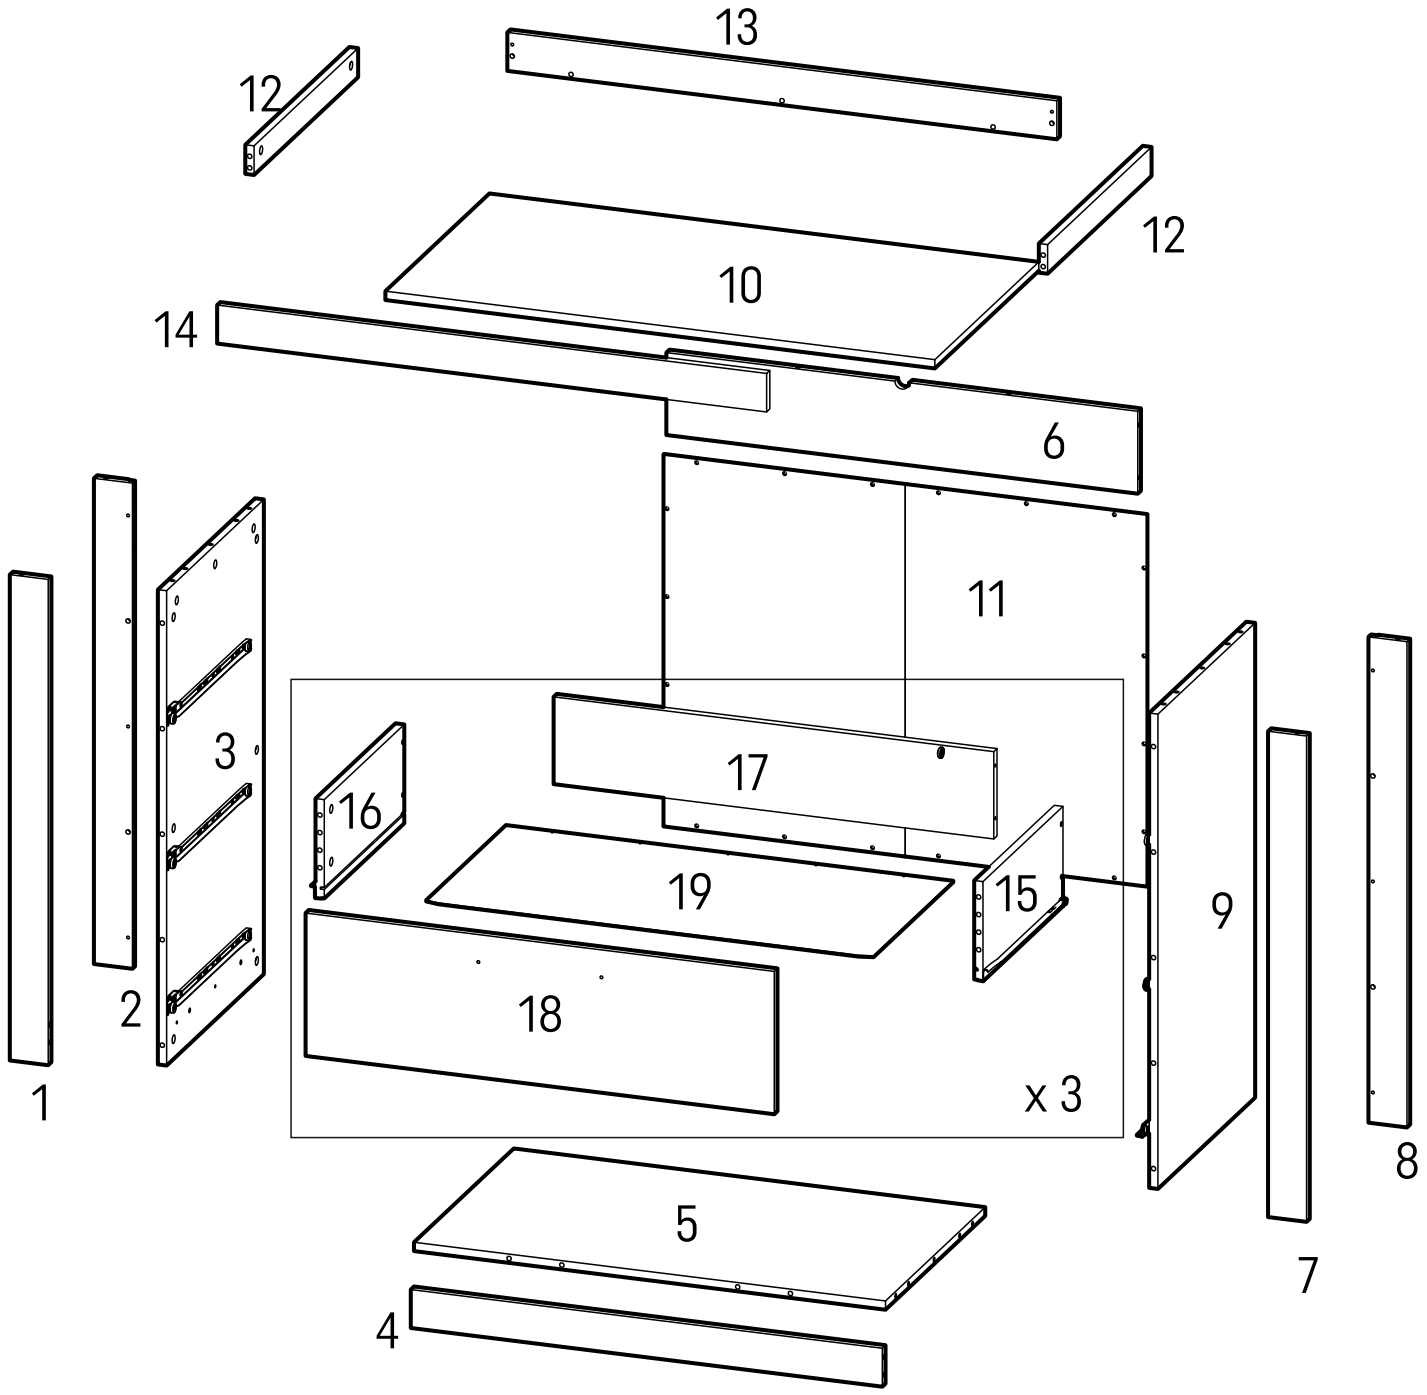


1005740

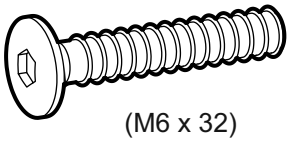

(M6 x 32)


x 3

1005857




x 42

1004831

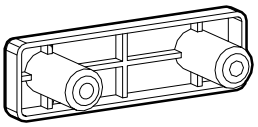


x 4

1005367

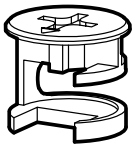


x 48

1006091



x 48

1006031



(4 x 22)

x 6


1006012



(3 x 16)


x 41

1000893

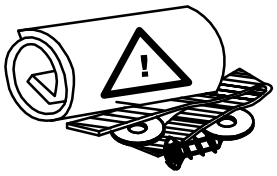

x 1

1133253



x 3


1115207



(3 x 10)

x 4

1001786




x 2

1002152



x 3

1005836




x 12

1000806






x 1


ARTIKELNUMMER ITEM NUMER ARTIKELNUMMER	BOX	4022547	AANTAL QUANTITY ANZAHL	AFTMETINGEN [mm] DIMENSIONS [mm] ABMESSUNGEN [mm]		
1	2/3	2226505	1	884	70	16
2	2/3	2226507	1	884	70	16
3	2/3	2226497	1	864	486	16
4	1/3	2226503	1	858	70	16
5	2/3	2226511	1	858	499	16
6	1/3	2226504	1	858	150	16
7	2/3	2226506	1	884	70	16
8	2/3	2226508	1	884	70	16
9	2/3	2226498	1	864	486	16
10	1/3	2226512	1	1000	520	16
11	2/3	2225626	1	880	677	2,5
12	2/3	2226491	2	520	53	16
13	1/3	2226509	1	1000	70	16
14	1/3	2226502	1	1000	70	16
15	1/3	2226500	3	400	180	16
16	1/3	2226499	3	400	180	16
17	3/3	2226510	3	801	159	16
18	3/3	2226501	3	853	260	16
19	1/3	2226453	3	814	405	2,5

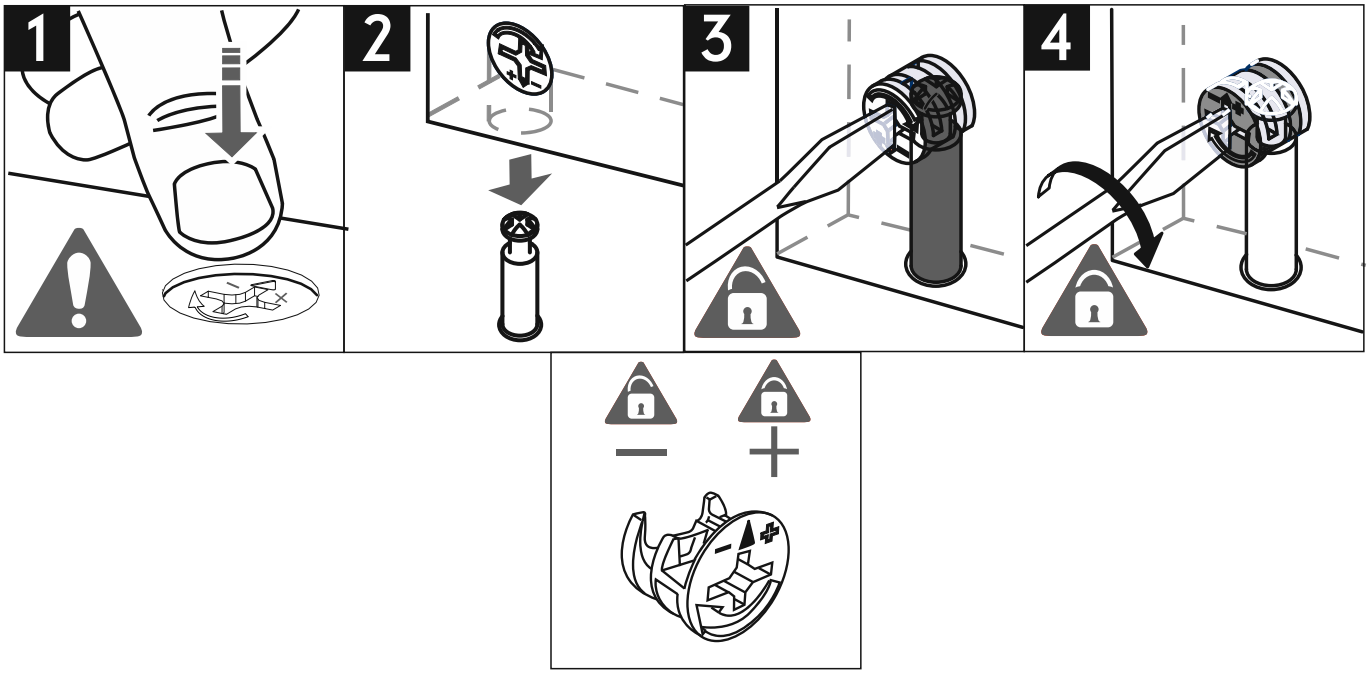




EN. In case of complaim please advise the spare part number.


1

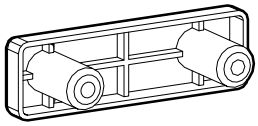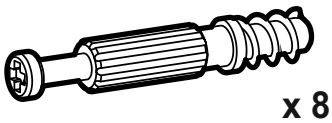1005857	1004831	1006091
 x 2	 x 2	 x 8

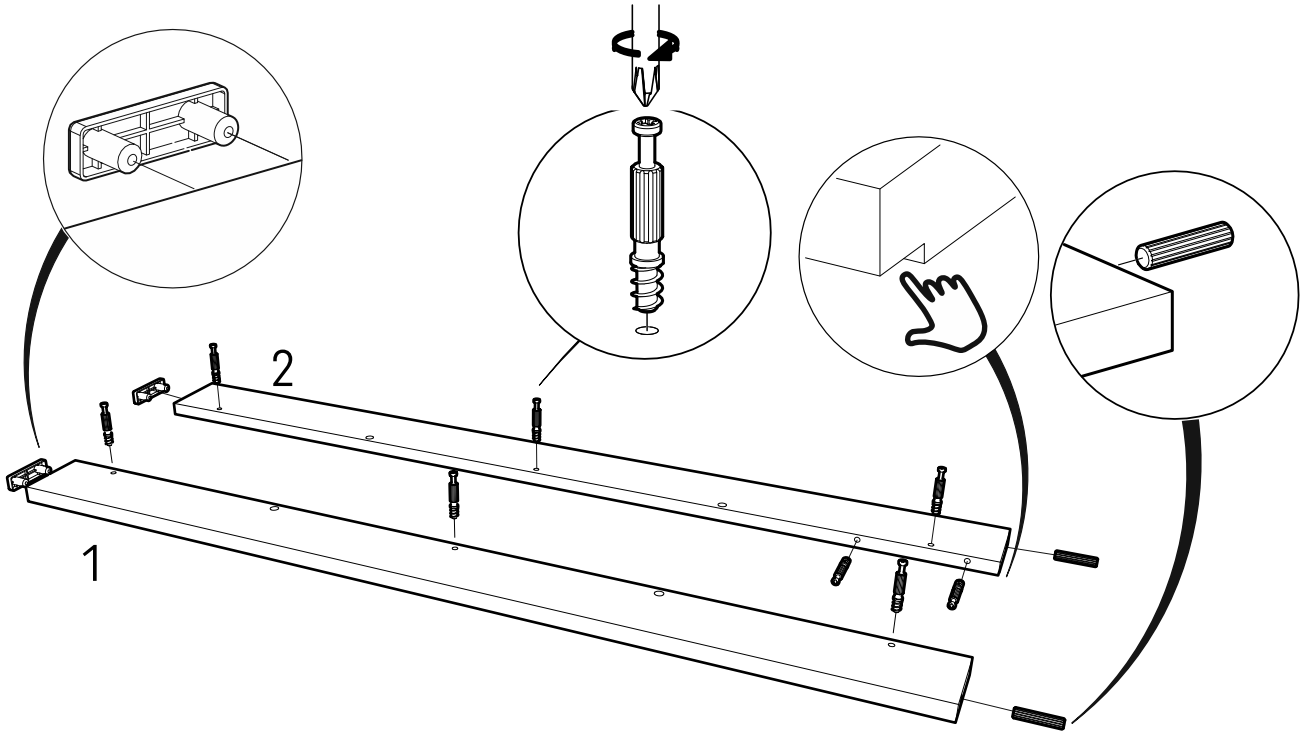


2

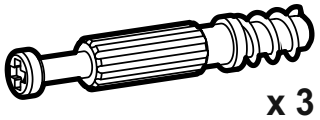
1005857	1005367	1006091
 x 6	 x 9	 x 3

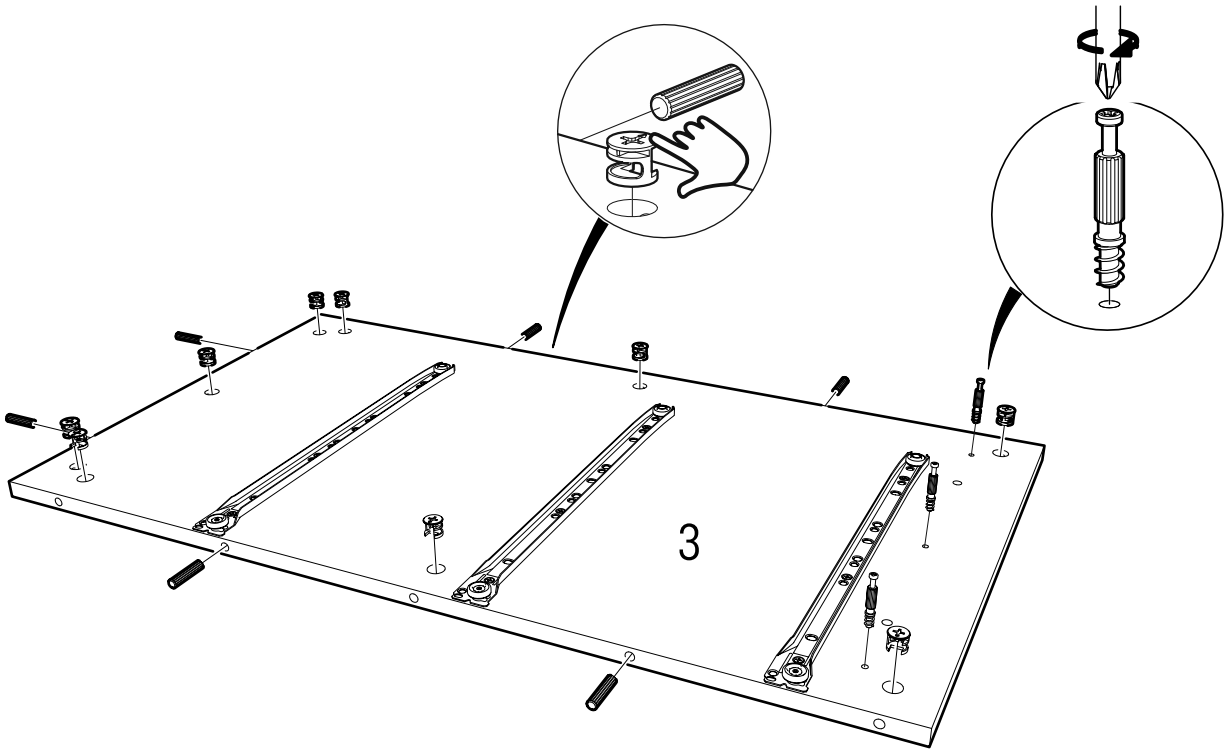

3

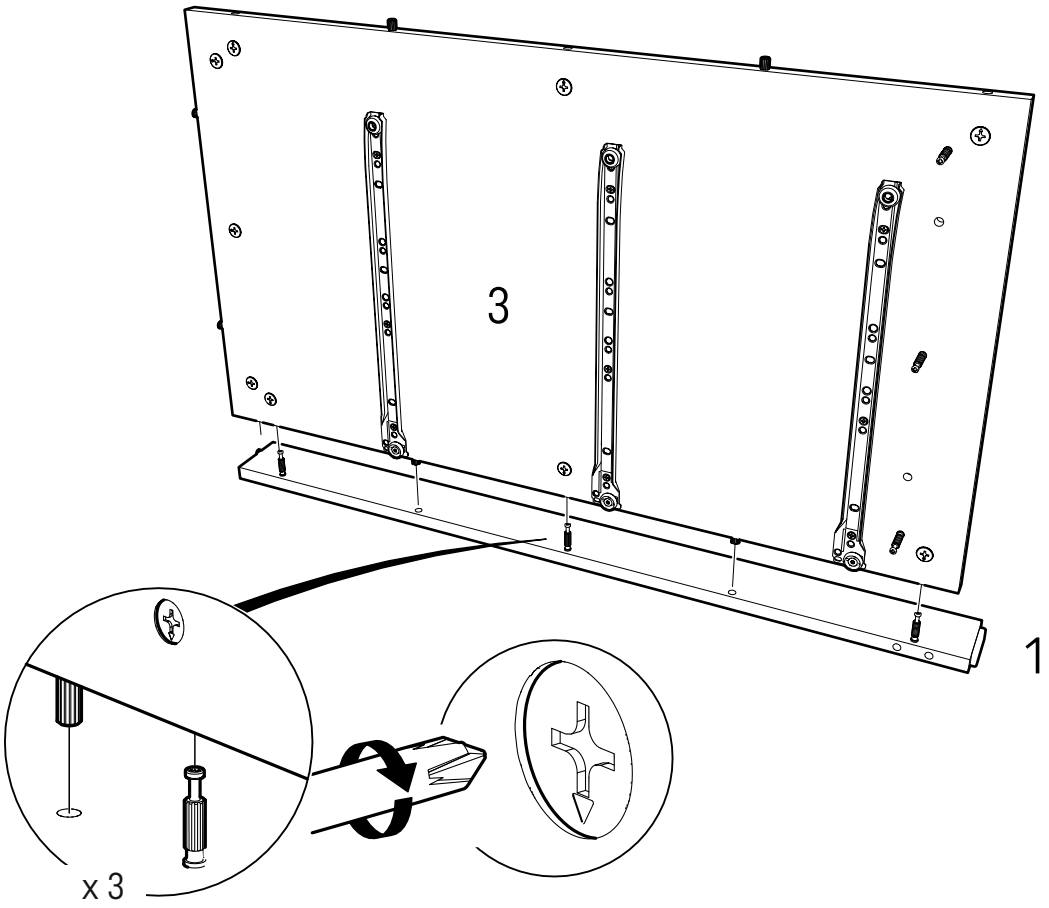


4

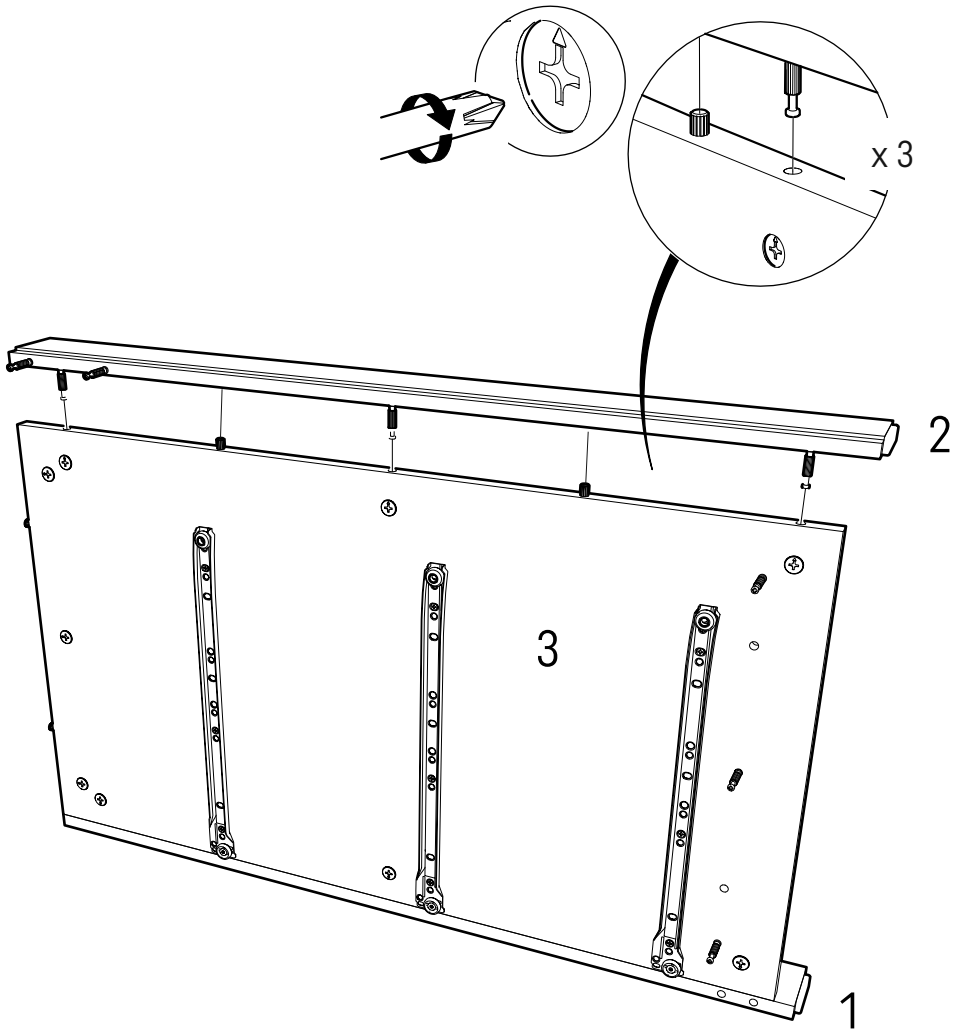



5

1005857 x 4




1006091 x 2

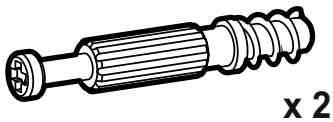

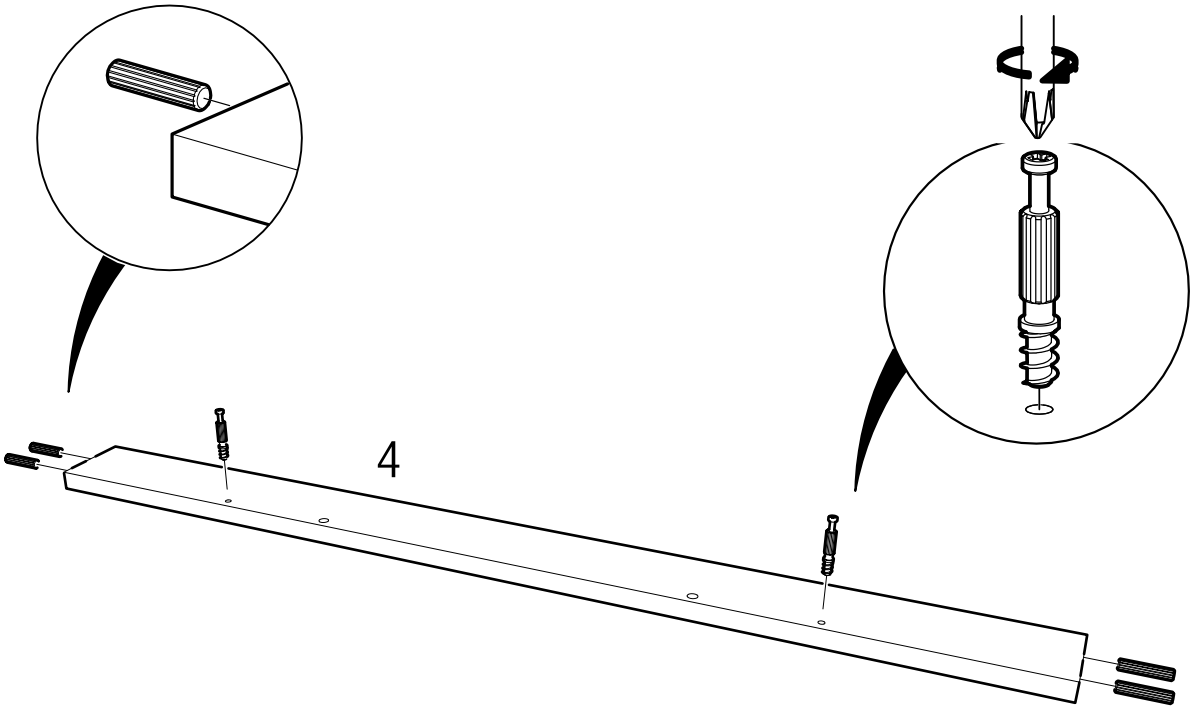



6

1005857 x 6




1005367 x 8




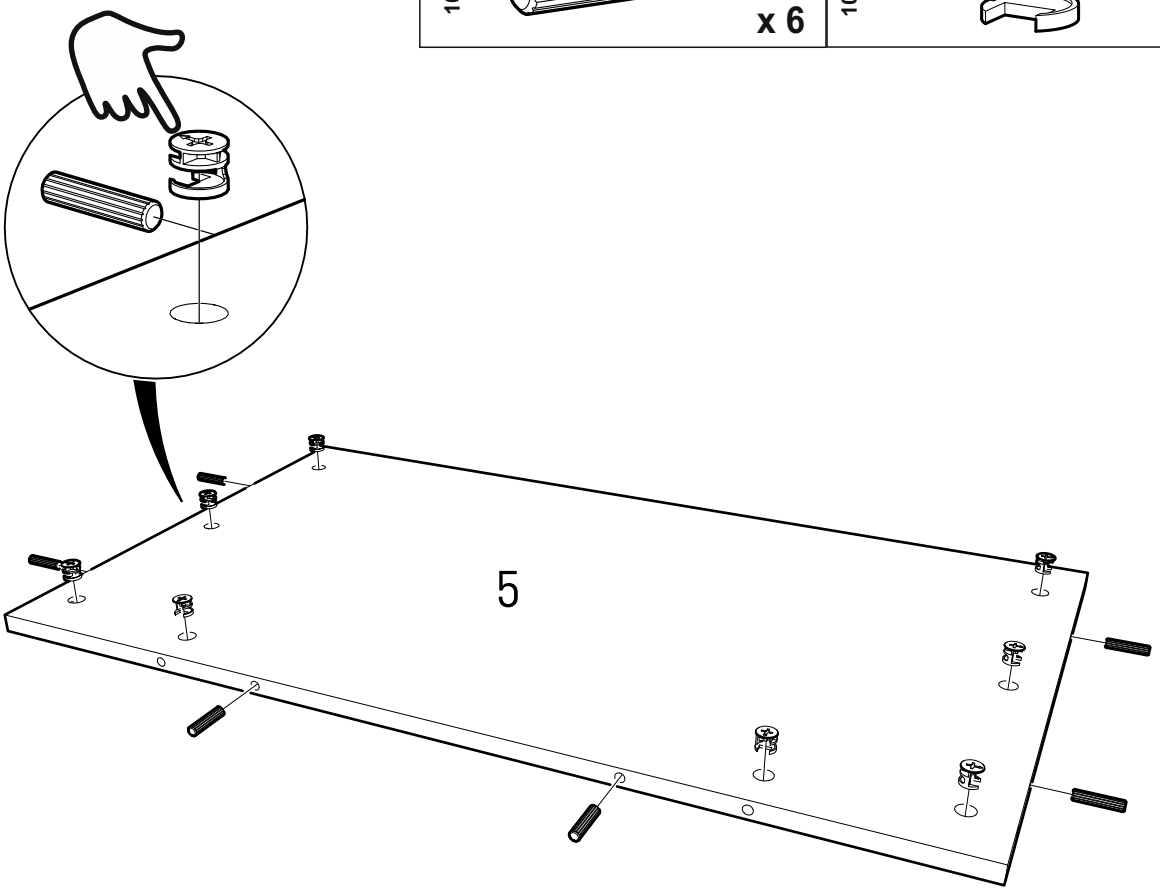

7

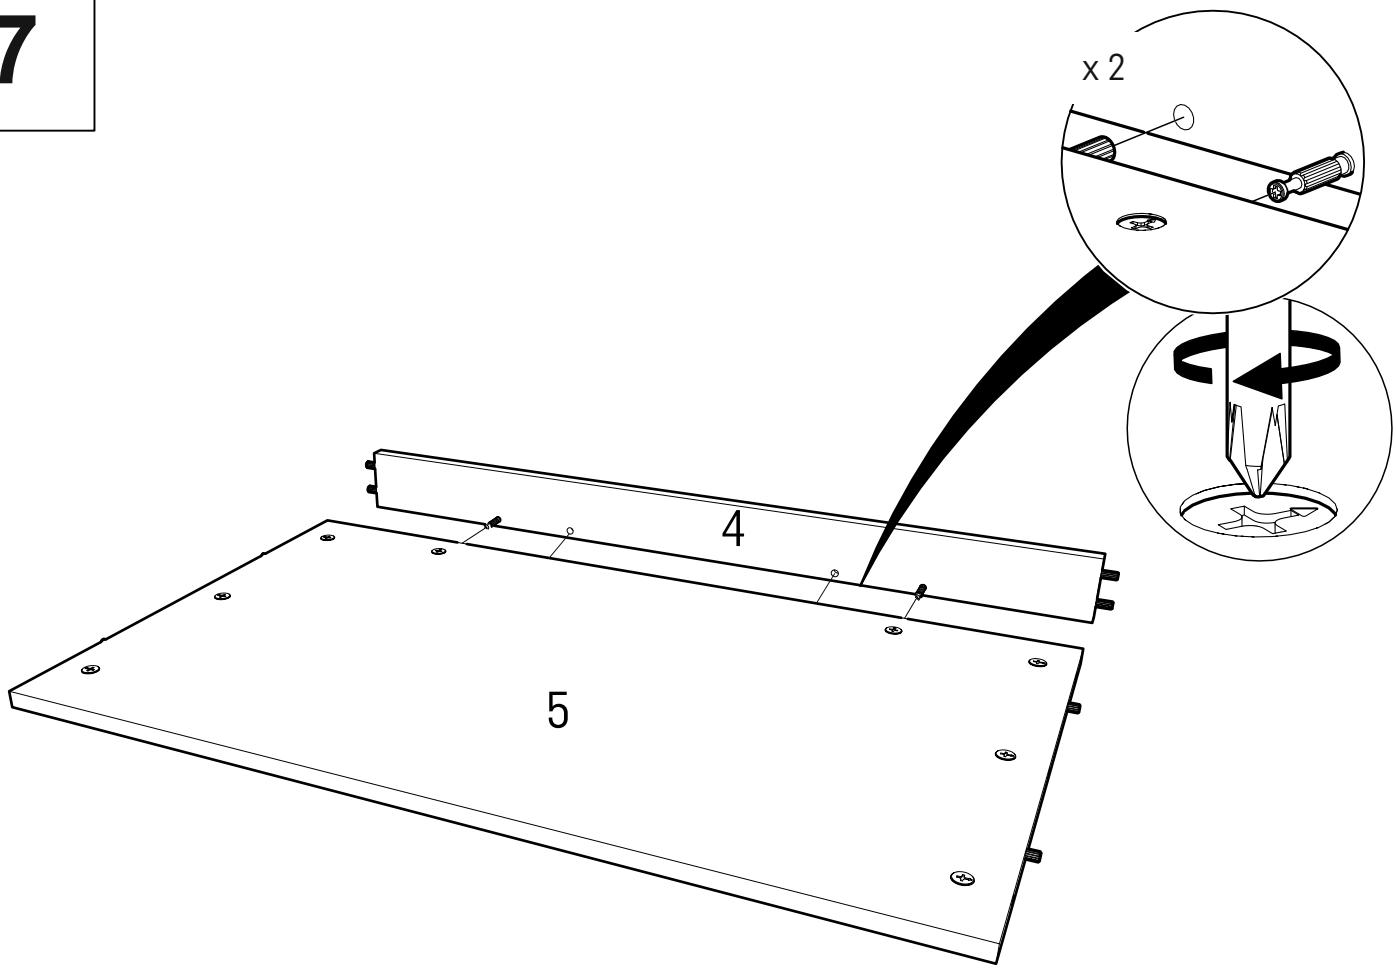


8

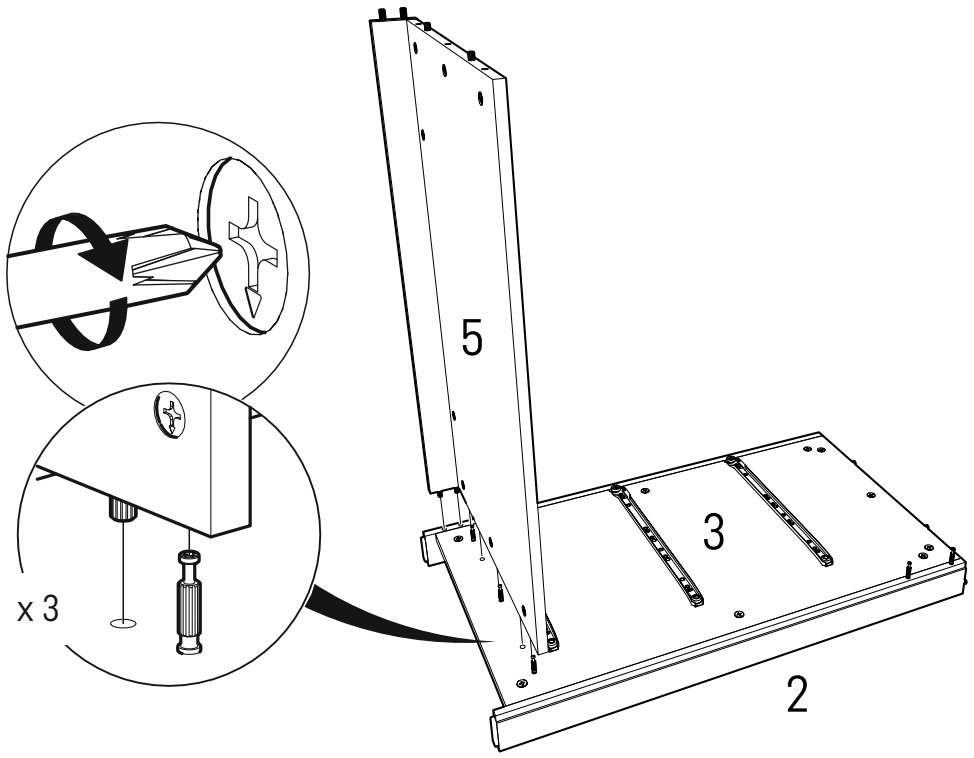


9


1005367

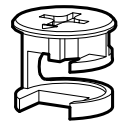




x 6

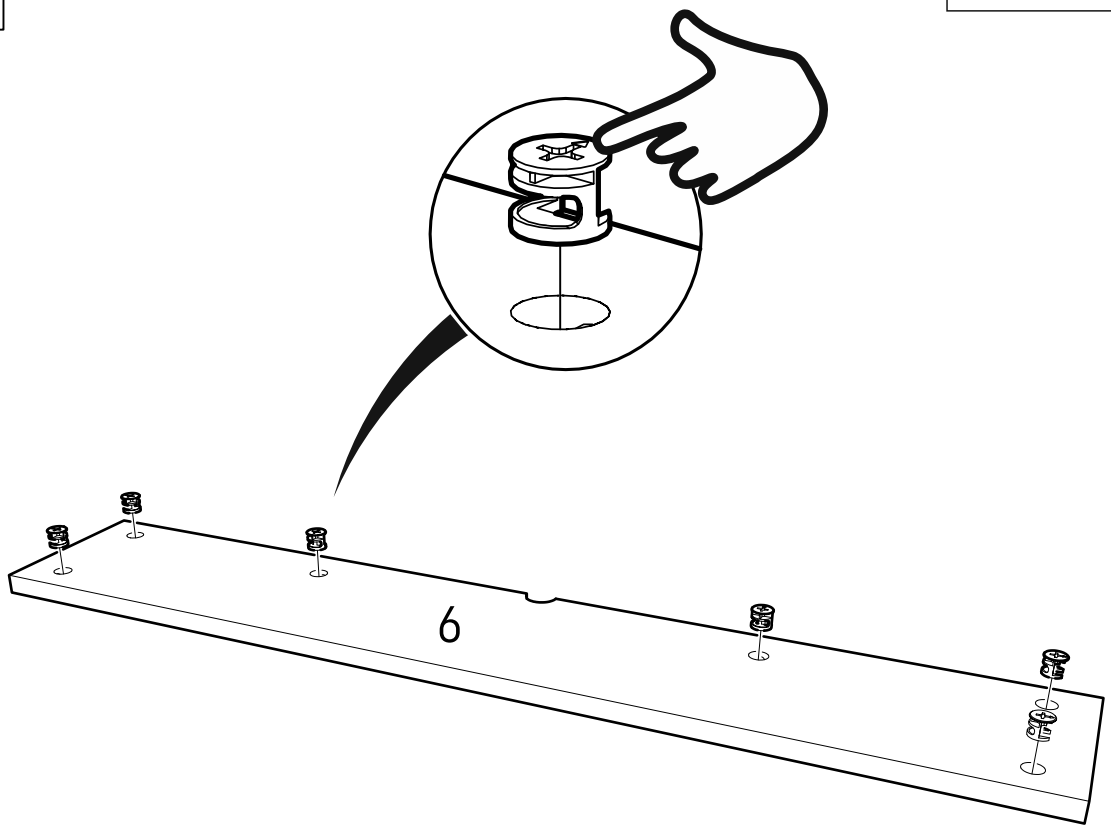


10



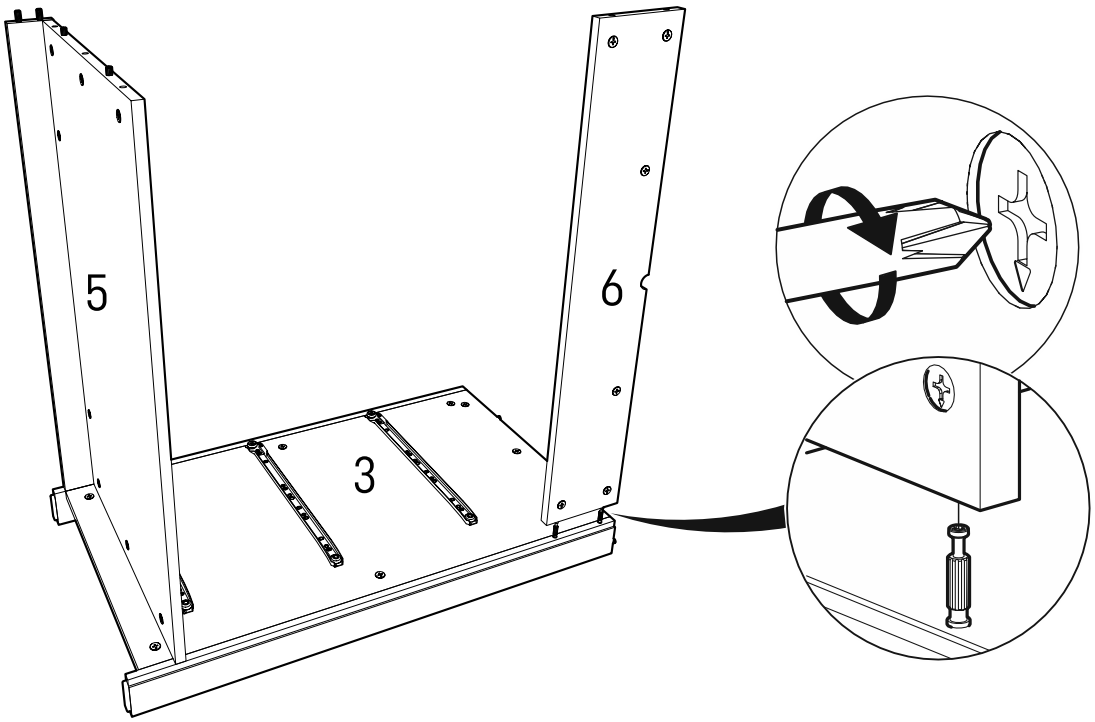



11

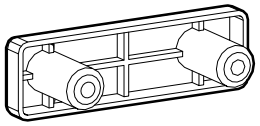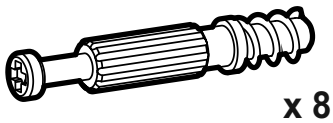1005857	1004831	1006091
 x 2	 x 2	 x 8

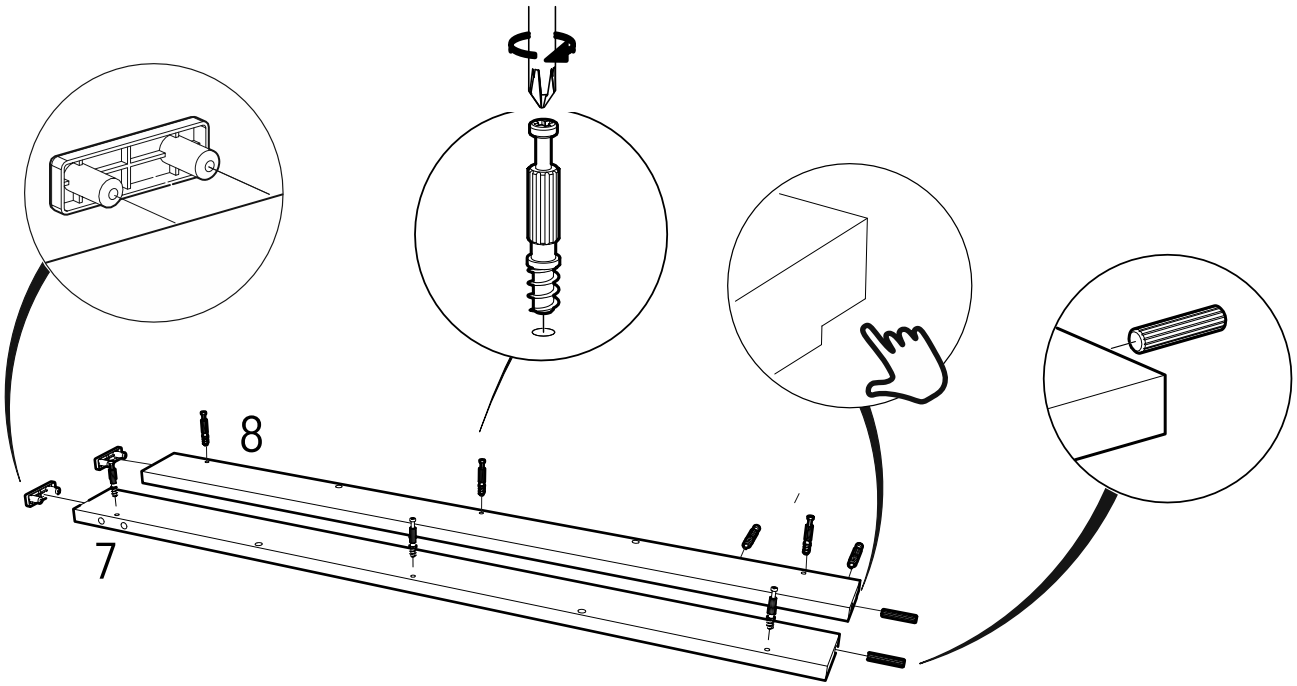


12

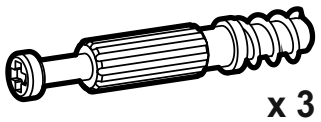
1005857	1005367	1006091
 x 6	 x 9	 x 3

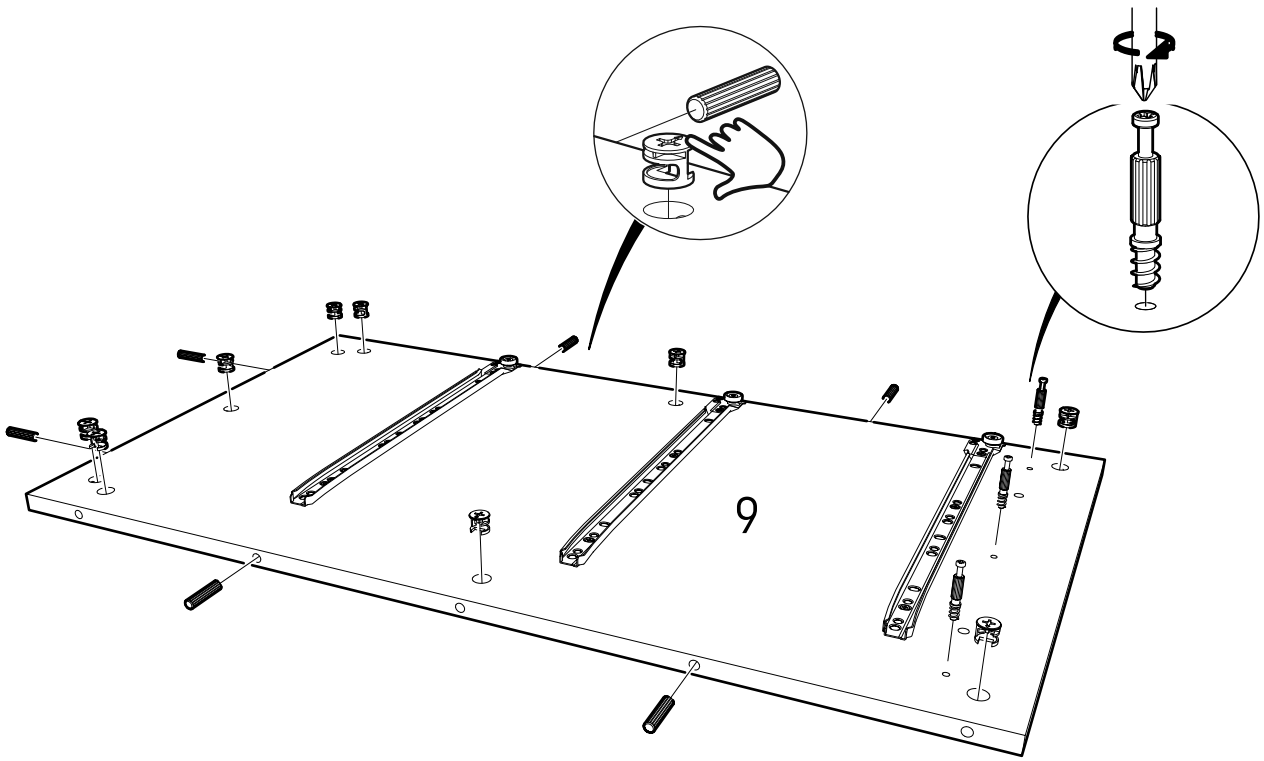


13

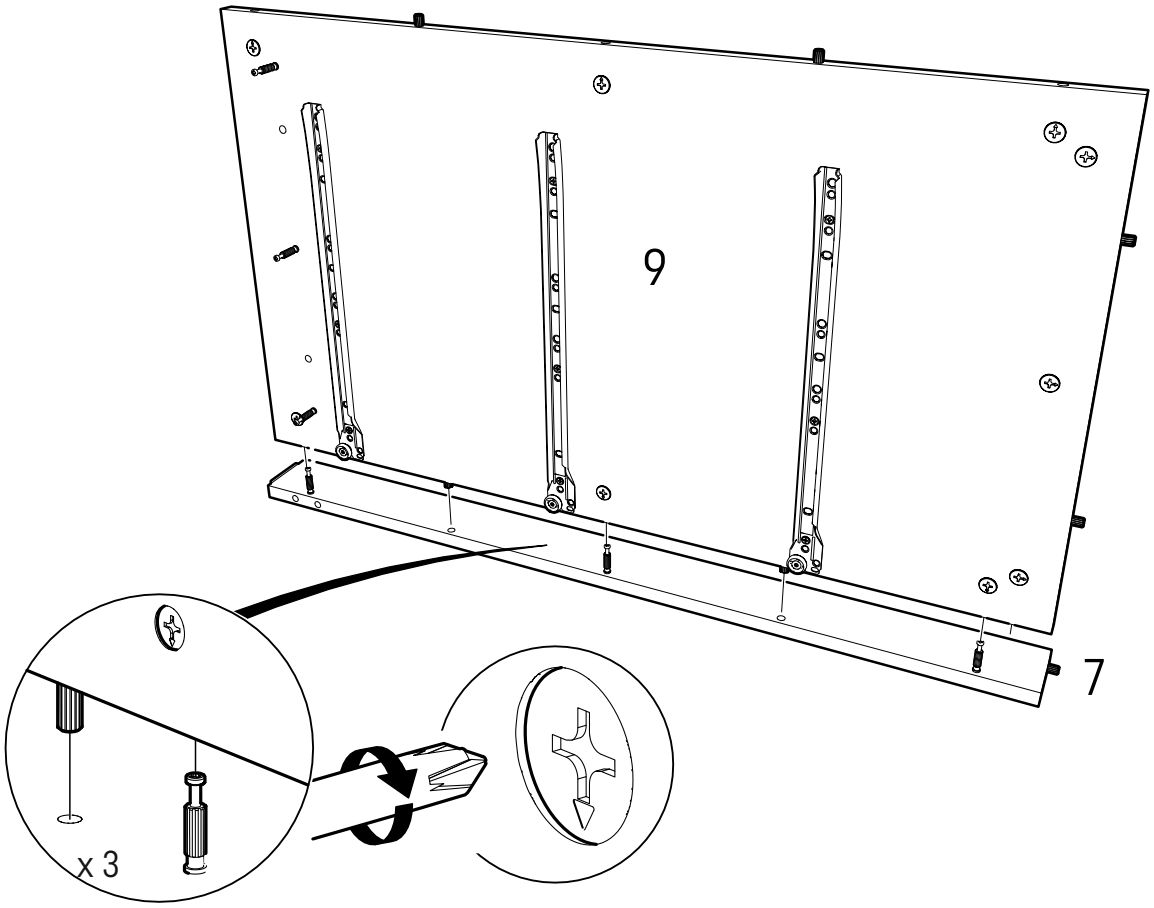


14

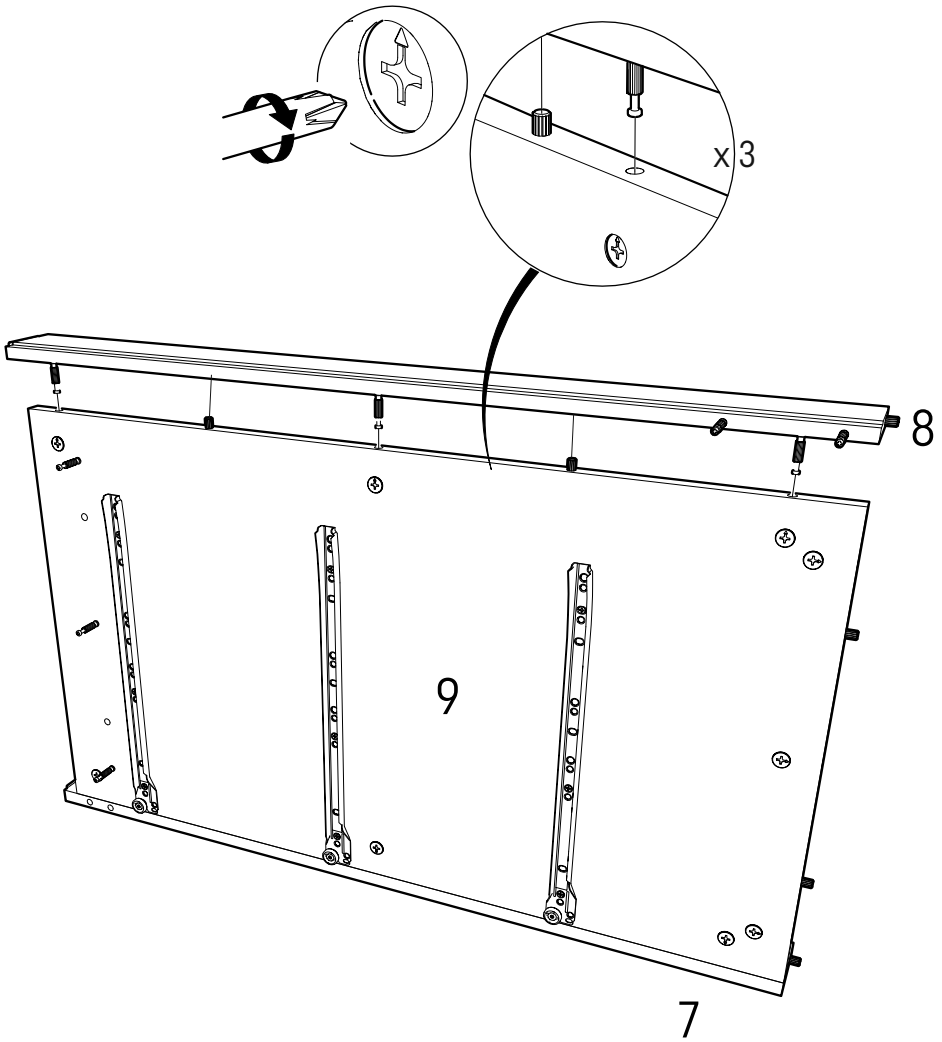


15

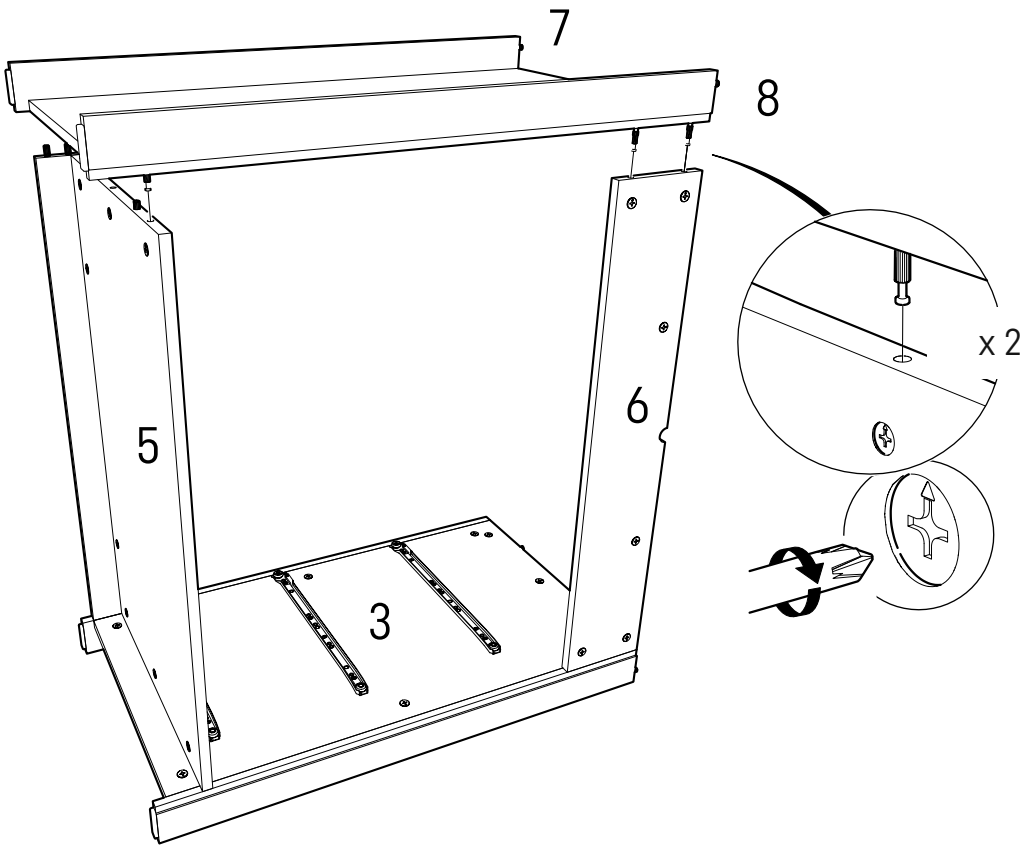


16

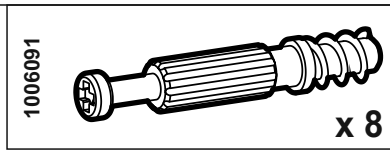


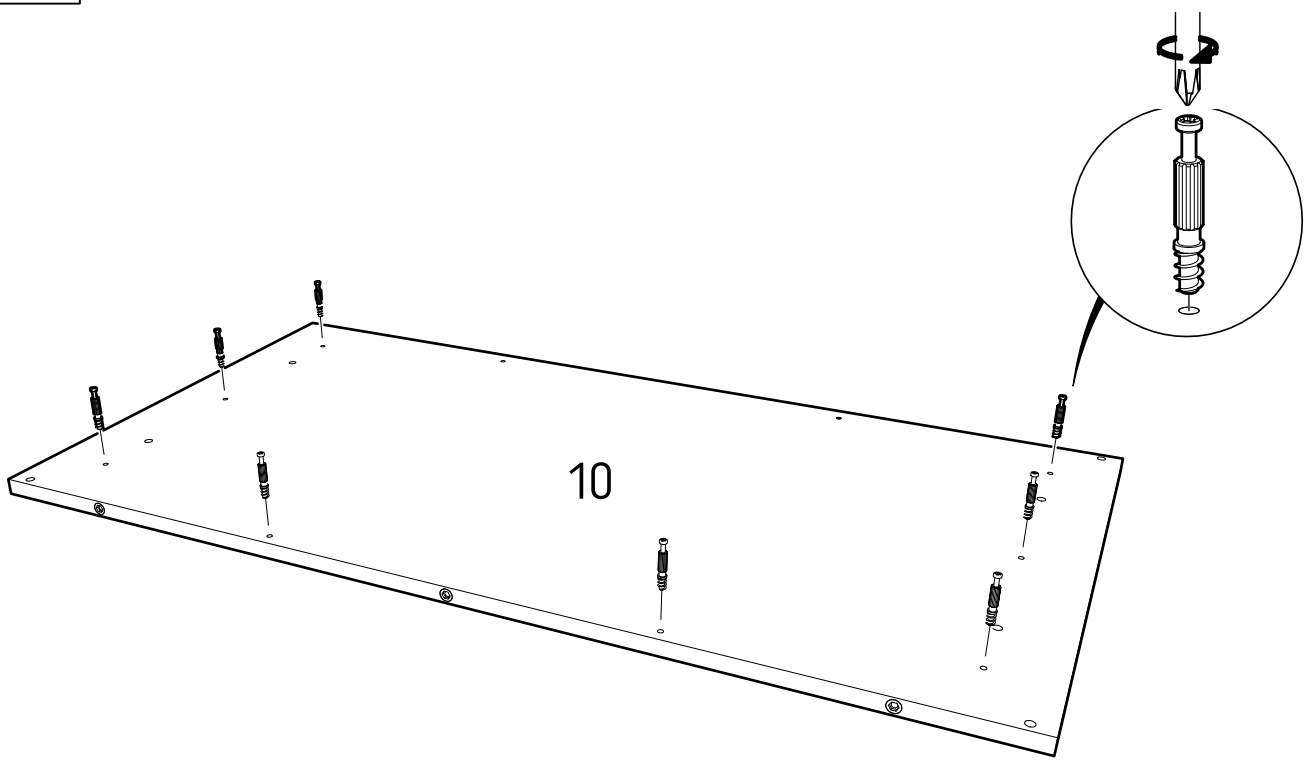

17

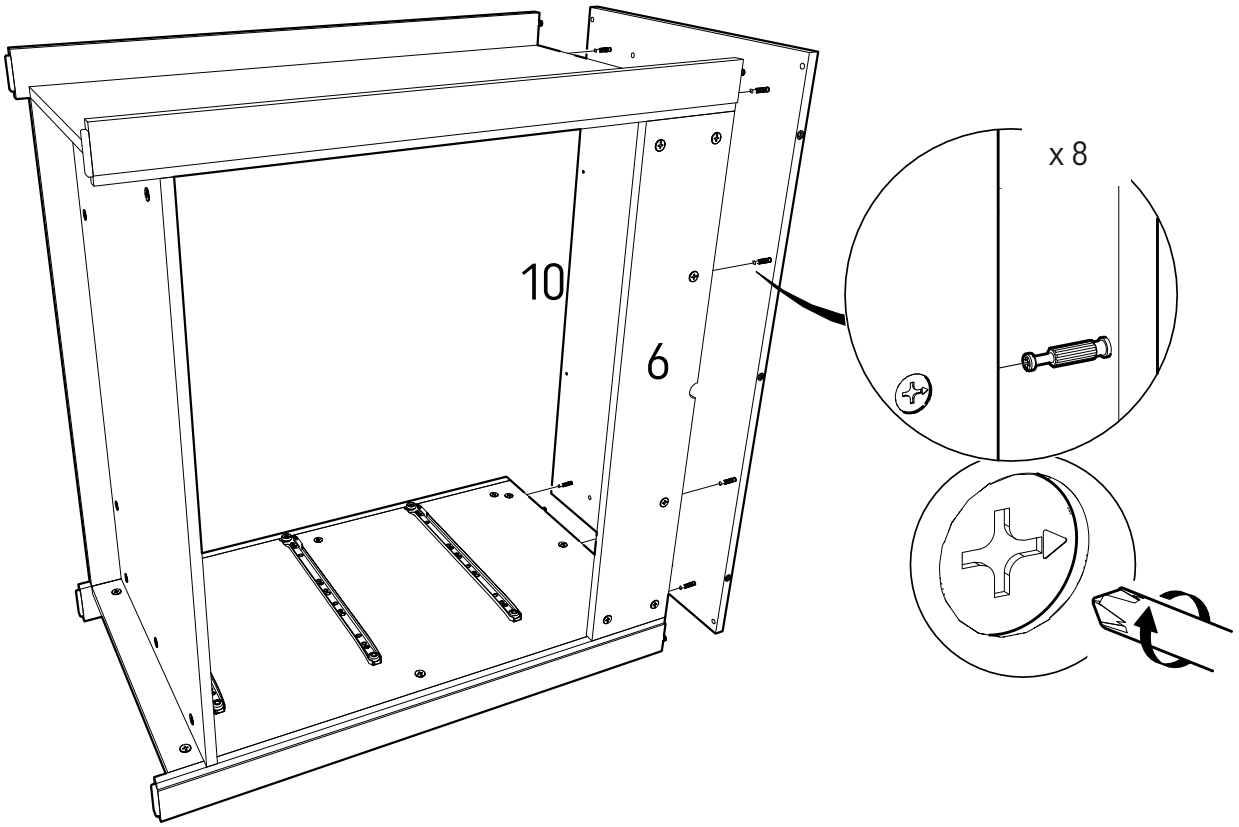

18

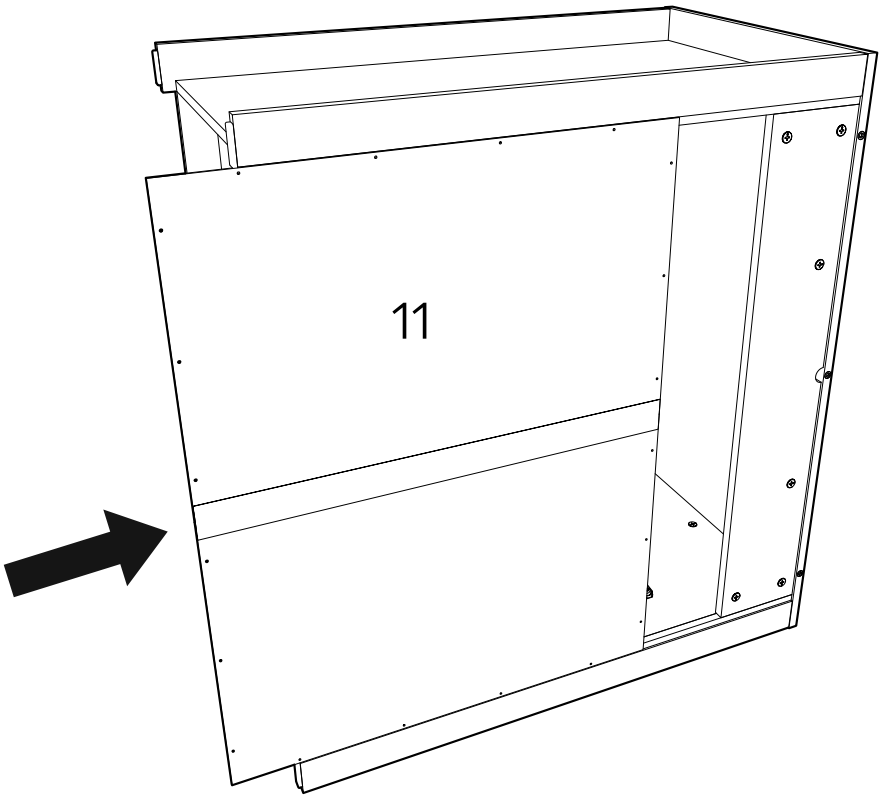


19


1006012



(3 x 16) **x 20**

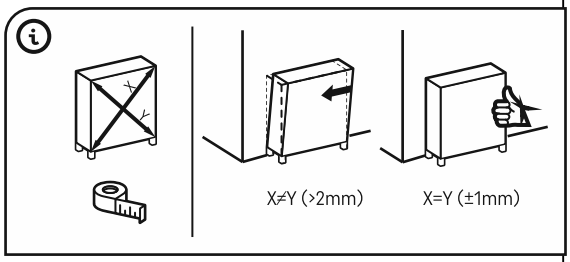


20

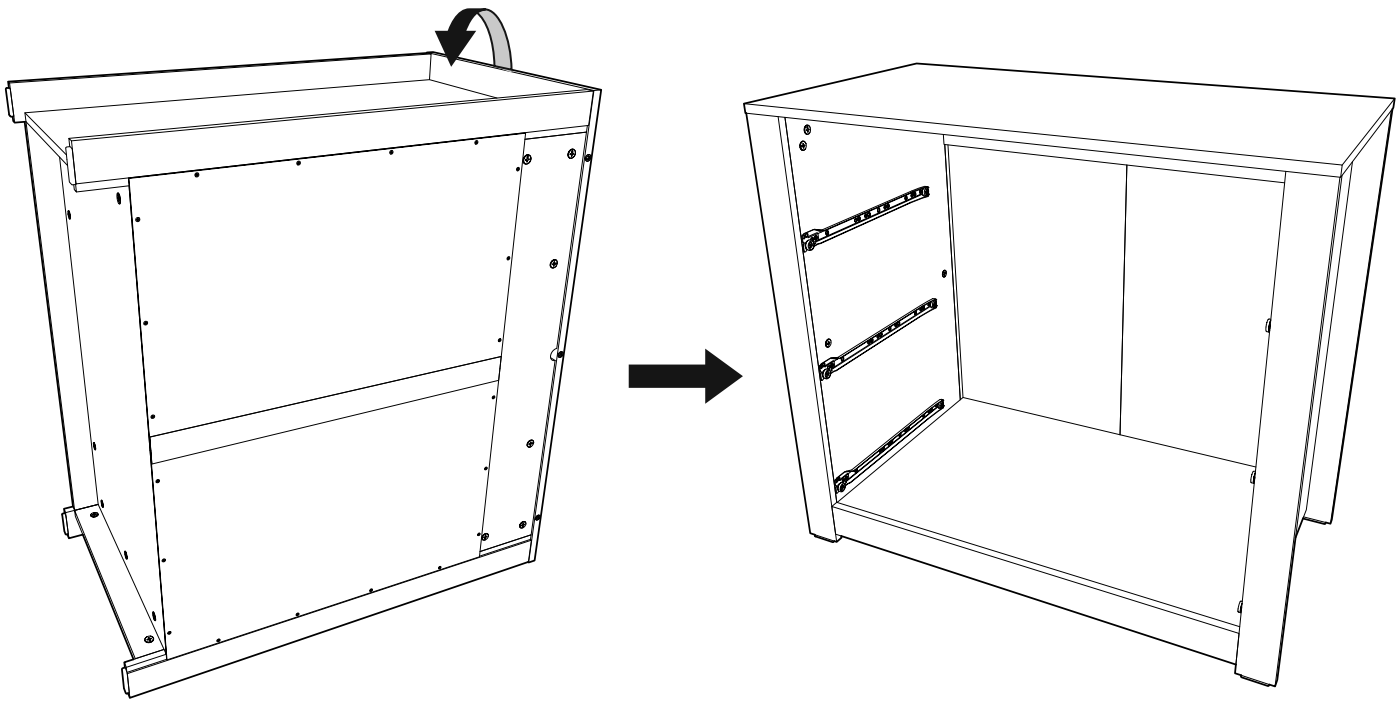



21

1005857 x 4



1005367 x 4




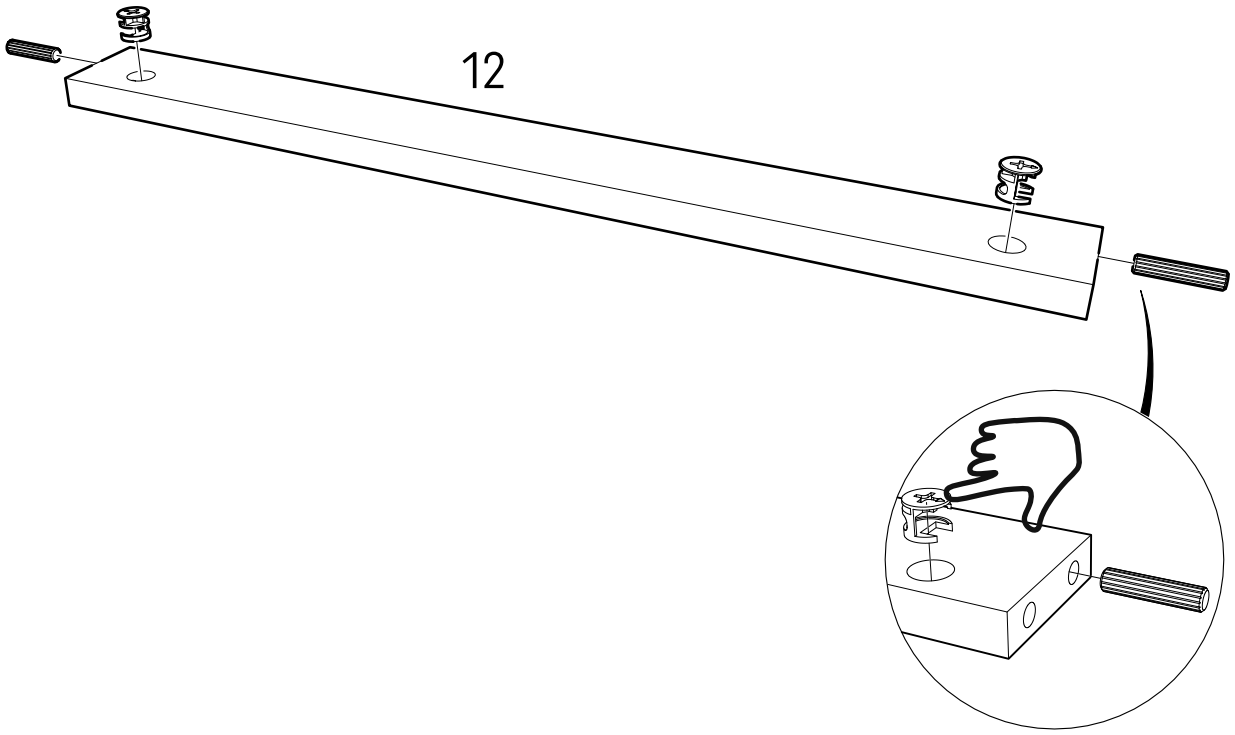


x 2

22


1006091 x 4

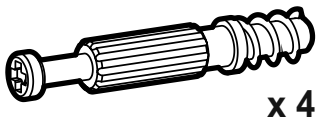


23

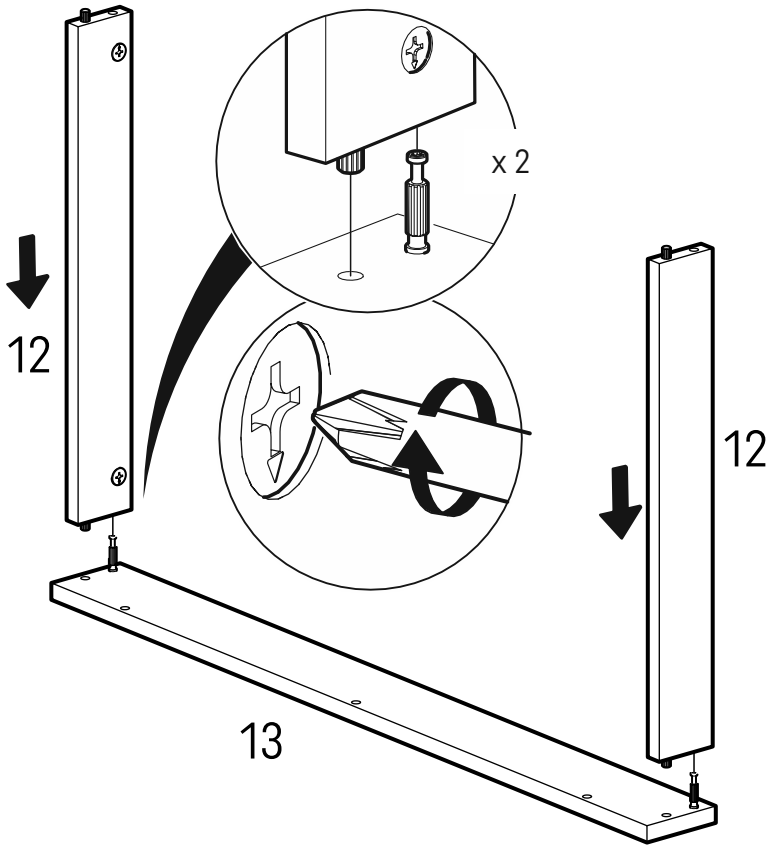

24

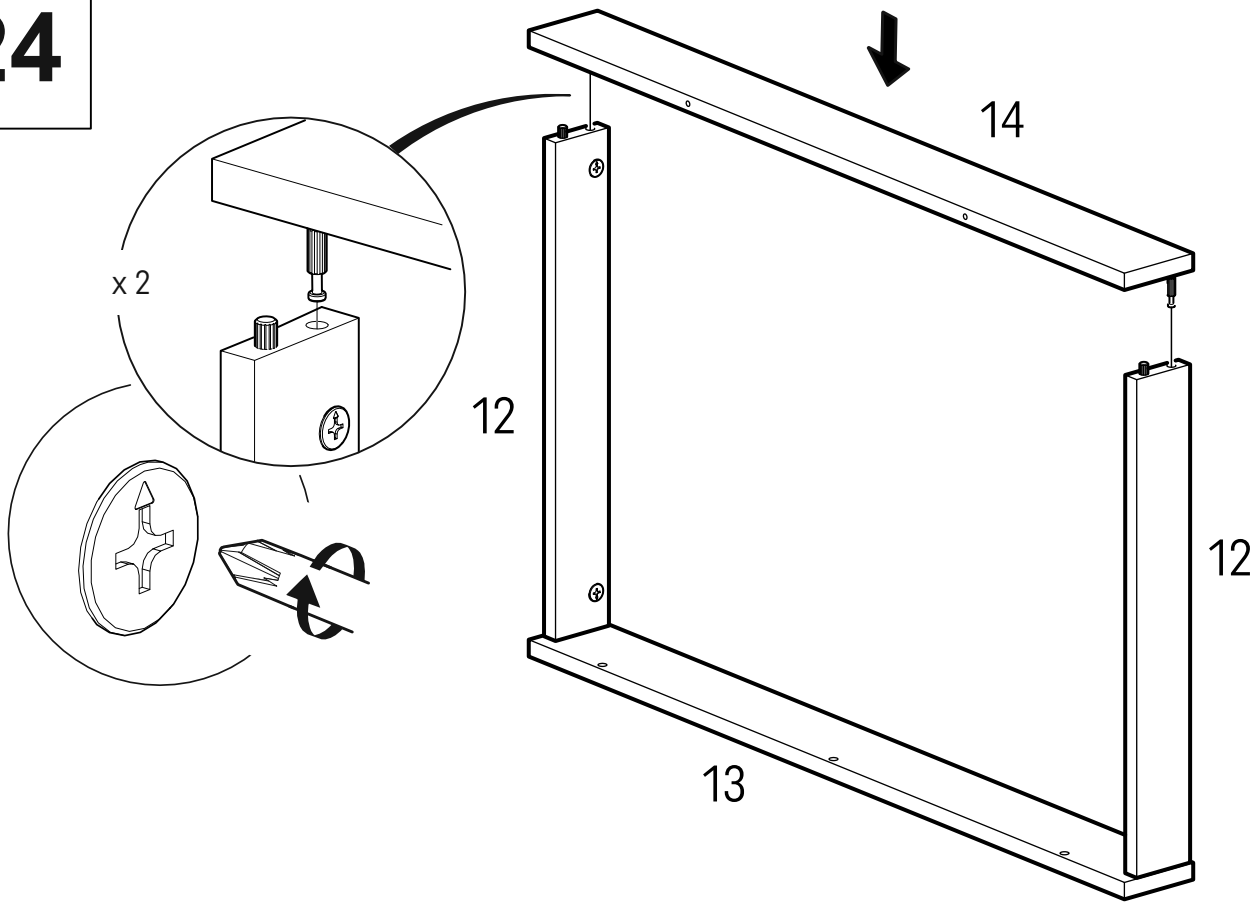


25

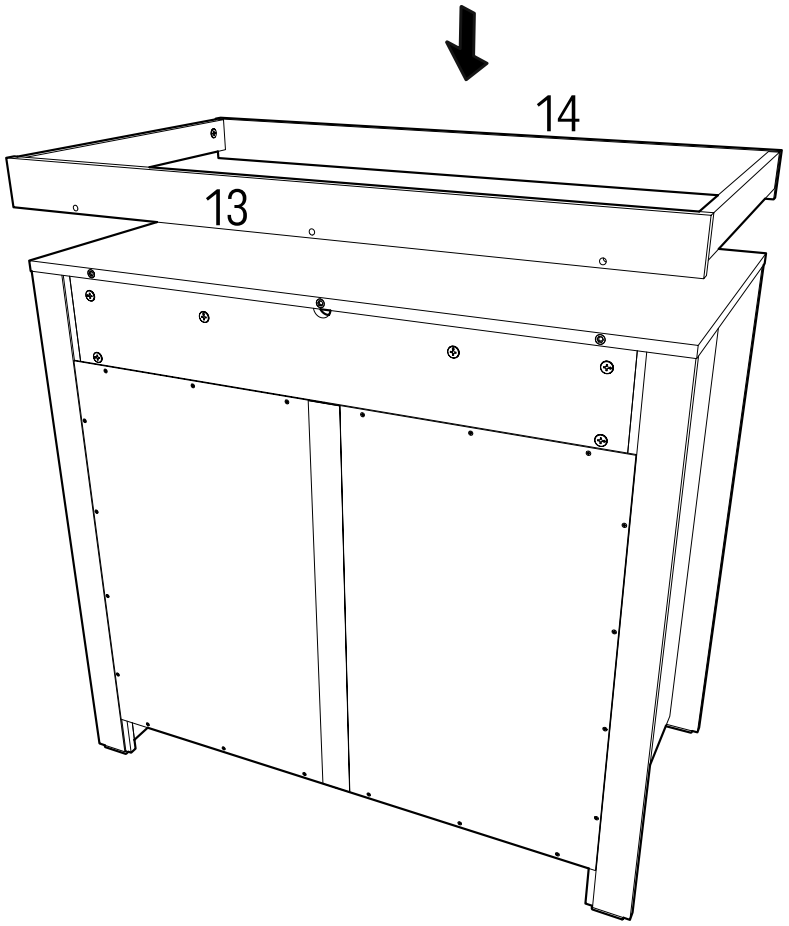


26

1005740



(M6 x 32) **x 3**

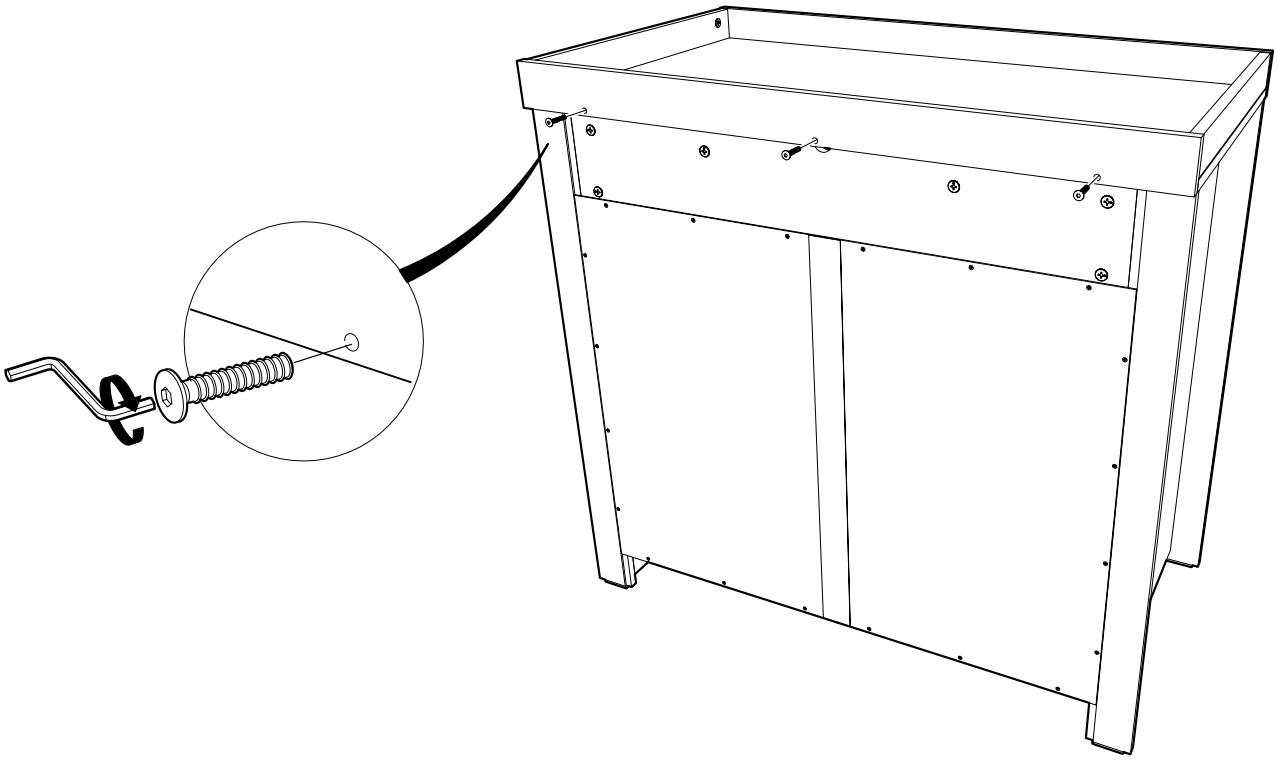


27

P.


1115207 (3 x 10) x 4

1001786 x 2

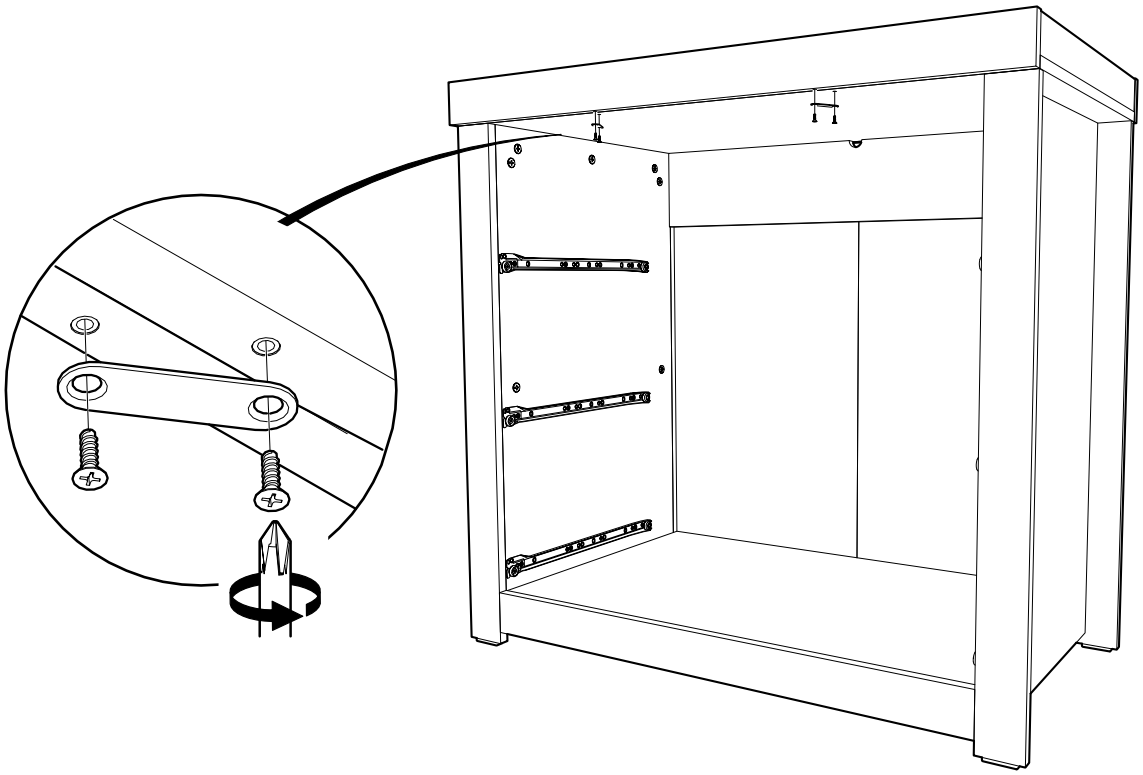


28


1000893 x 1

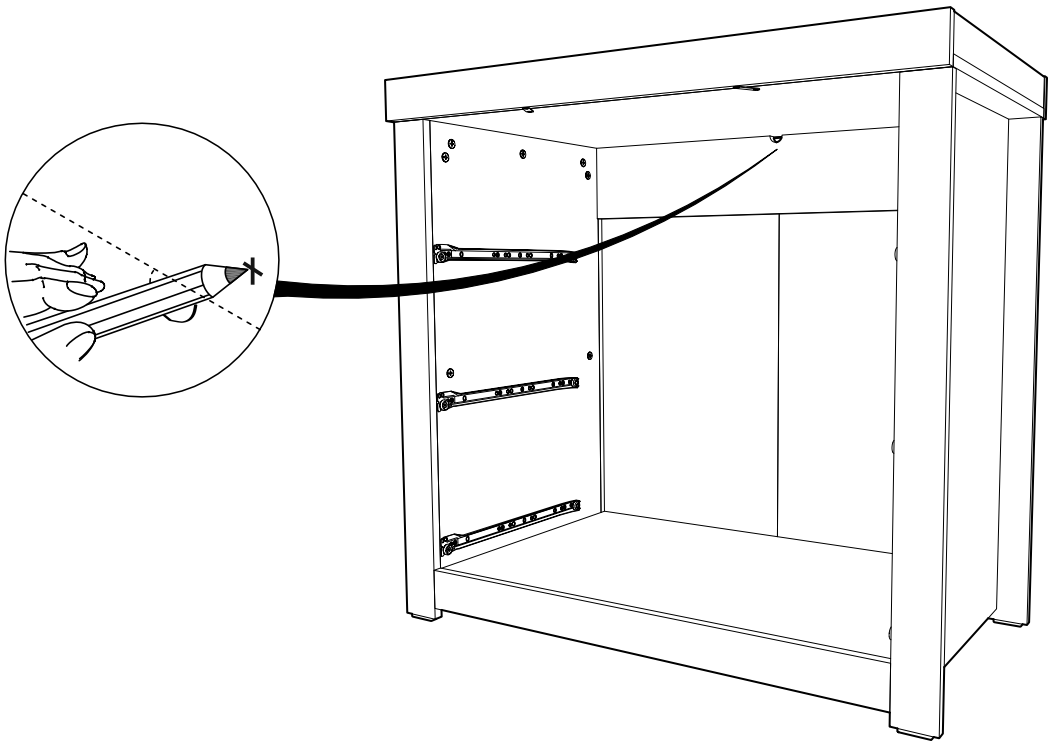

29

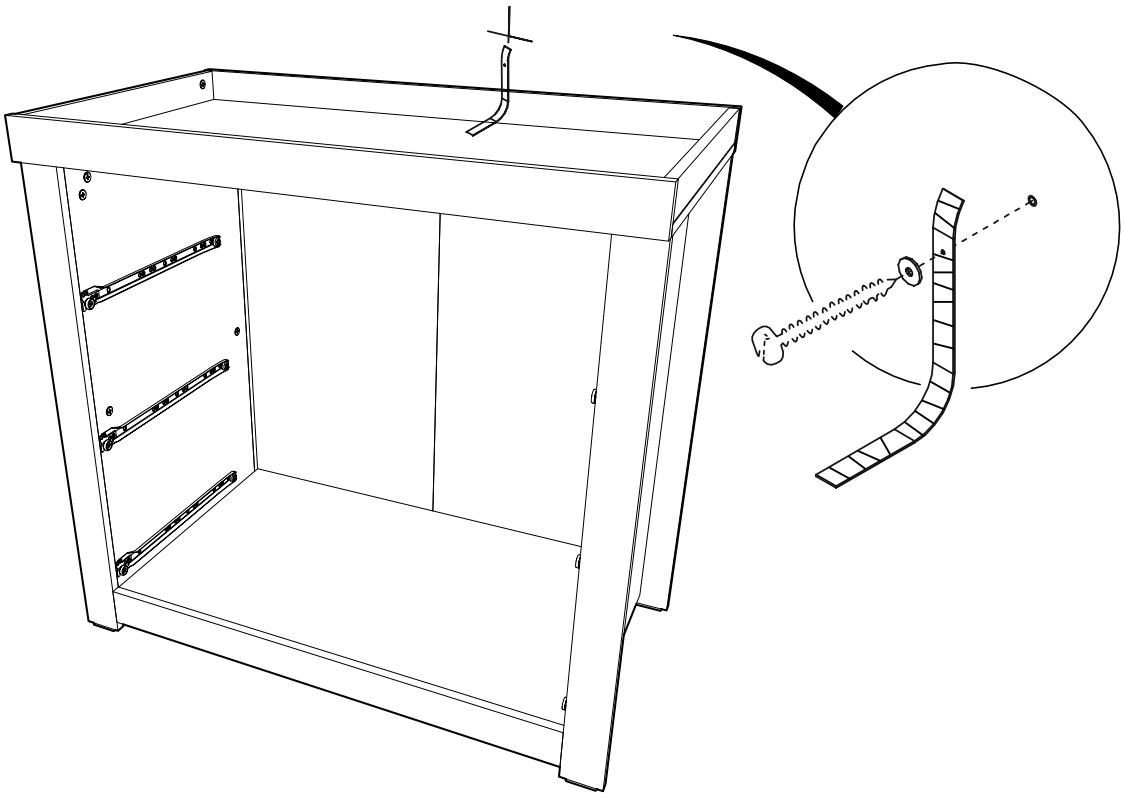


30

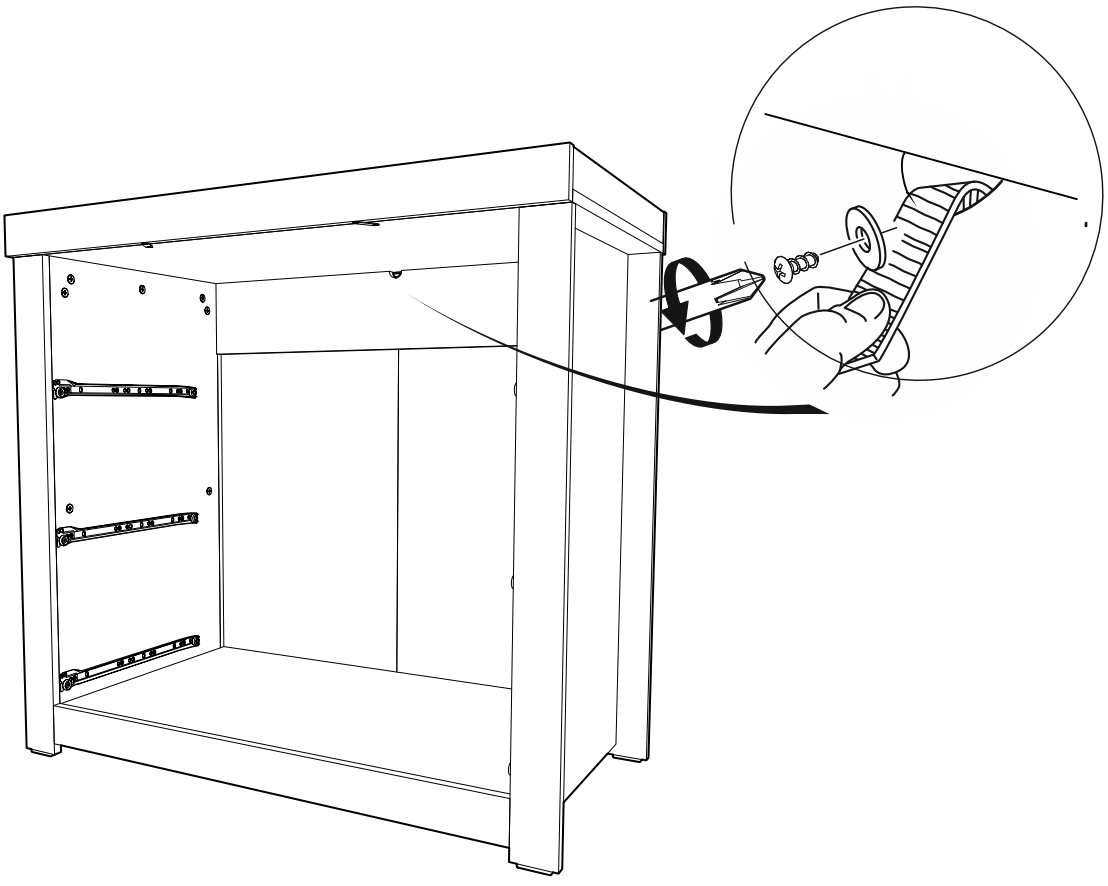

31

1005857 x 12


1005367 x 12

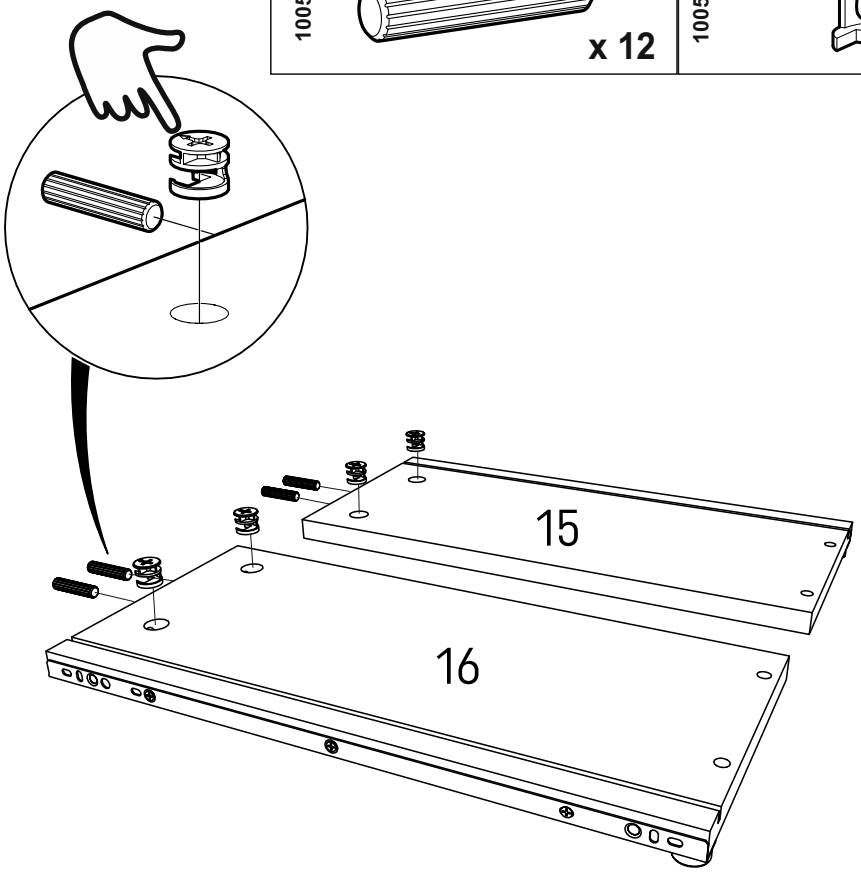

x 3

32


1005836 x 12

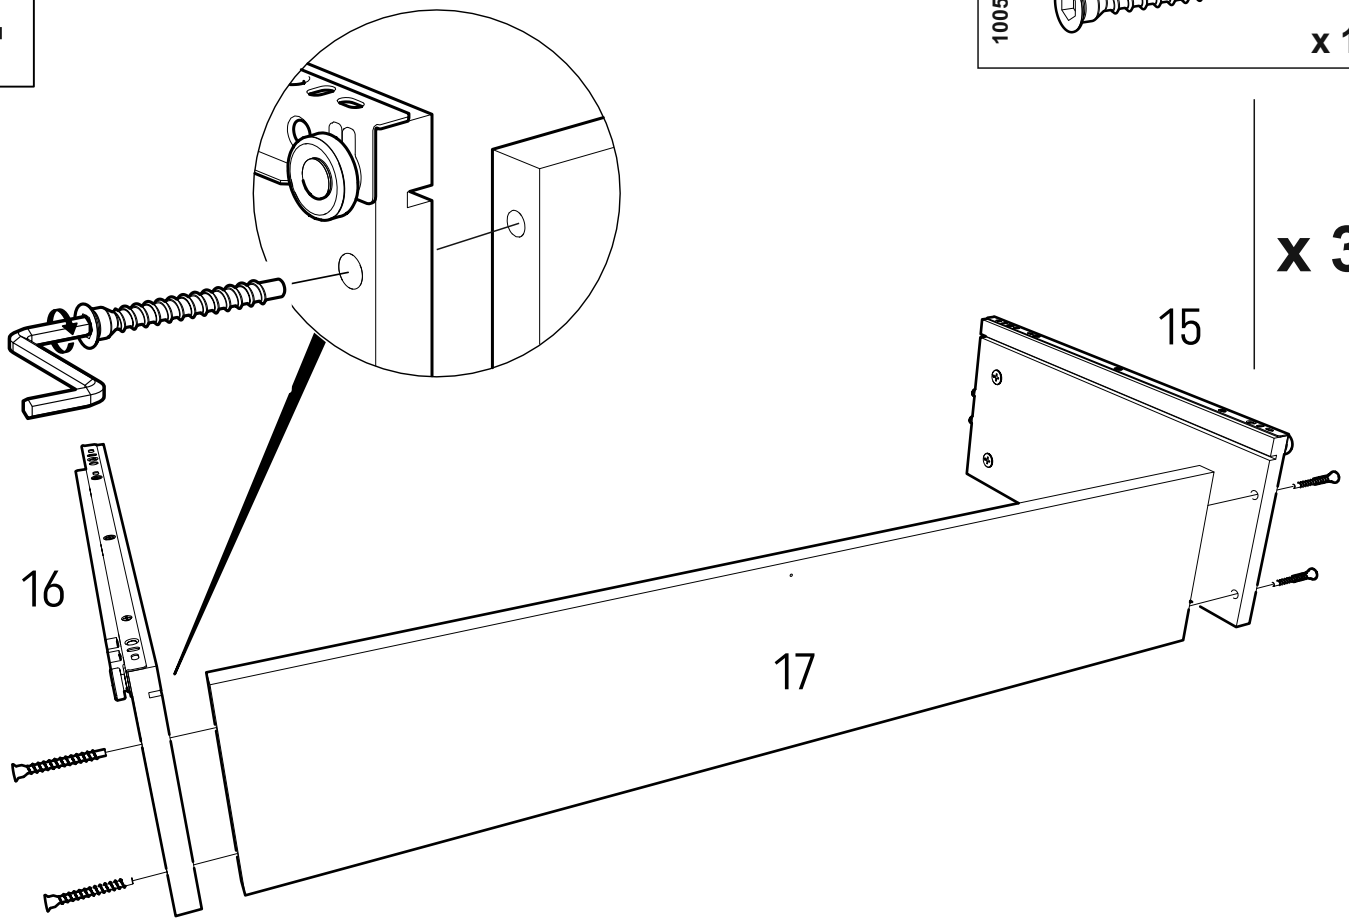


x 3

33

1006091

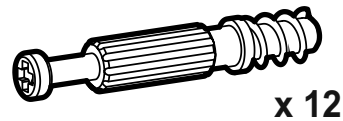


x 12

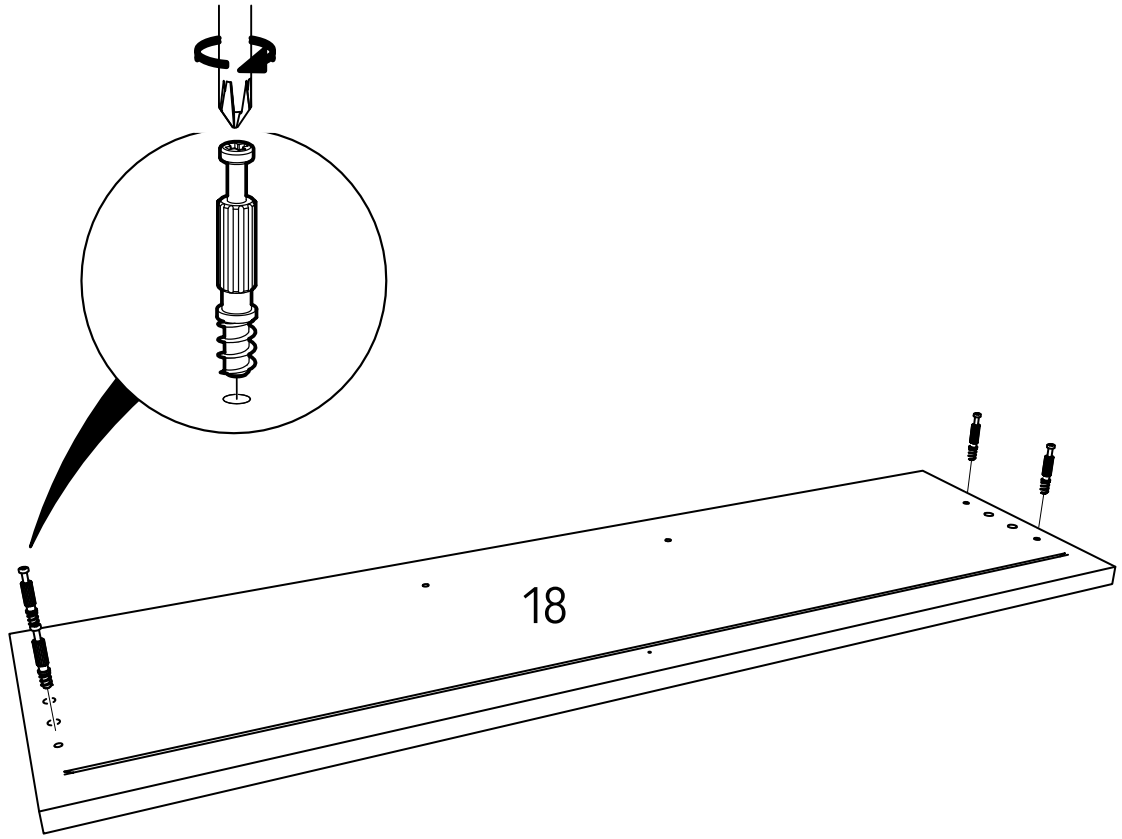


x 3

34

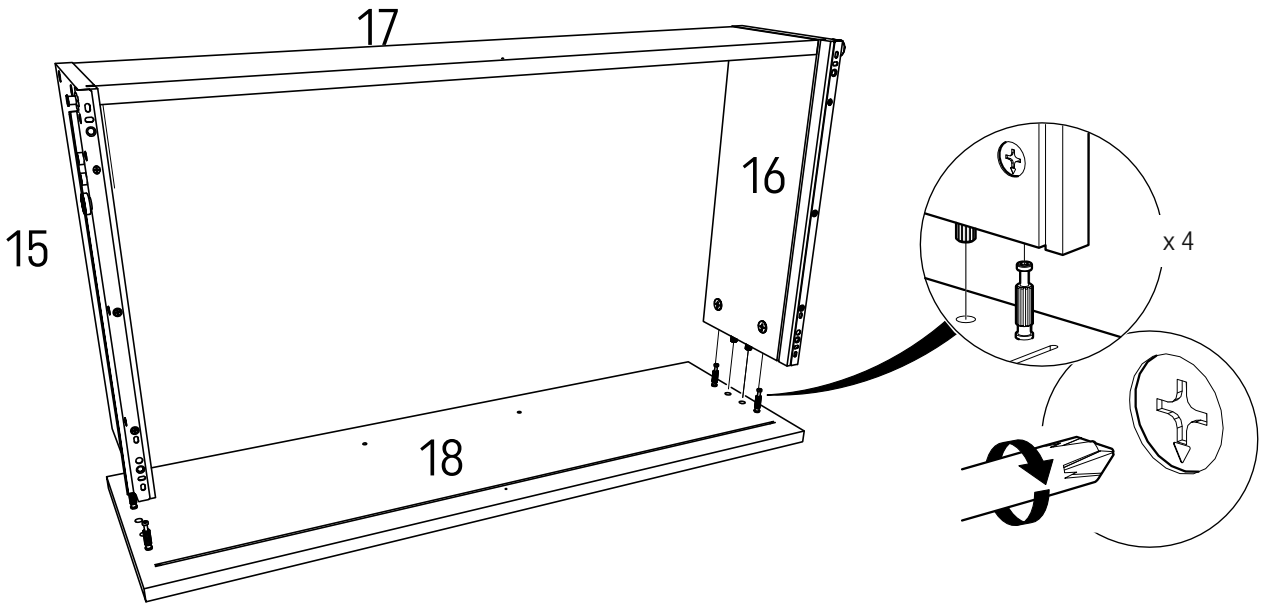

x 3

35

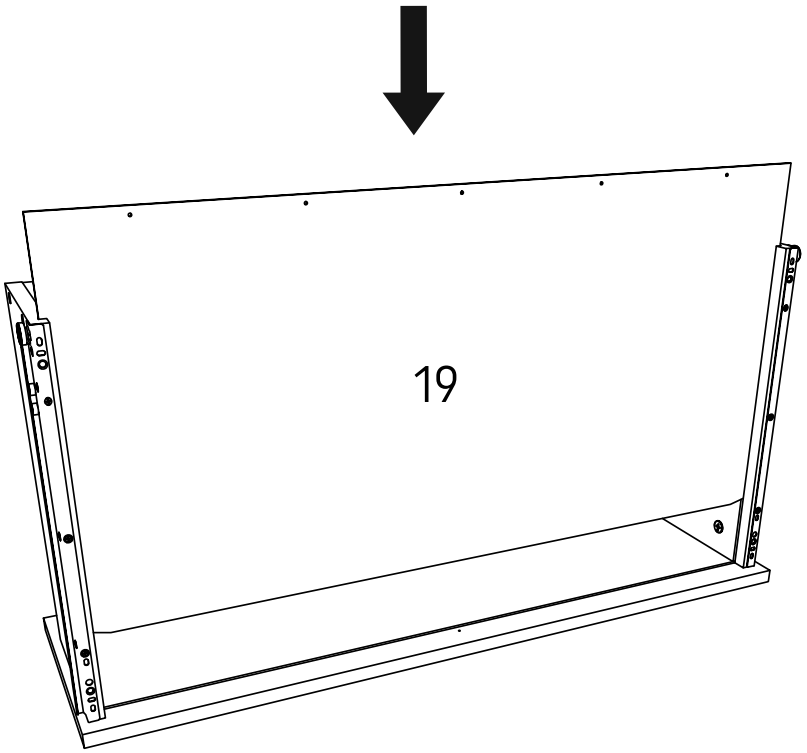


x 3

36

1006012



(3 x 16) x 15

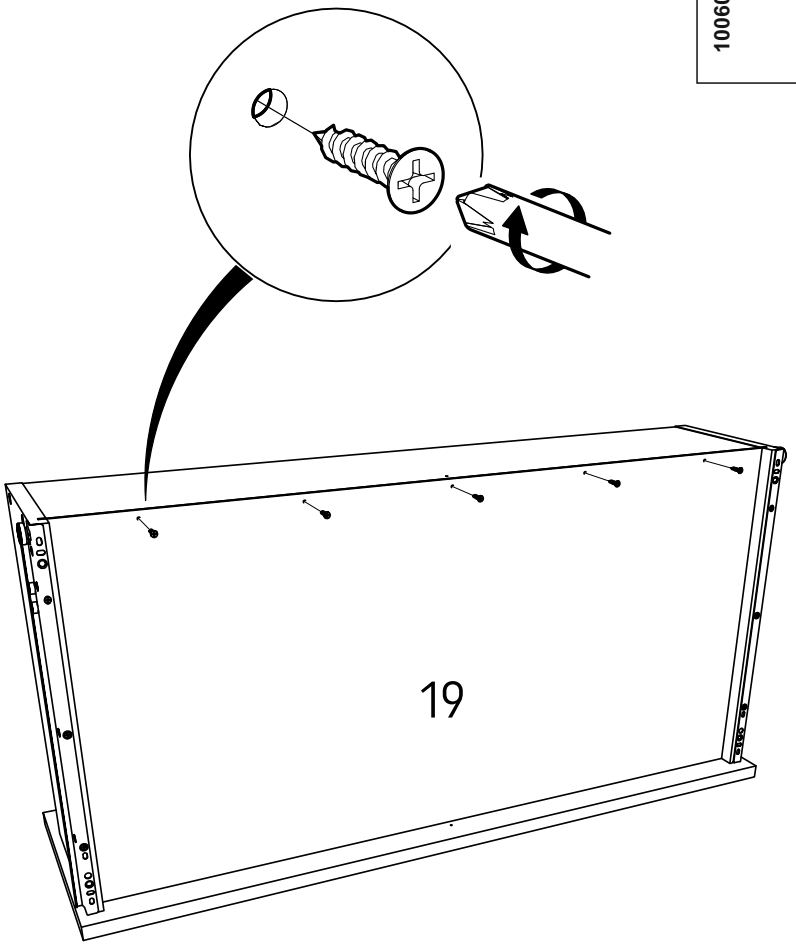


x 3

37

1002152 x 3

1006012 (3 x 16) x 6

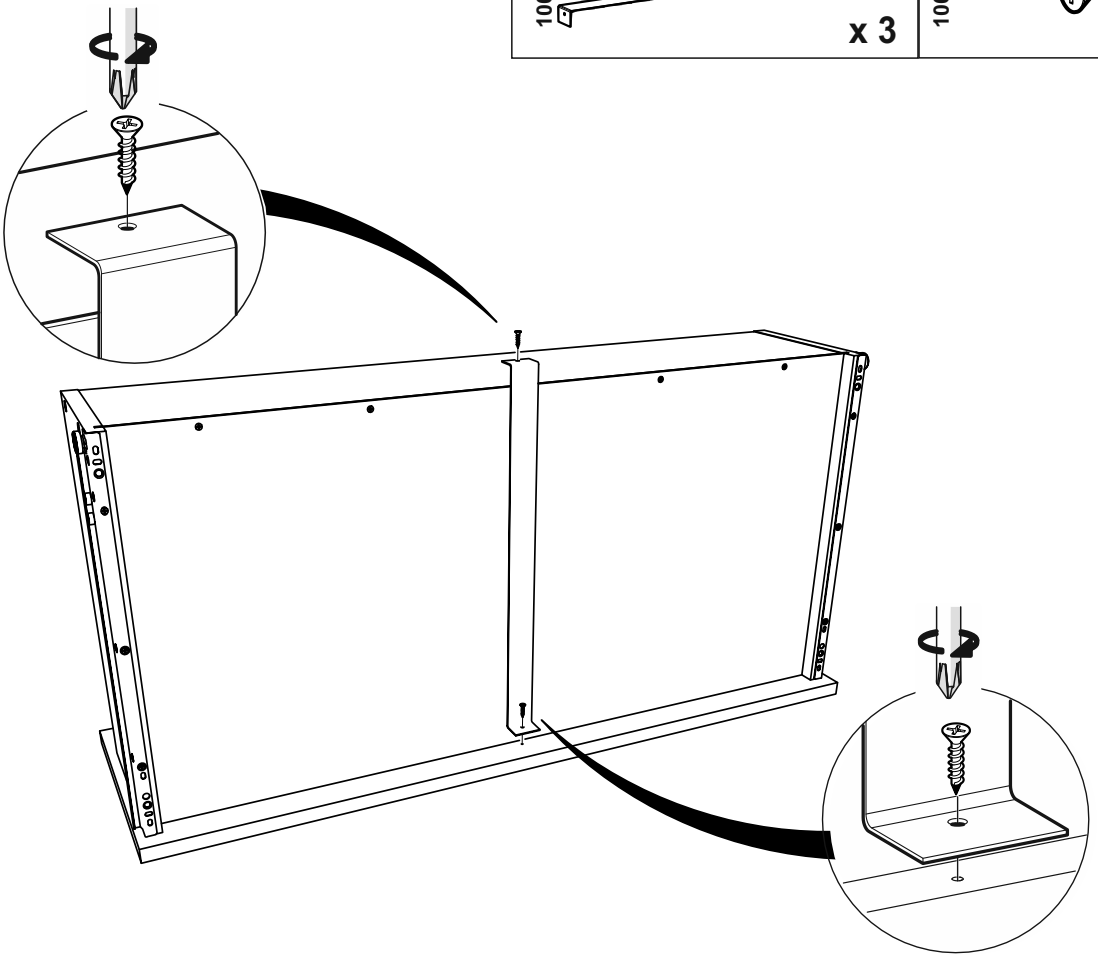


x 3

38


1133253 x 3


1006031 (4 x 22) x 6

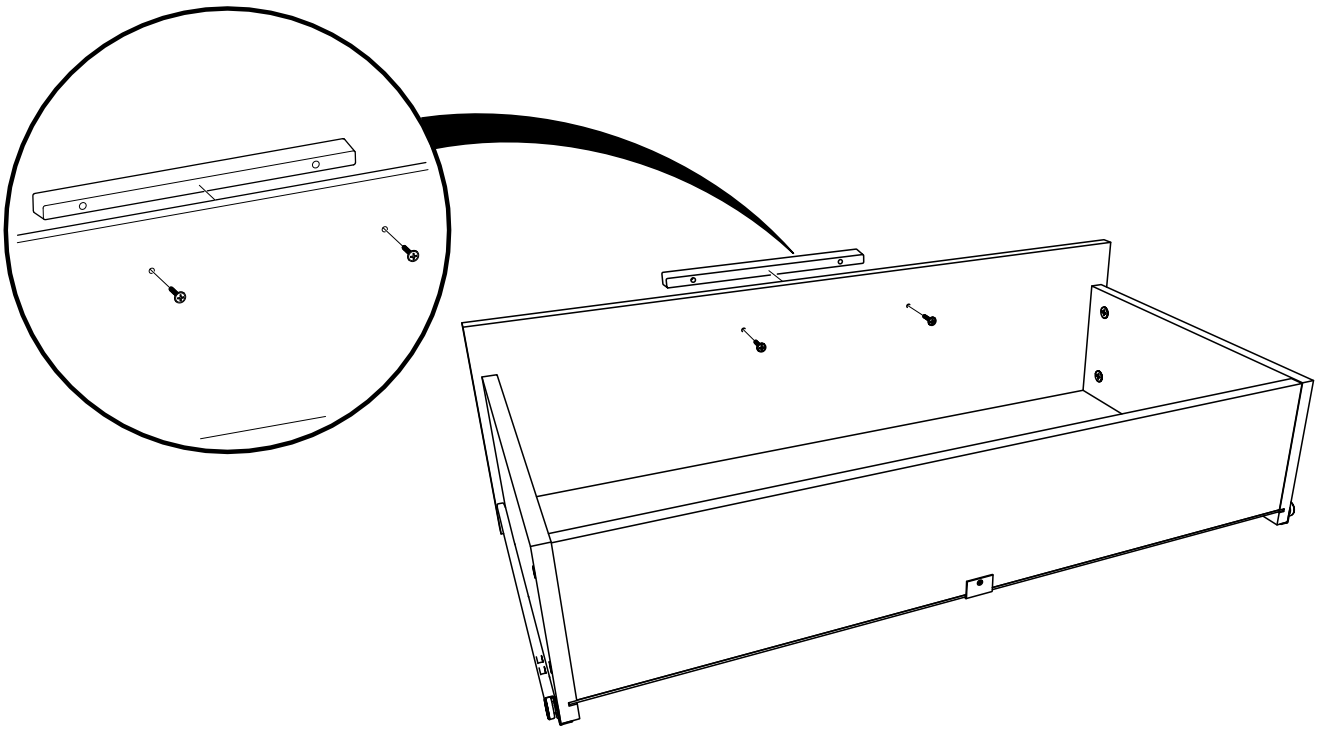

x 3

39

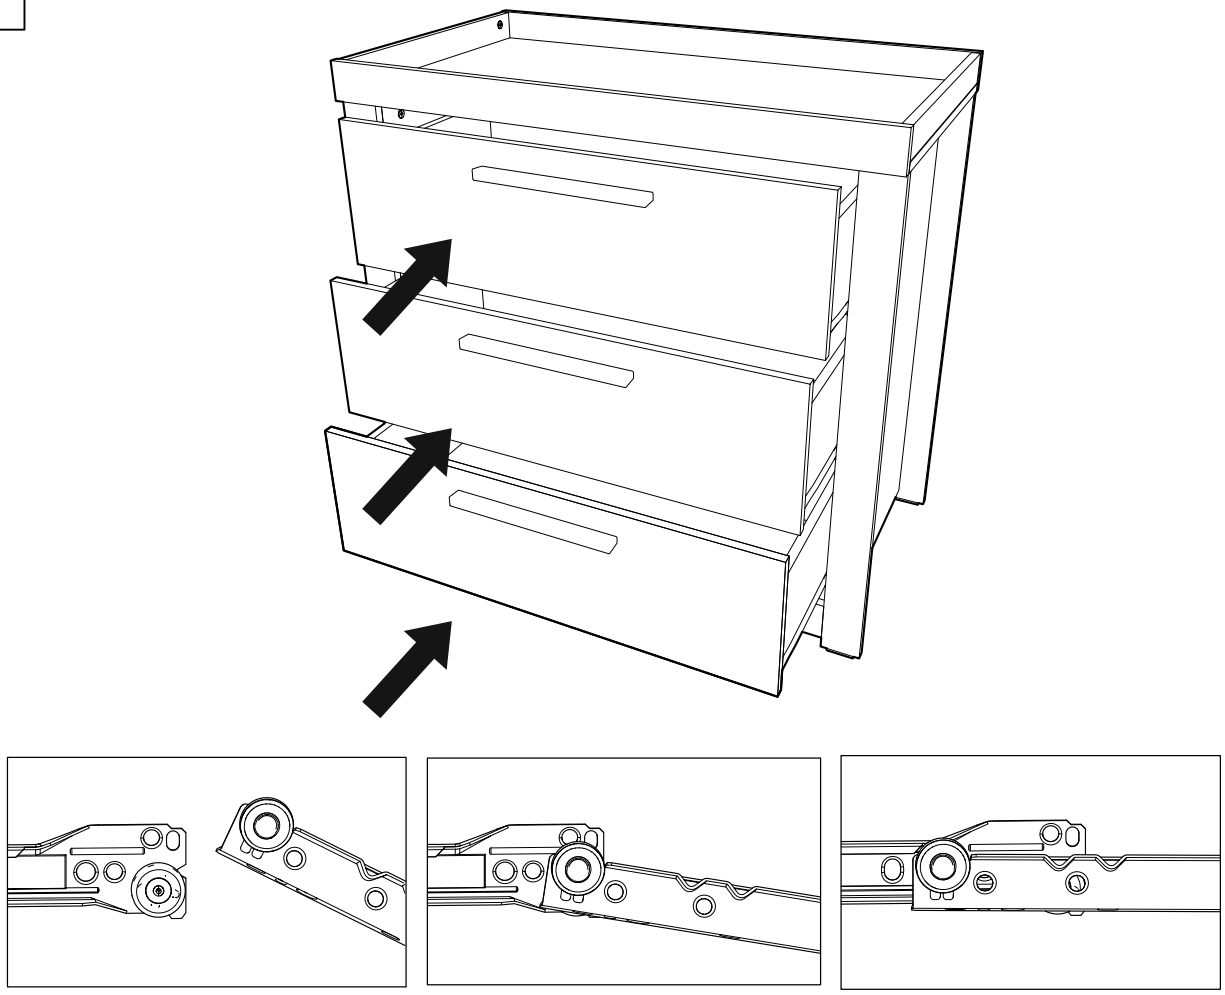

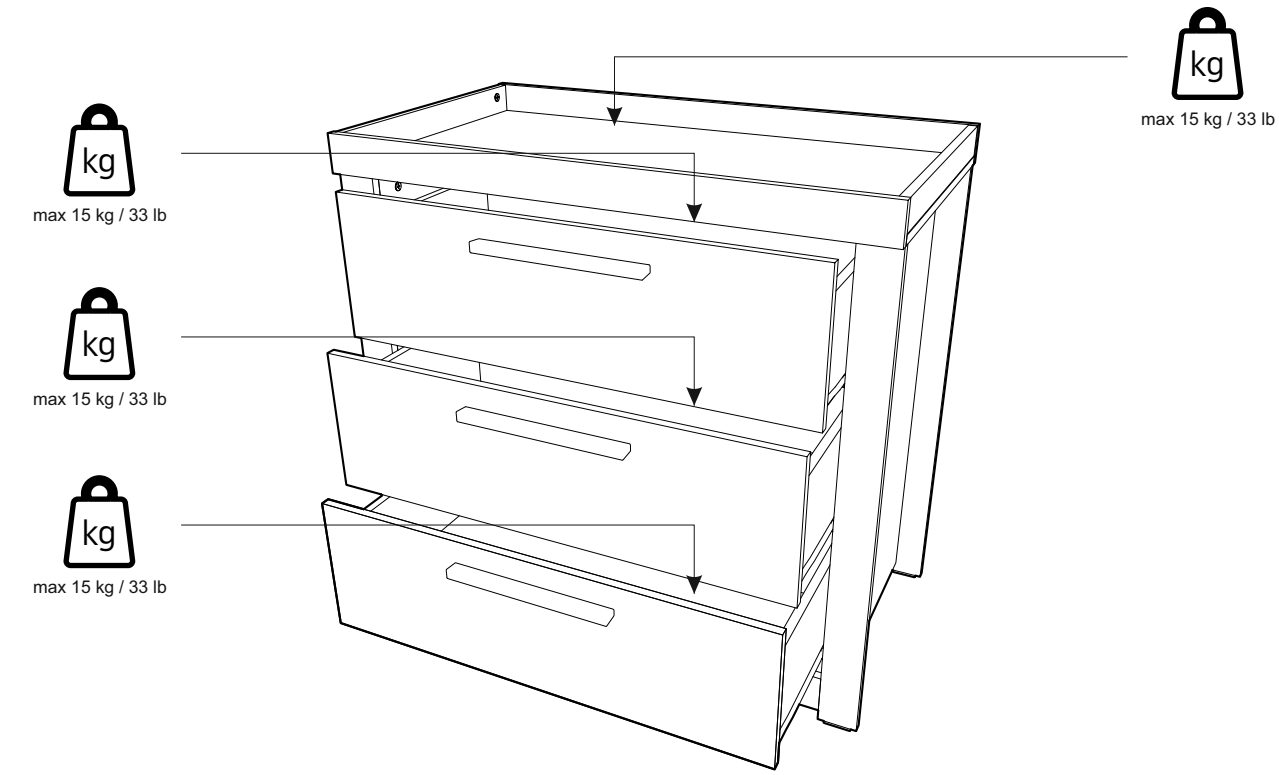
kg
max 15 kg / 33 lb
kg
max 15 kg / 33 lb
kg
max 15 kg / 33 lb
kg
max 15 kg / 33 lb

Safety

Warning: Do not leave your child unattended.
Always use the wall attachment strap provided.
All assembly fixings should always be tightened properly. Care should be taken that no screws are loose because a child could trap parts of their body, or clothing (e.g. strings, necklaces, ribbons, dummies, etc.) which could pose a risk of strangulation.
Be aware of the risks of open fires and other such sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the dresser.
Suitable for use with a changing mat of max size 43.5 x 75.8 cm
The changing area is suitable for use up to 12 months old or 11kg in weight.
Do not use the dresser if any of the parts are broken, torn or missing.
Any additional or replacement parts can only be obtained from the manufacturer or the distributor.
ensure there are no small parts fittings are left after assembly as these can be a chocking hazard.
This product conforms to: EN 12221-1:2008+A1:2013

Maintenance

Take care when handling or moving the furniture. Careless handling may cause damage.
Regularly check that all fixings are tightened and that there are no broken or damaged parts.

Cleaning

Your dresser can be cleaned by wiping with a damp cloth and drying with a soft clean cloth.Do not use abrasives, bleach, alcohol or ammonia based household polishes.

Little Acorns
01952460696 and address:
The Malthouse,
Sheriffhales,Shifnal.
Shropshire TF11 8RD