



Flair Furniture

Explorer Playhouse Bed Small Double

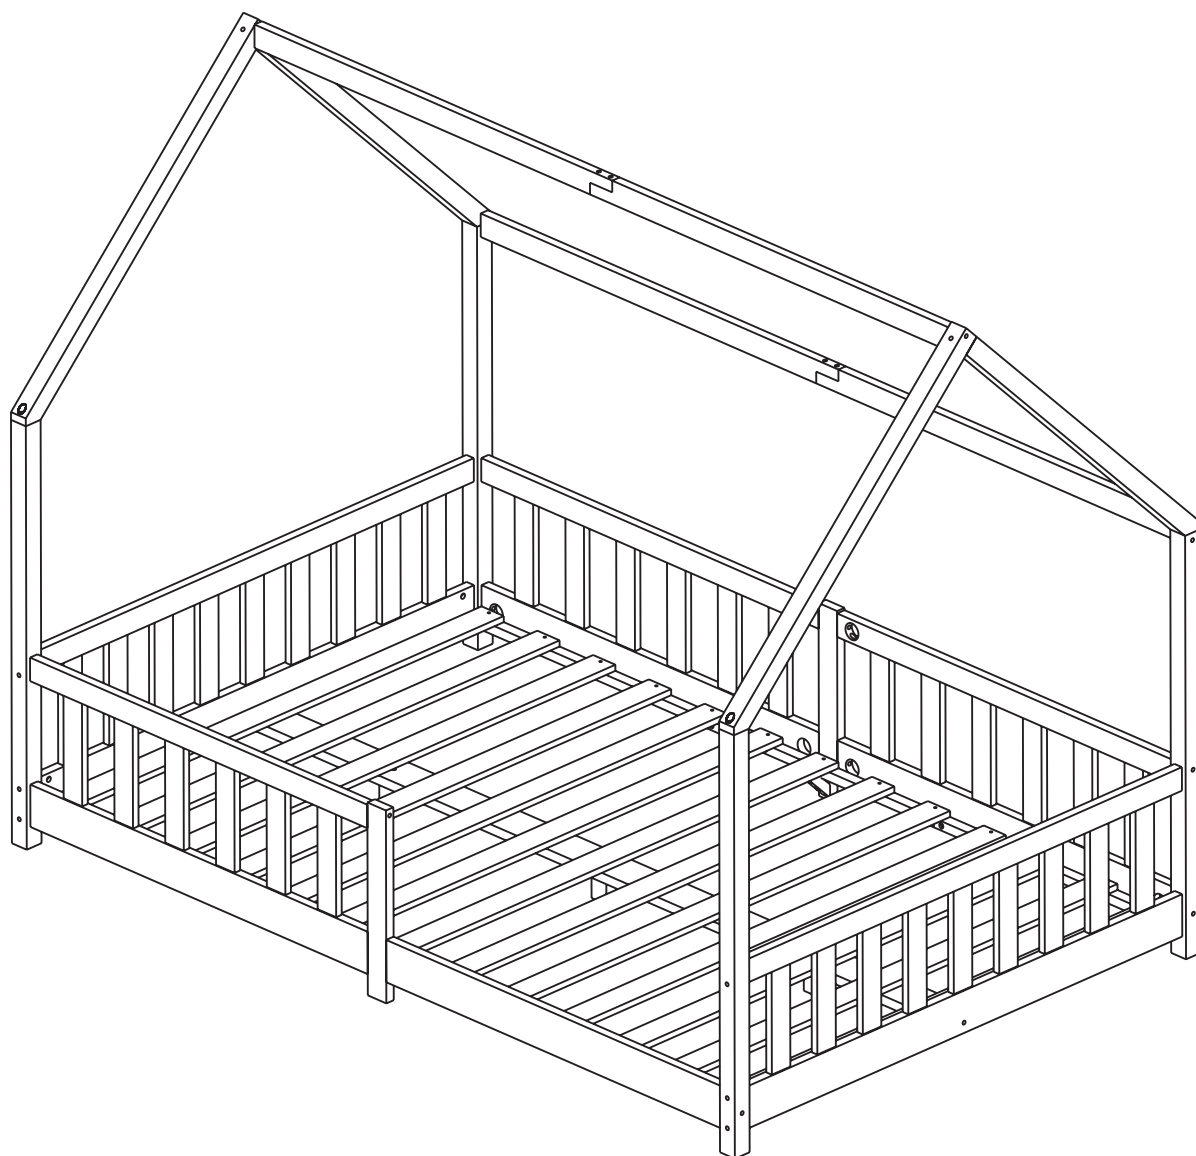


READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE










NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.

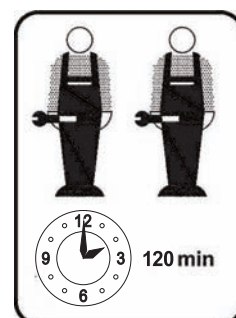

EXPLODED VIEW

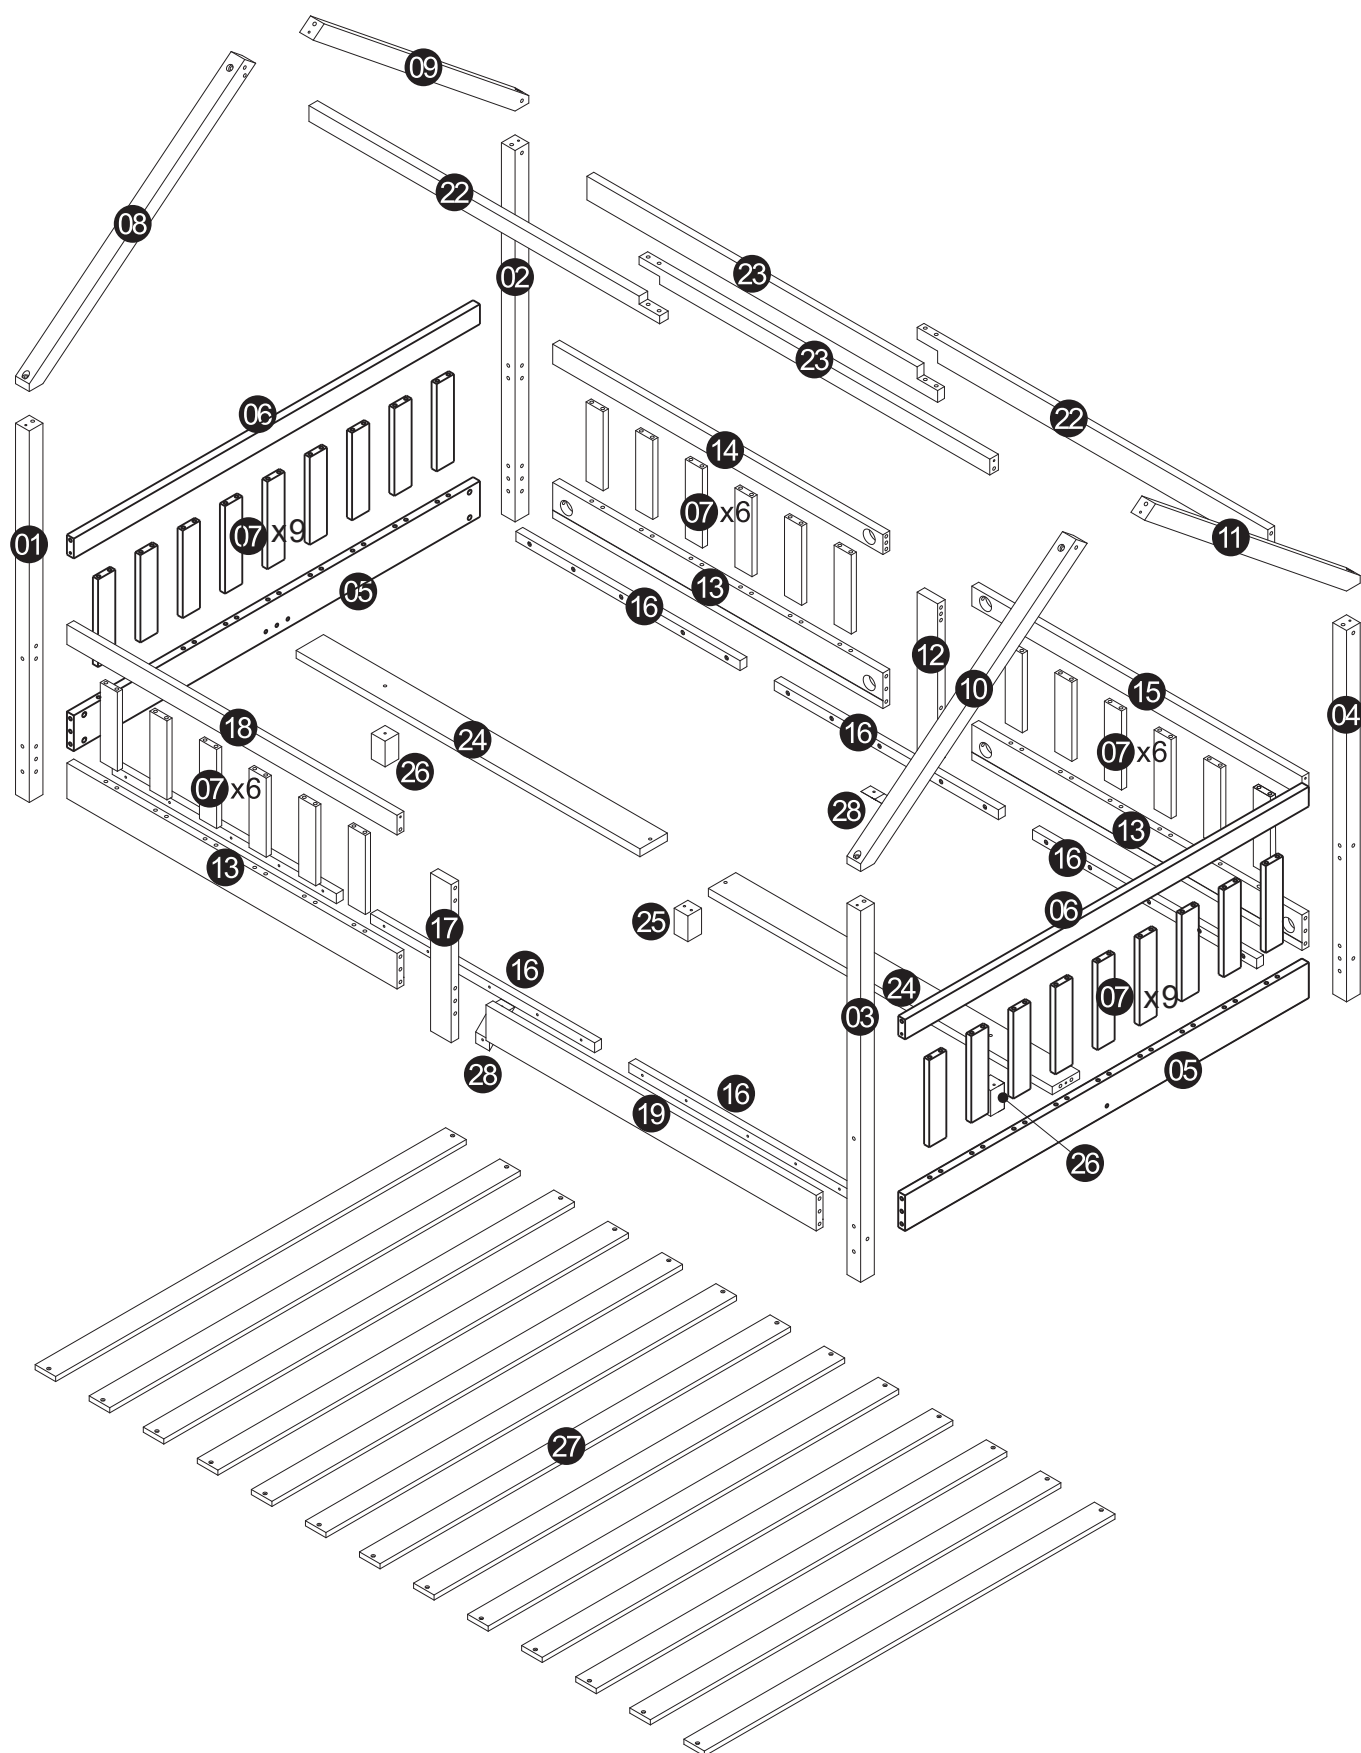

HARDWARE

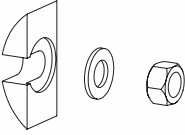

A x12  M6x80	B x8  	C x190  Ø8x30	D x13  Ø6x80	E x4  Ø6x70
F x3  M6x140	G x10  	H x1  Ø6x100	J x60  Ø4x30	L x4 
M x4  M6x40	N x6  Ø7x50	P x2  	Q x2  	R x2 

TOOLS



Ruler - Use this ruler to help correctly identify the screws



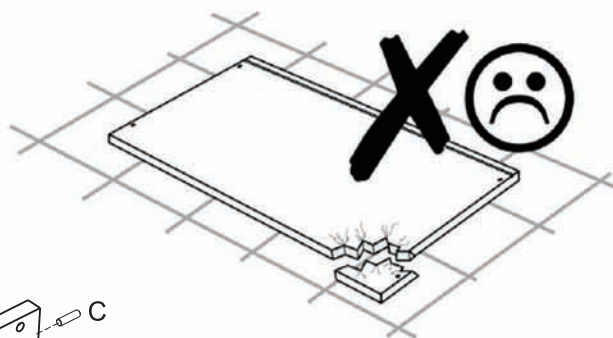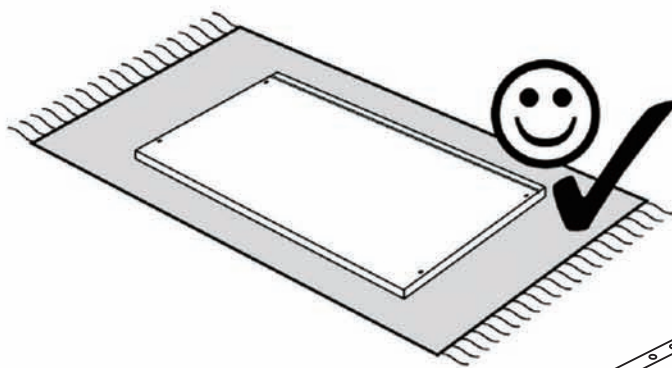

C x42




Ø8x30

x2



x2

x3




x2

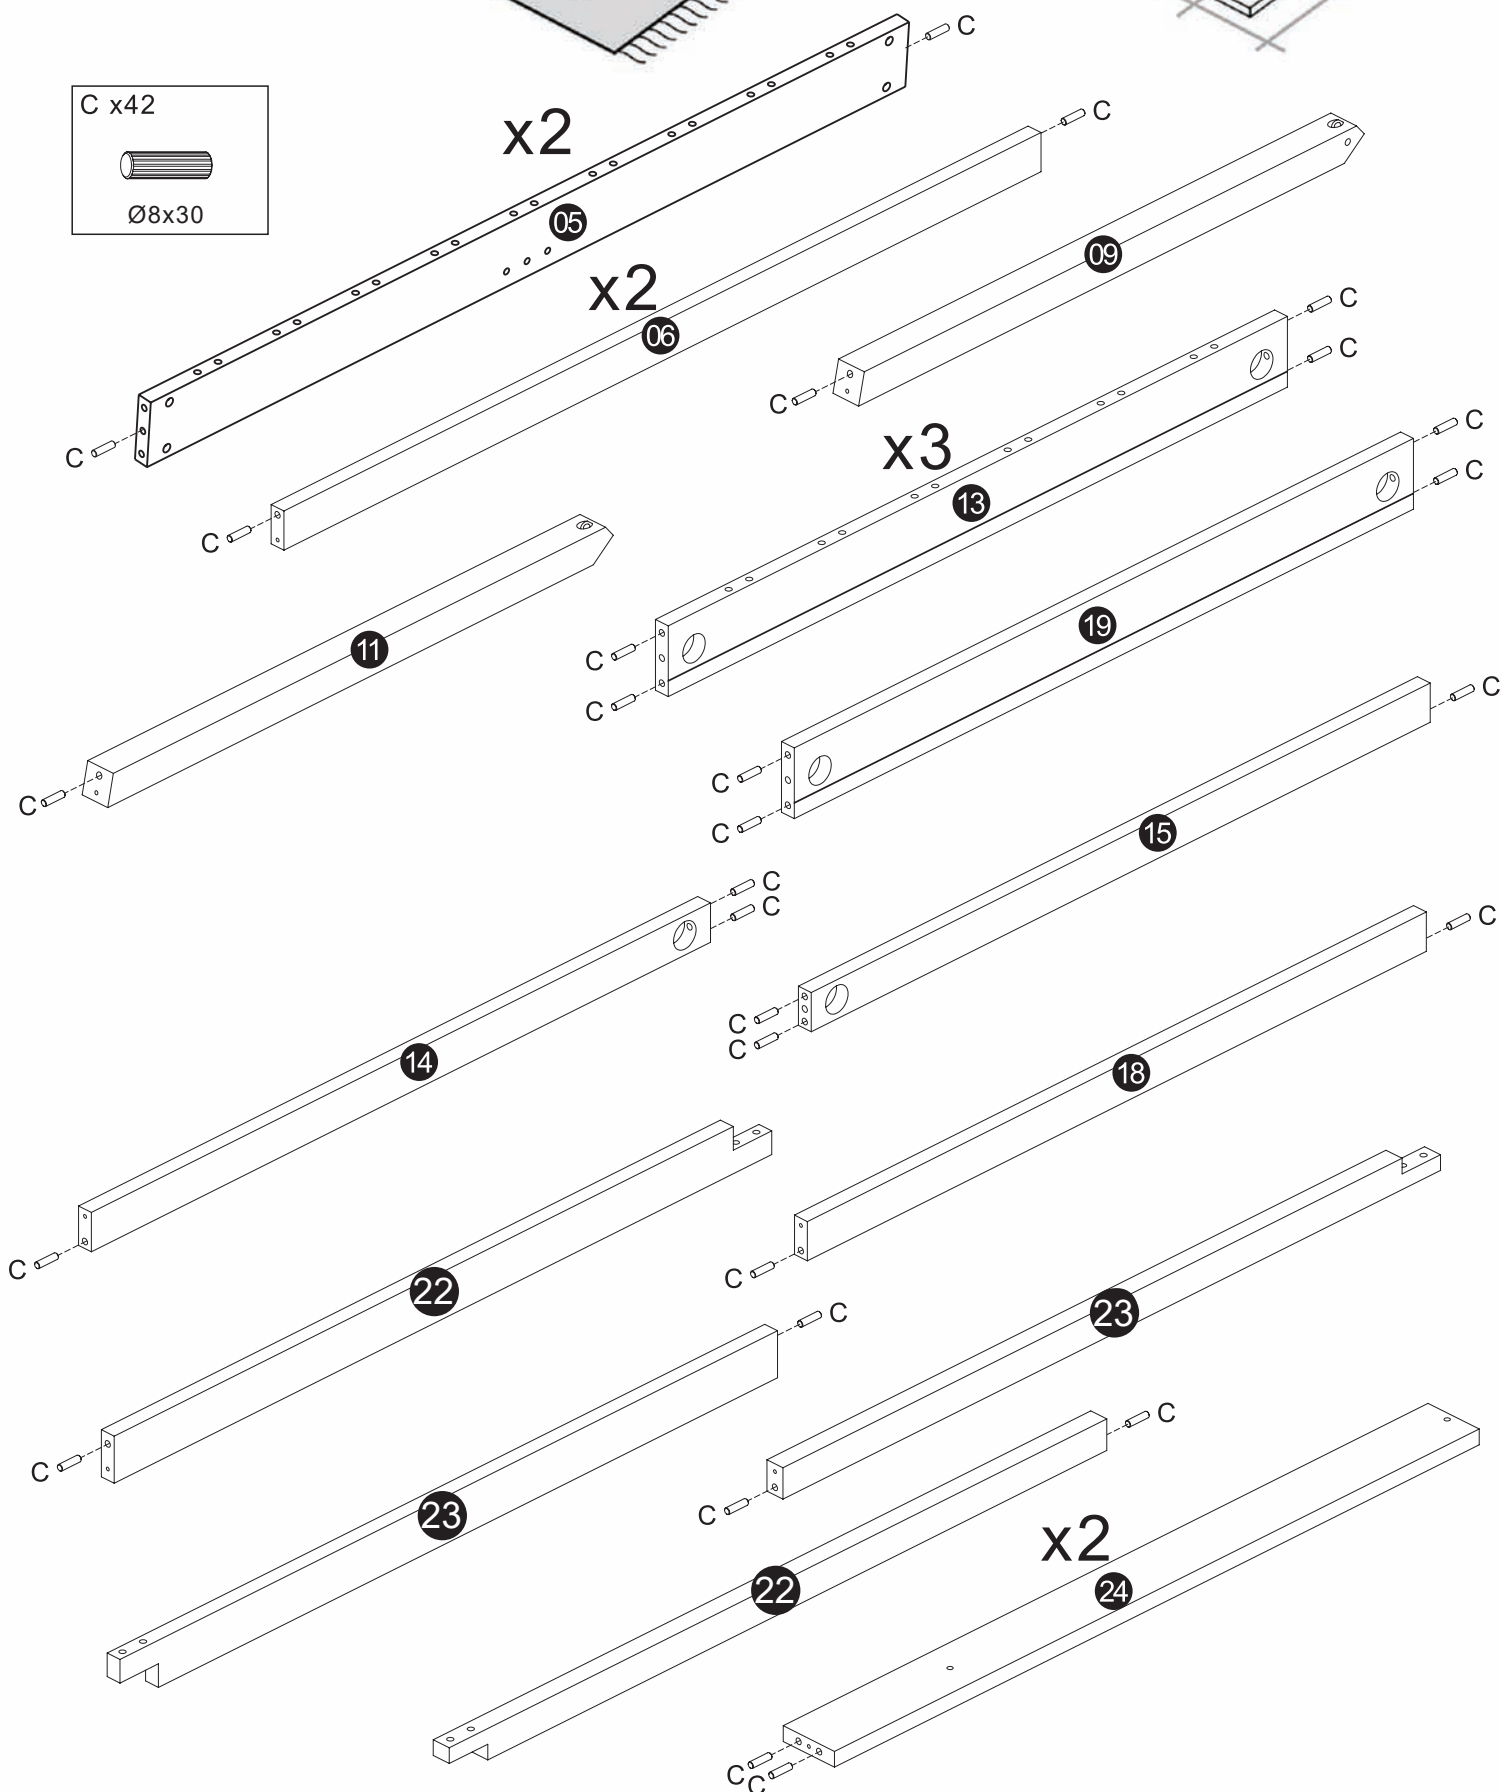

02

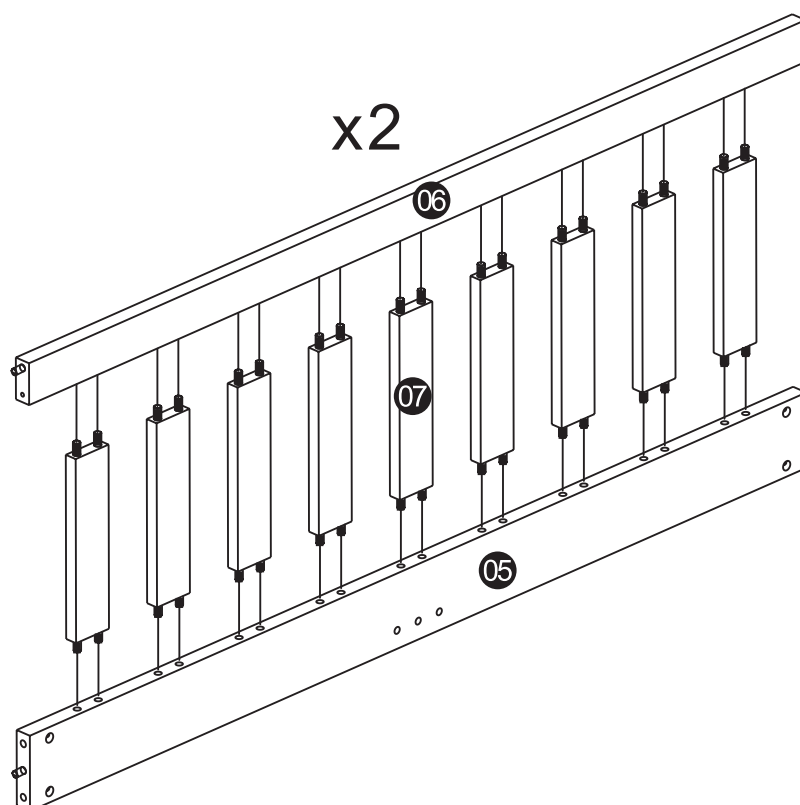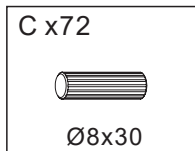


03

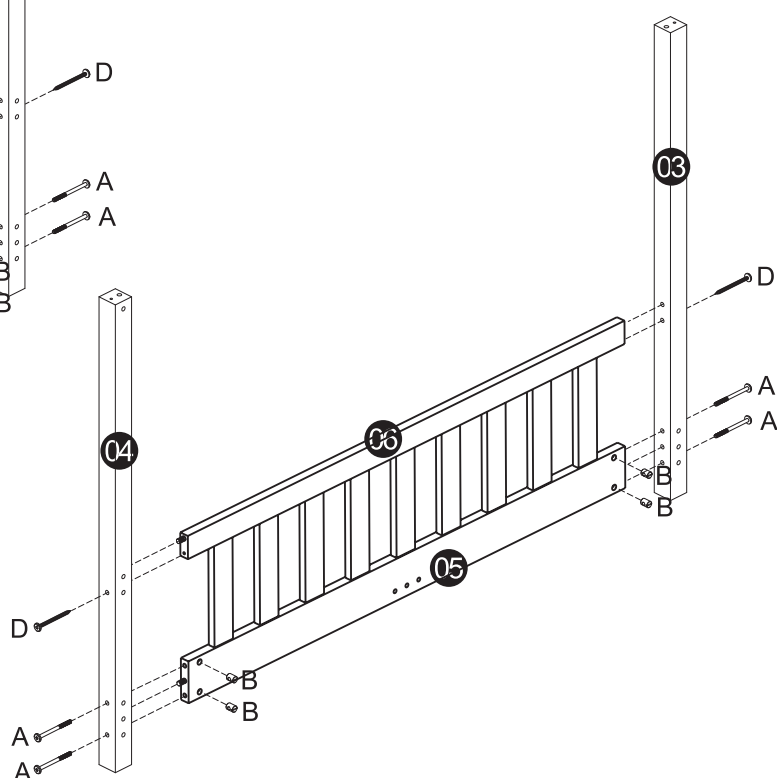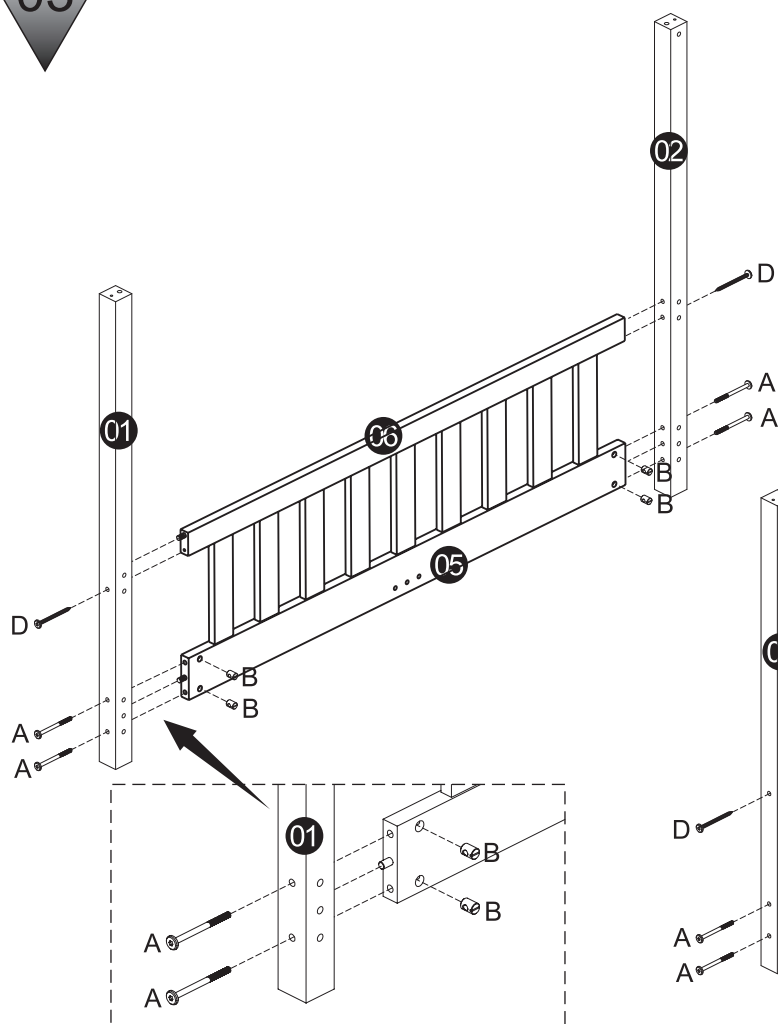
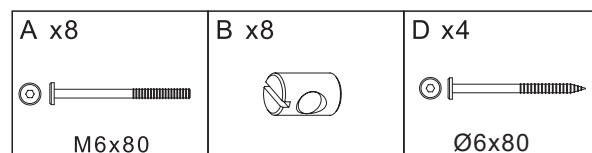


04

D x2



Ø6x80

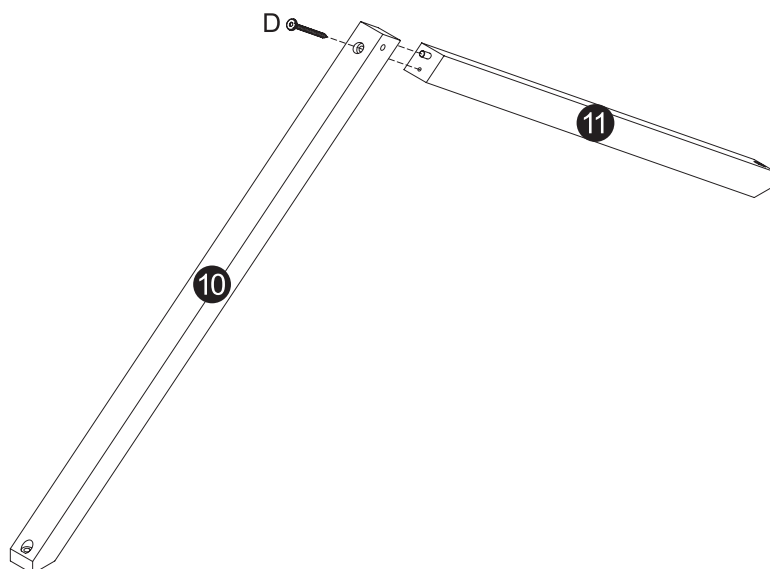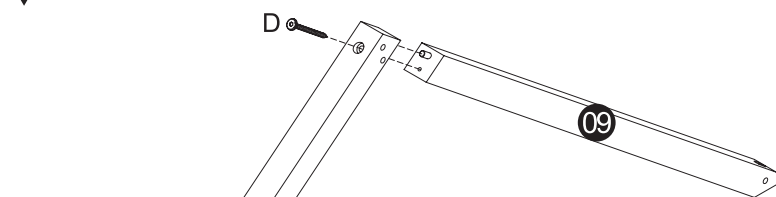


05

C x4






Ø8x30


E x4




Ø6x70

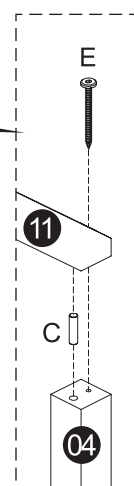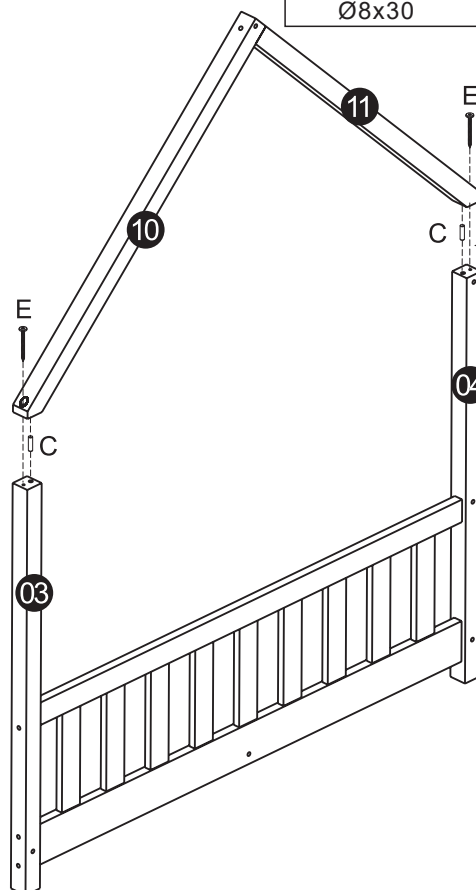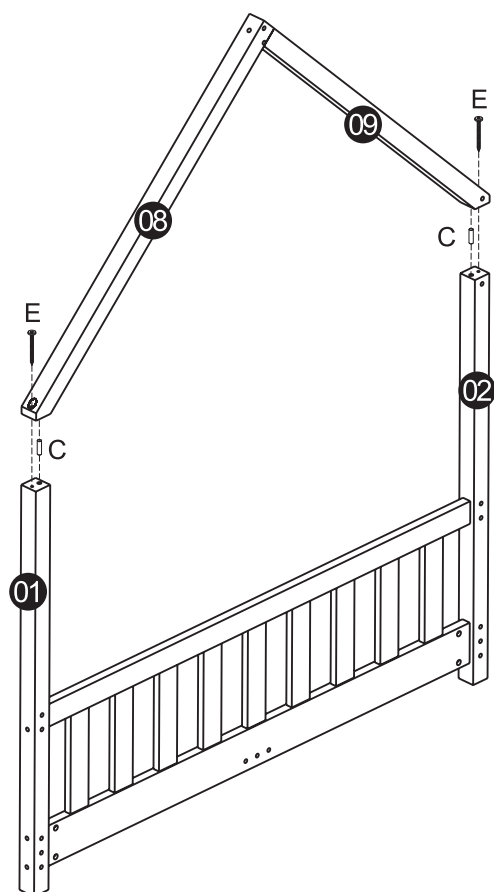

06

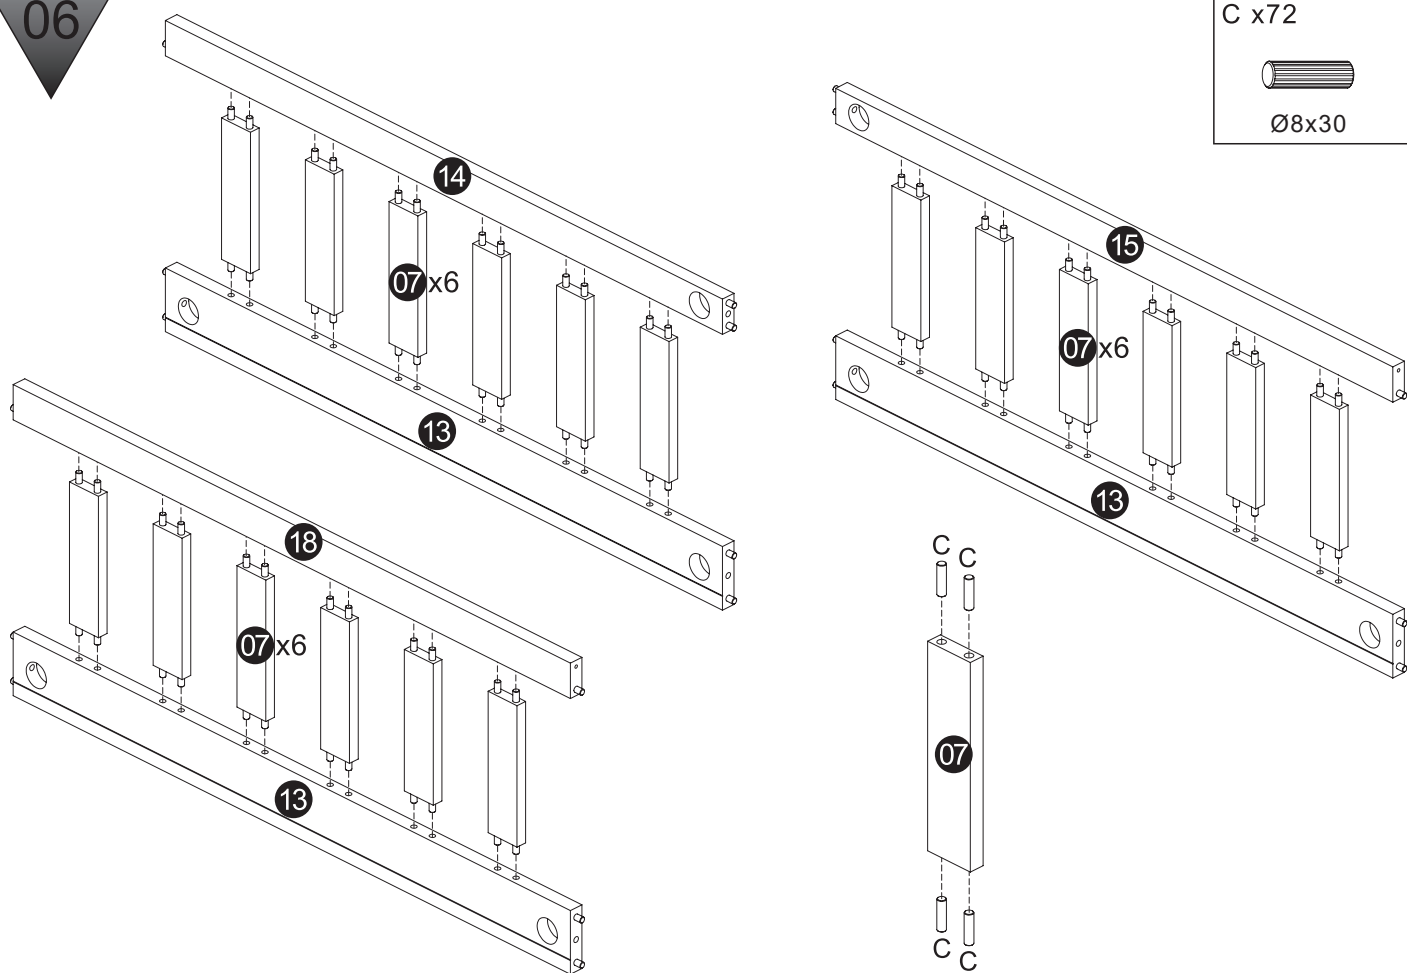

07

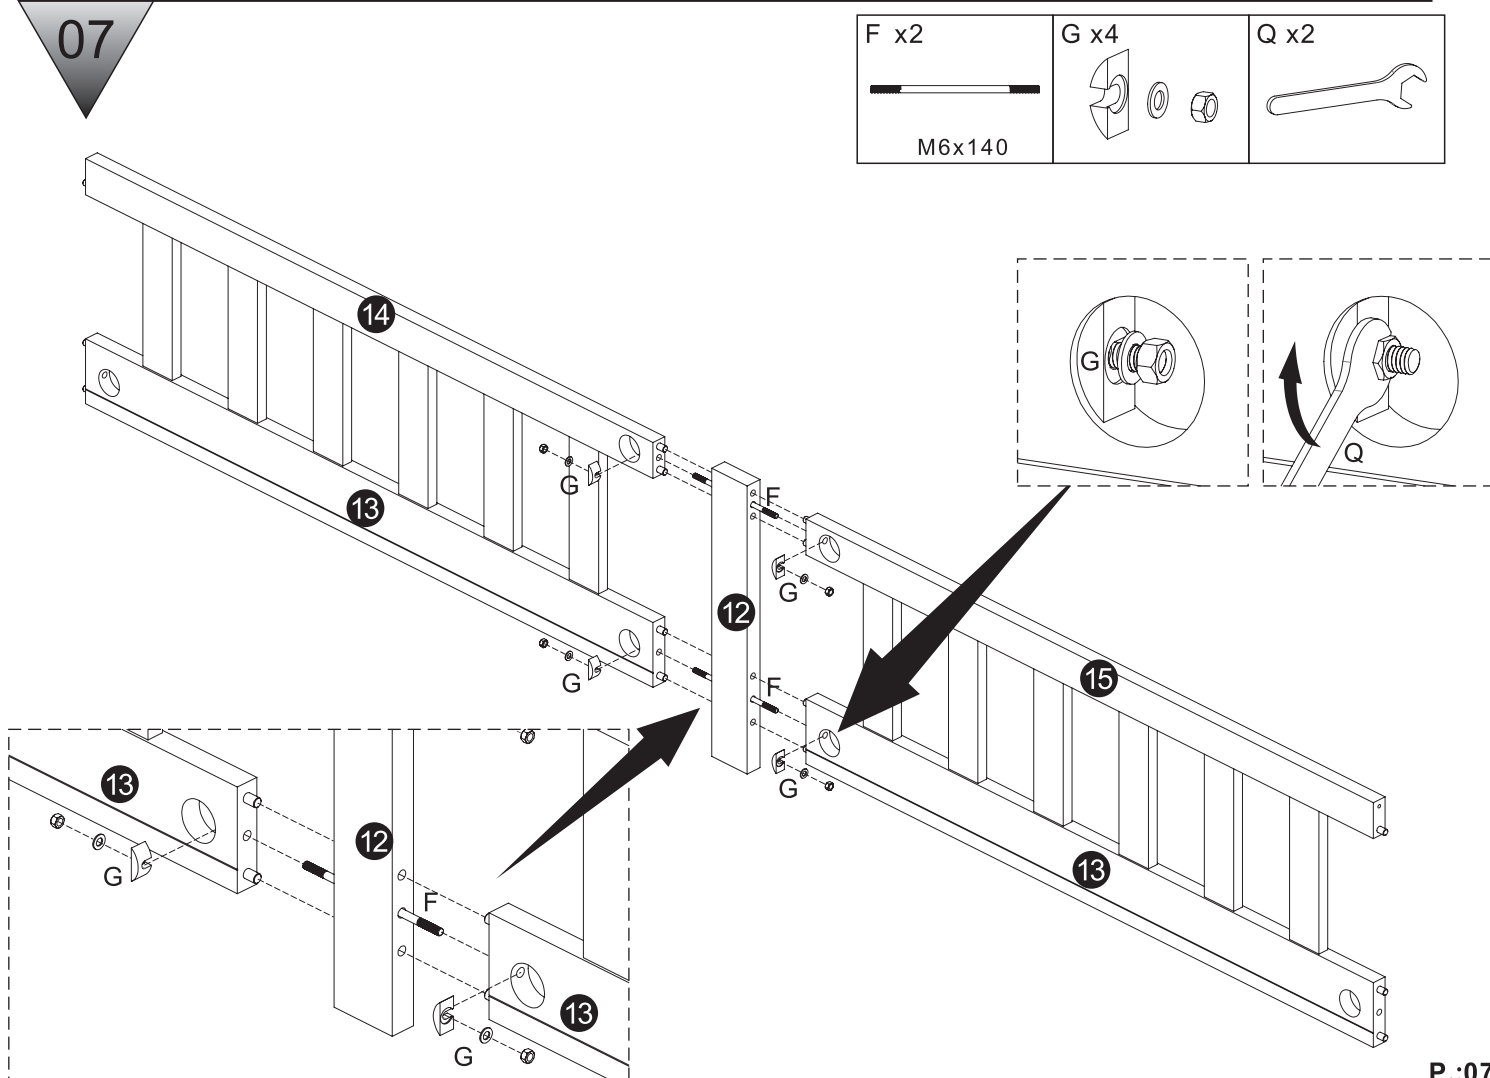


08

J x15



Ø4x30

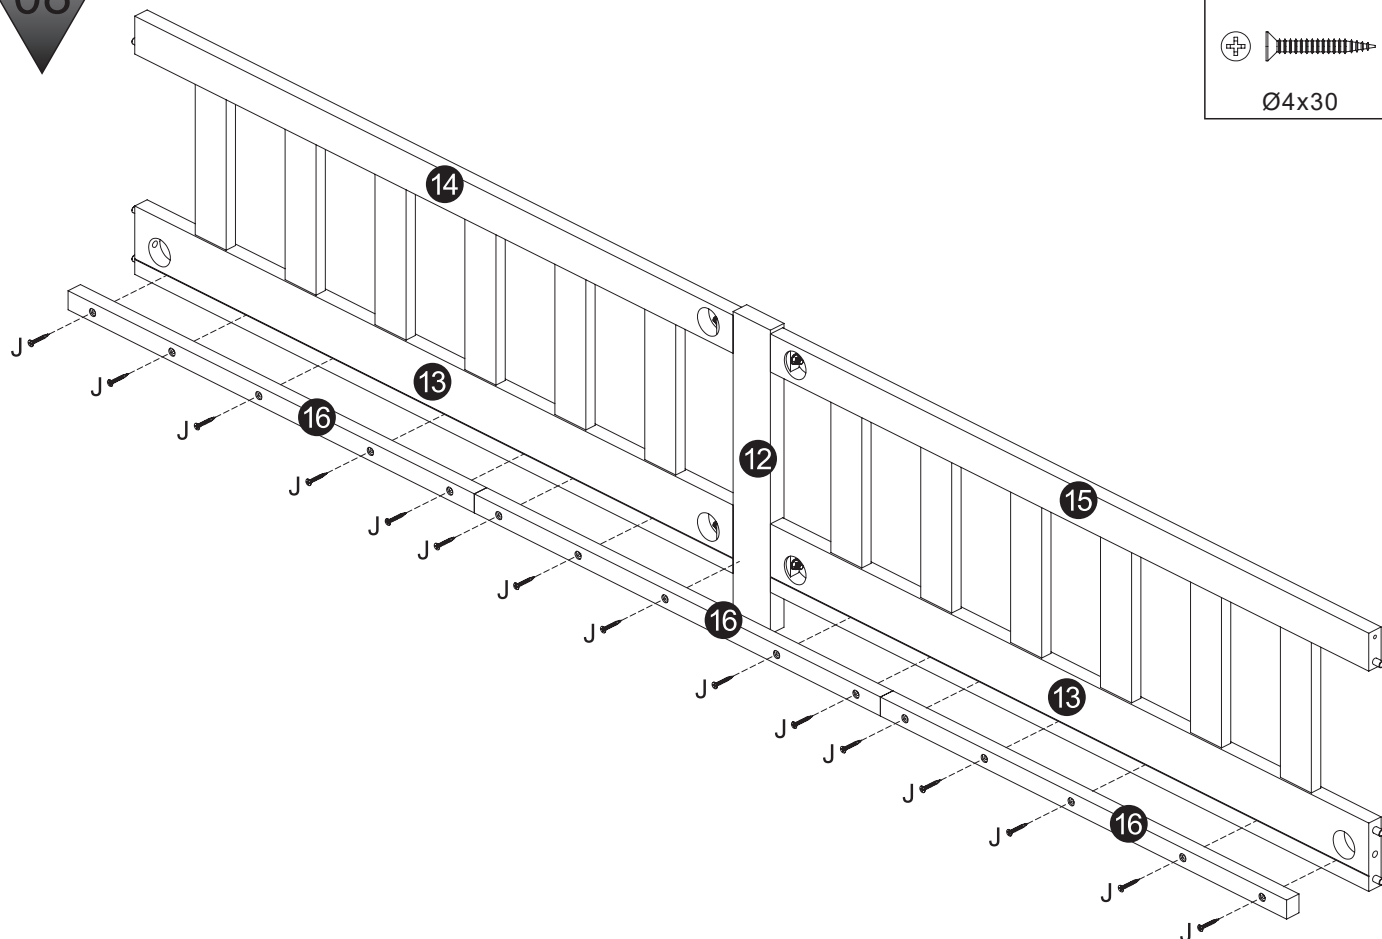


09

F x1



M6x140

G x2




H x1



Ø6x100

Q x2

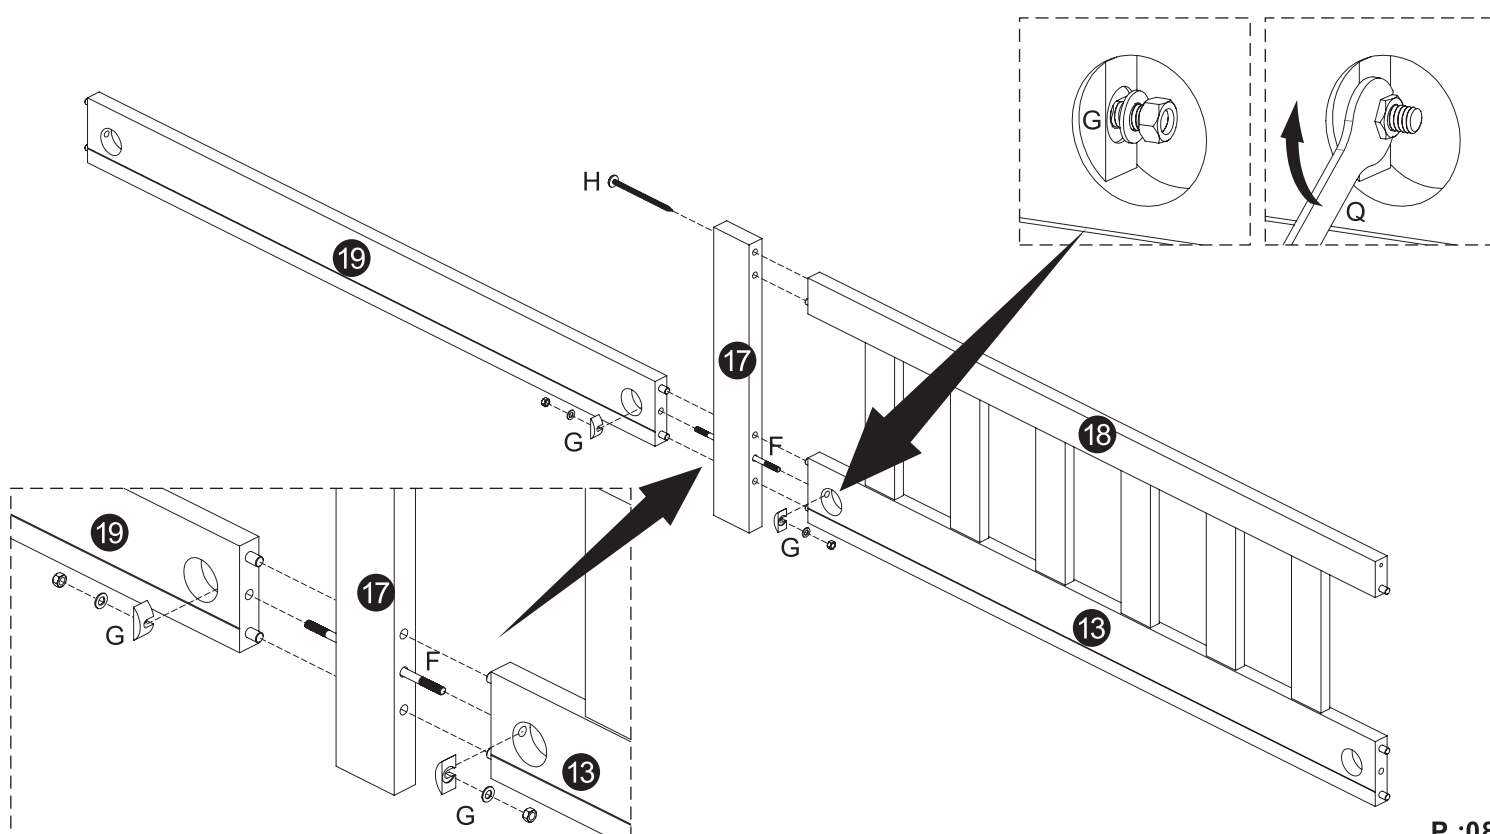


10

J x15



Ø4x30

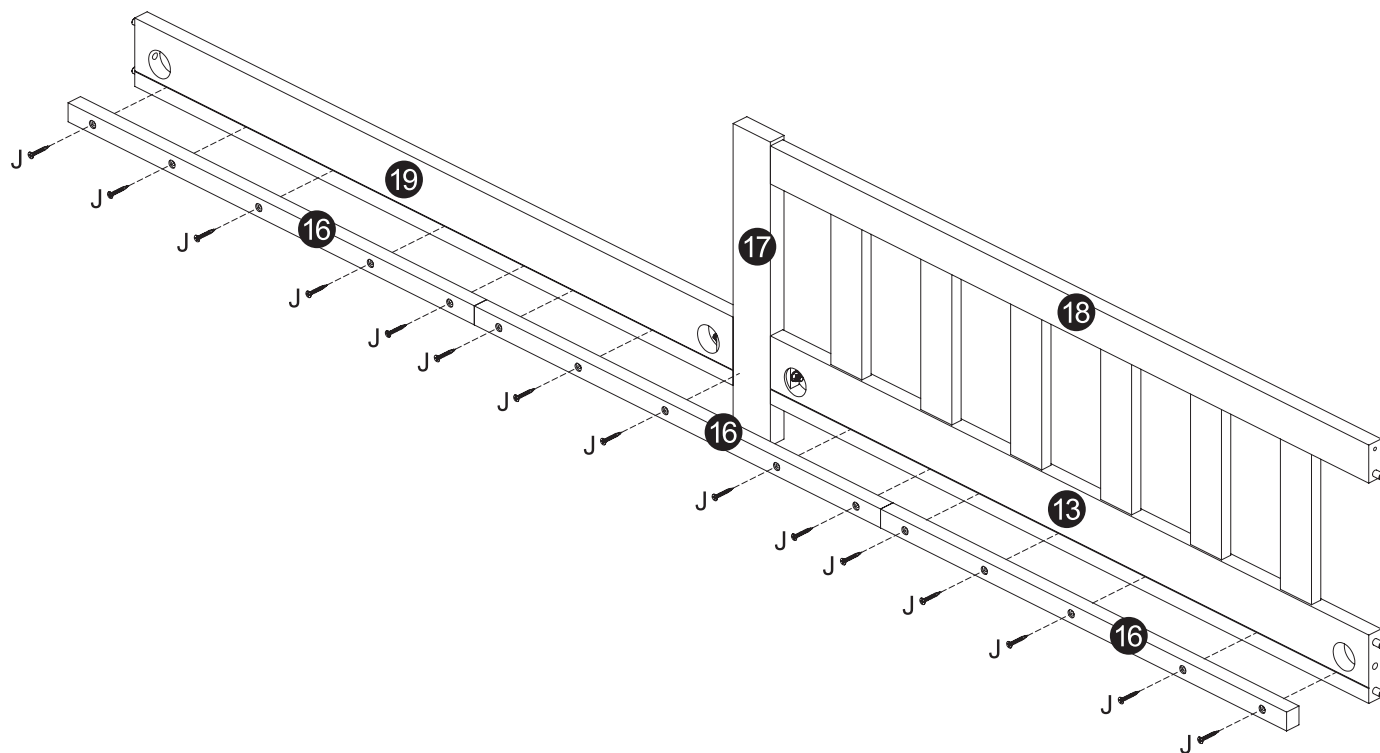

11


L x4




M x4




M6x40

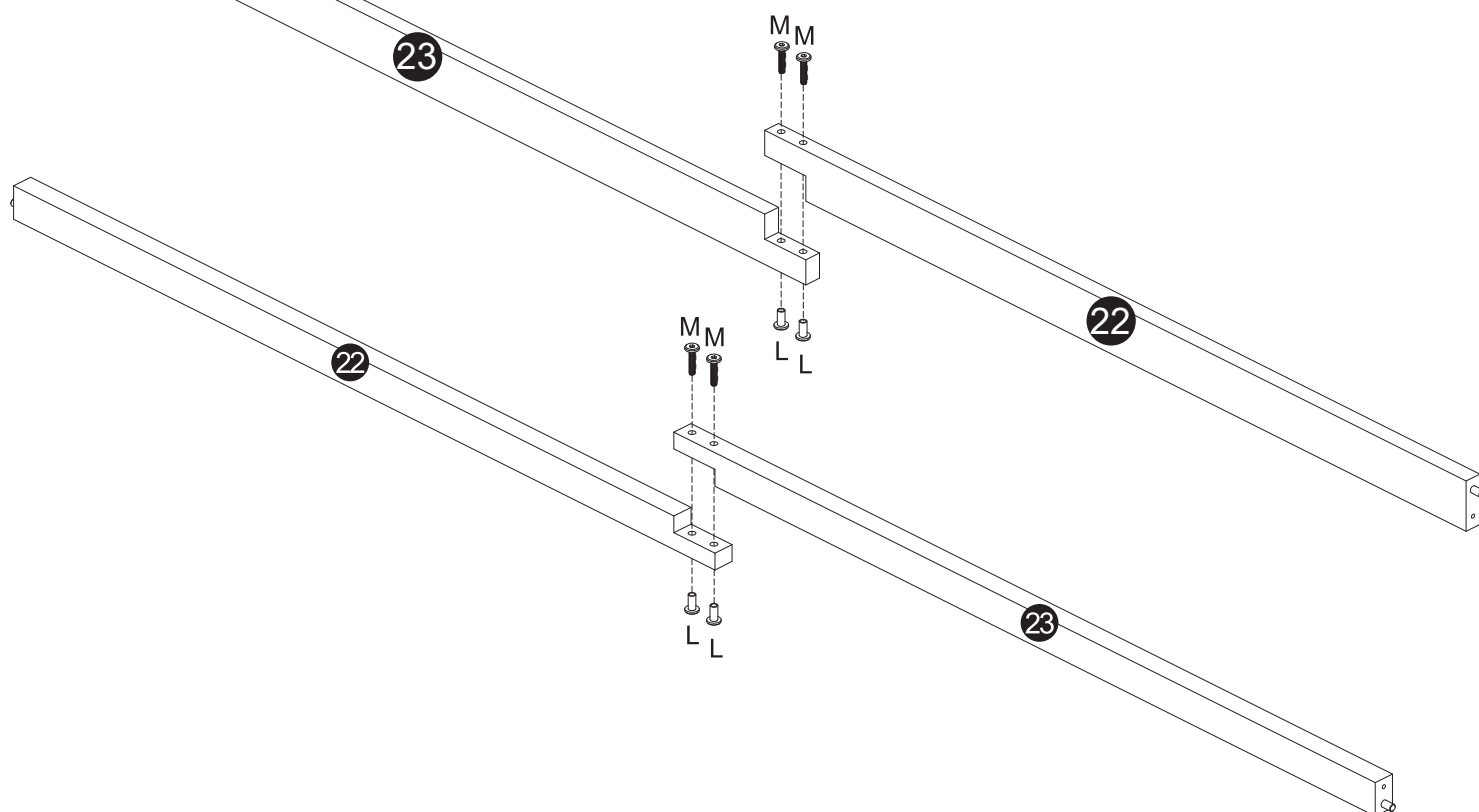

12

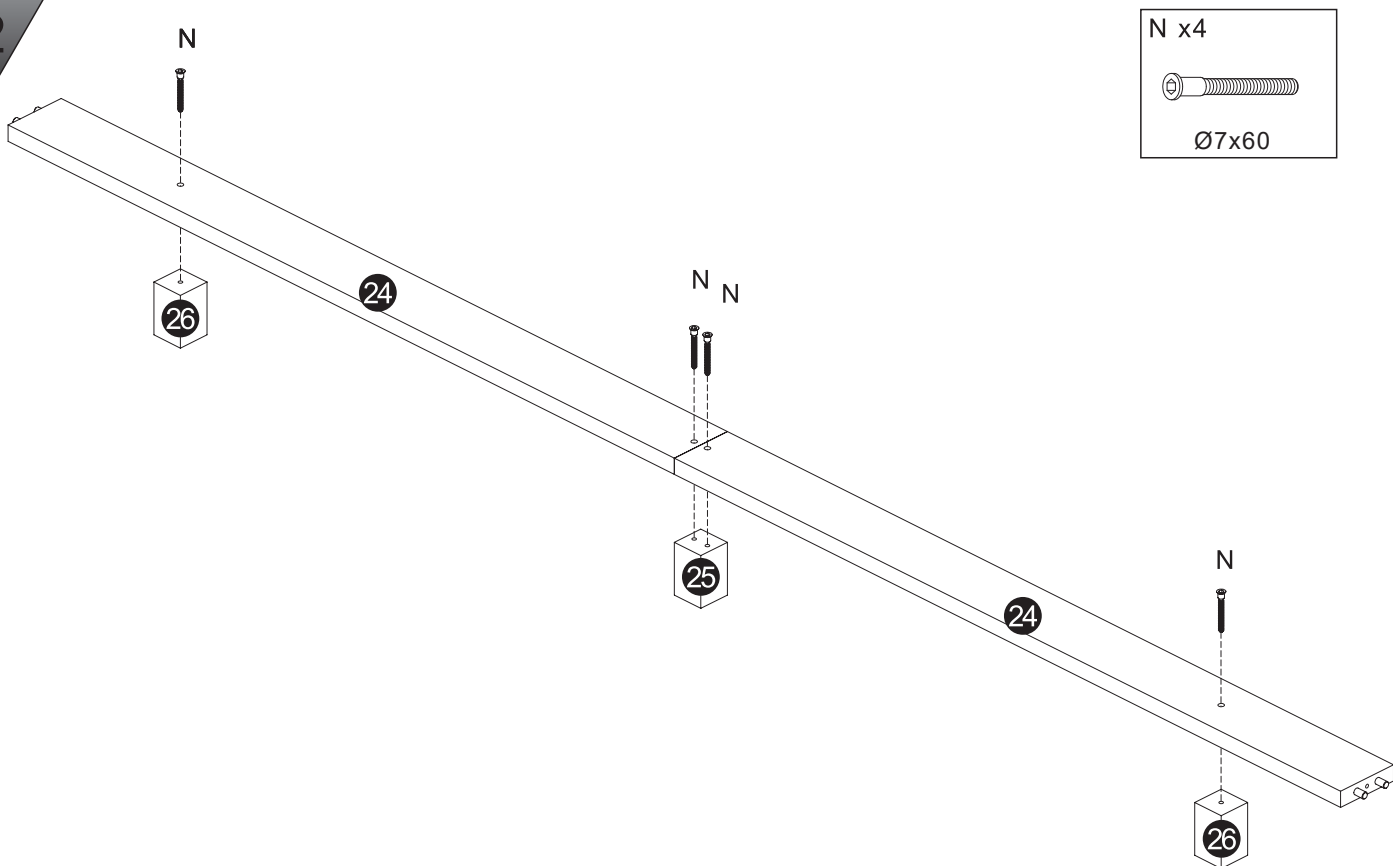

13

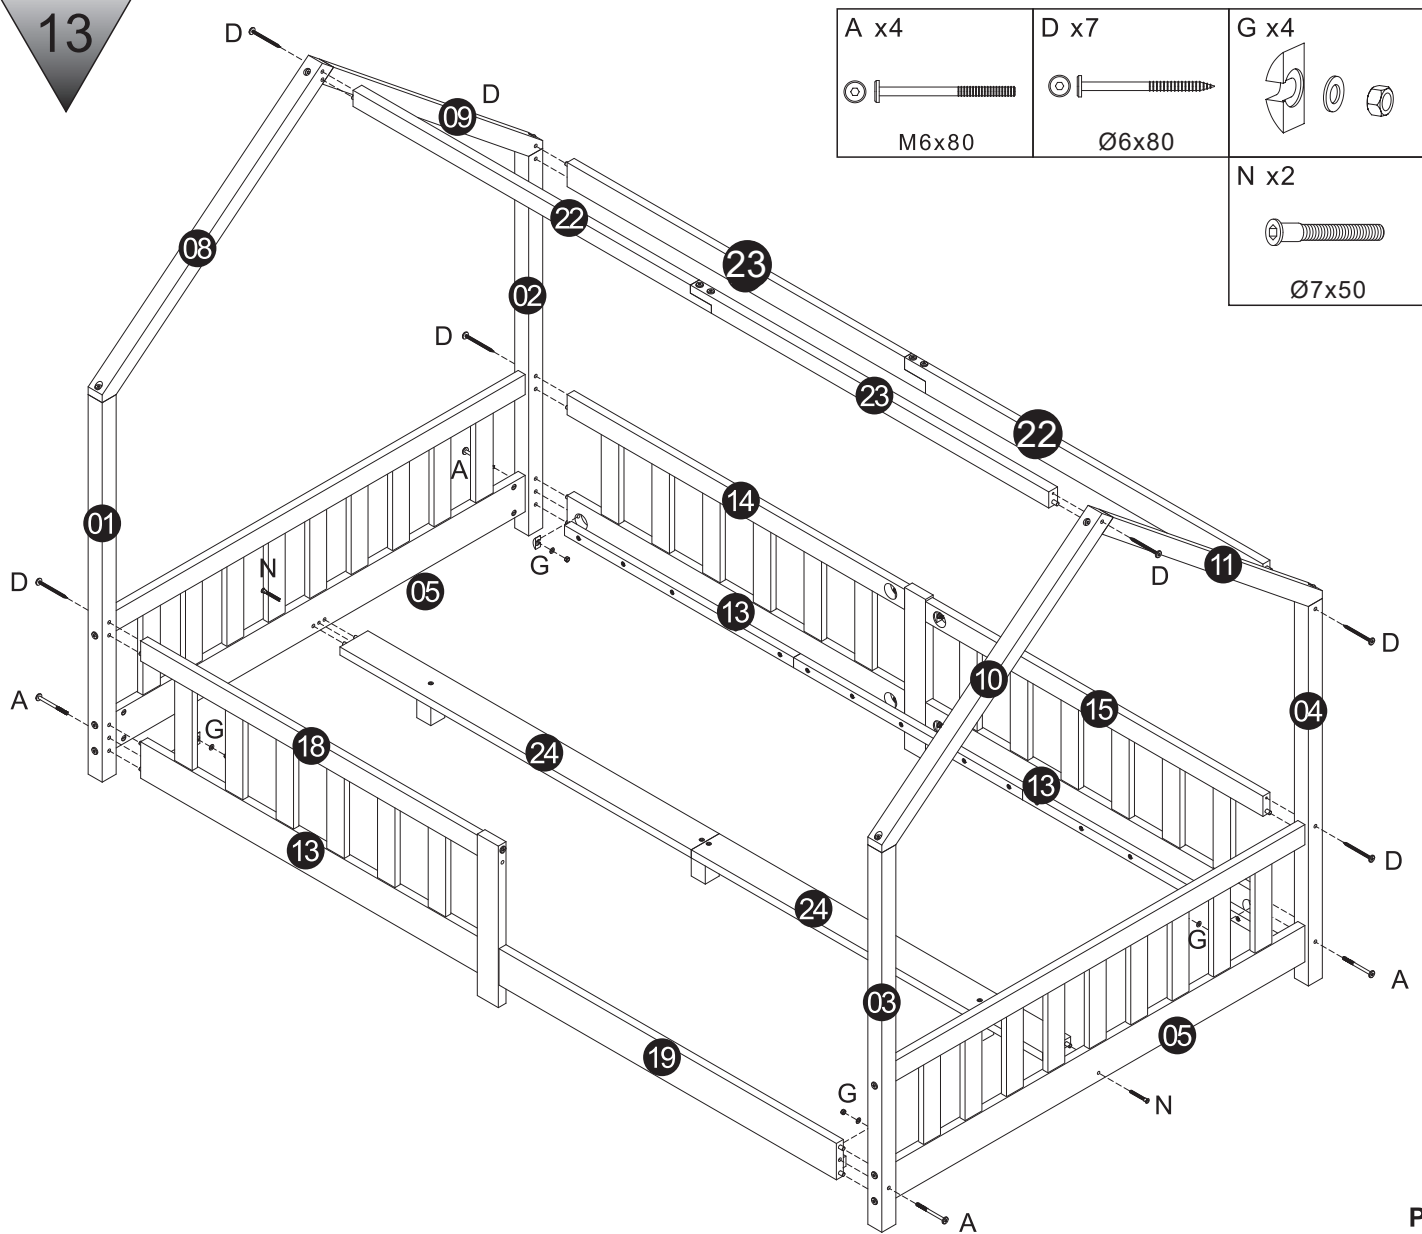


14

J x26



Ø4x30

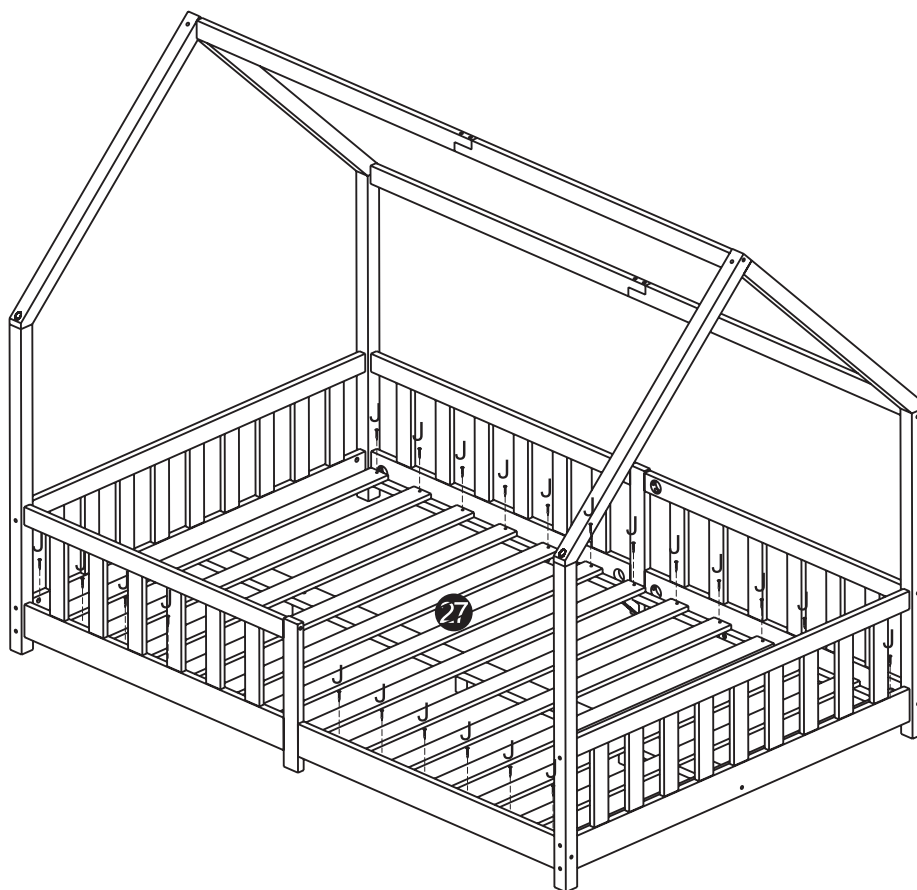


15

J x4



Ø4x30

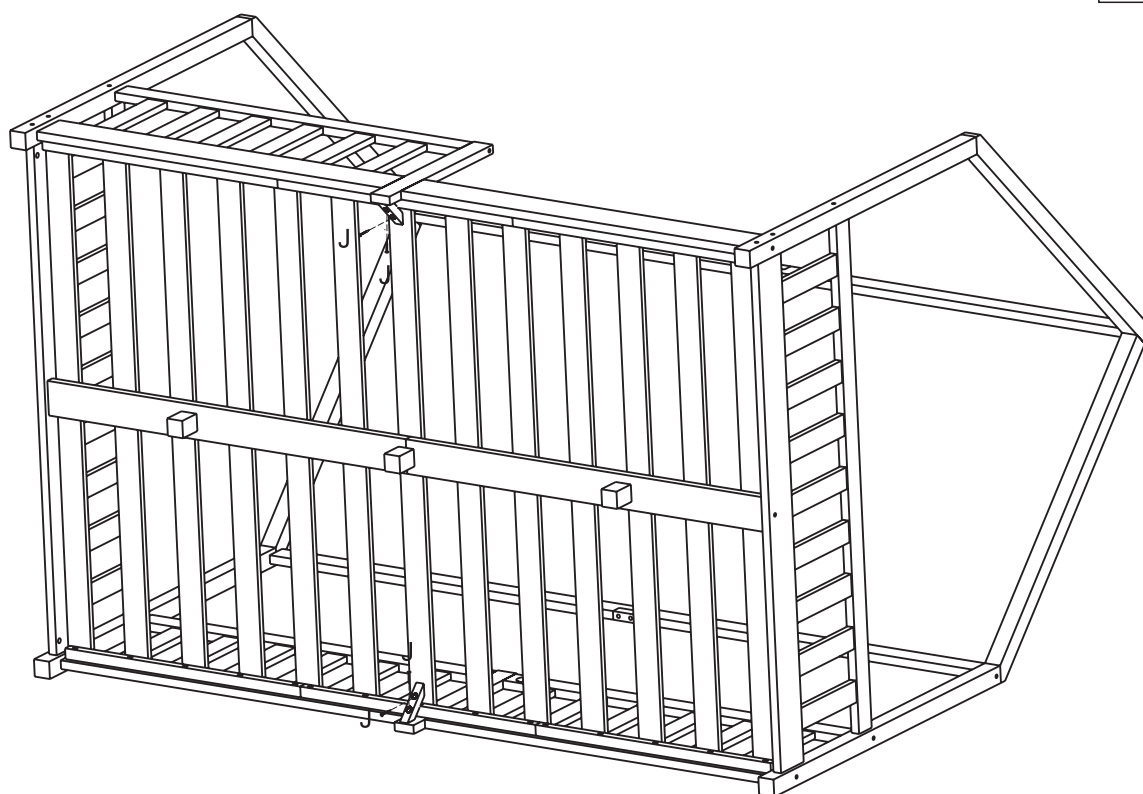



NO HANGING

