
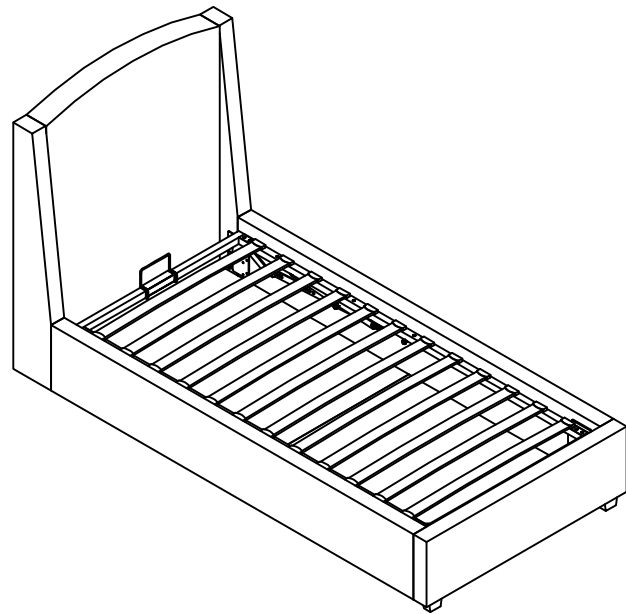


ASSEMBLY INSTRUCTIONS

SBLNOS- Blaine Velvet Single Winged Headboard Ottoman Bed




PART LIST

1.Headboard  X1	2.Footboard  X1	3.Legs  X4	4L.Left Sideboard  X1	4R.Right Sideboard  X1
5.Left Wing  X1	6.Right Wing  X1	7.Slats  X12	8.Single-hole Plastic Cap  X24	9.Slat side bar  X2
10.Slat side bar  X2	11.Strap handle  X1	12.Mattress stopper  X1	13.Bracket  X2	14.Bottom panel  X2
15.Lifting frame  X2	16.Piston  X2			


HARDWARE LIST

(A) Bolt M8*30mm  X28	(B) Allen key  X1	(C) Nut M8  X6	(D) Spring Washer  X12	(E) Flat Washer  X52
(F) Spanner  X1	(G) Bolt 8*50mm  X4	(H) Bolt 8*40mm  X12	(I) Bolt 8*20mm  X8	(J) Mute sticker  X2


Step 1

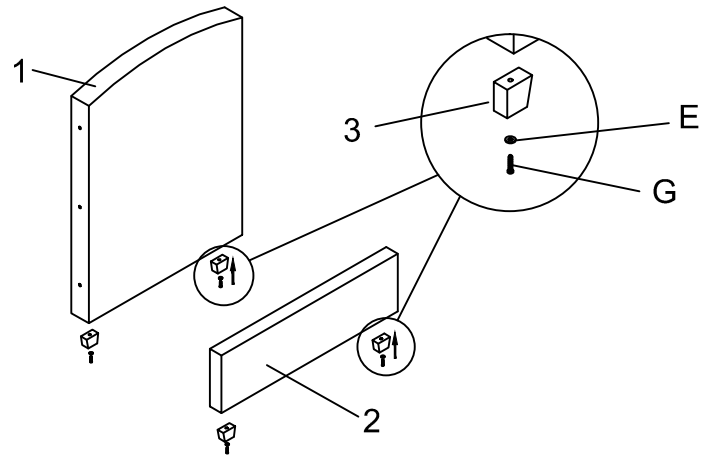


Step 2

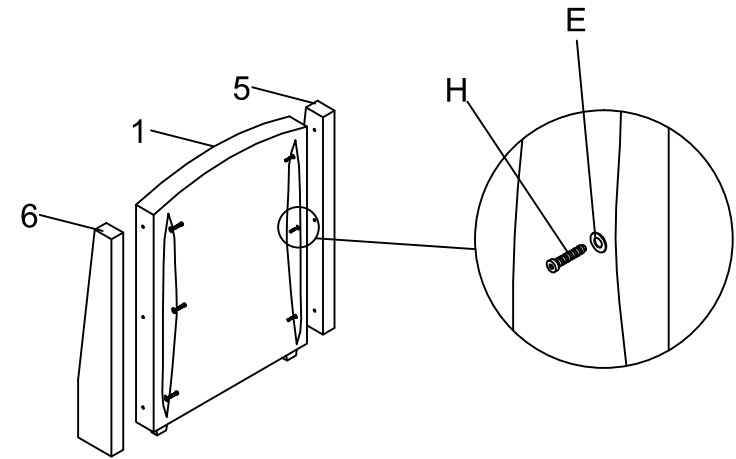


Step 3

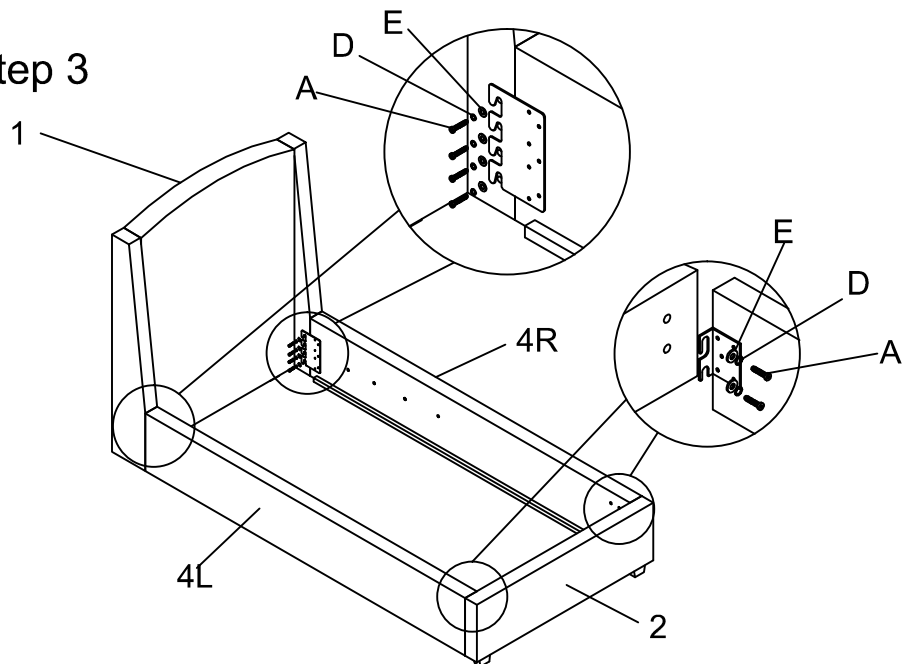


Step 4

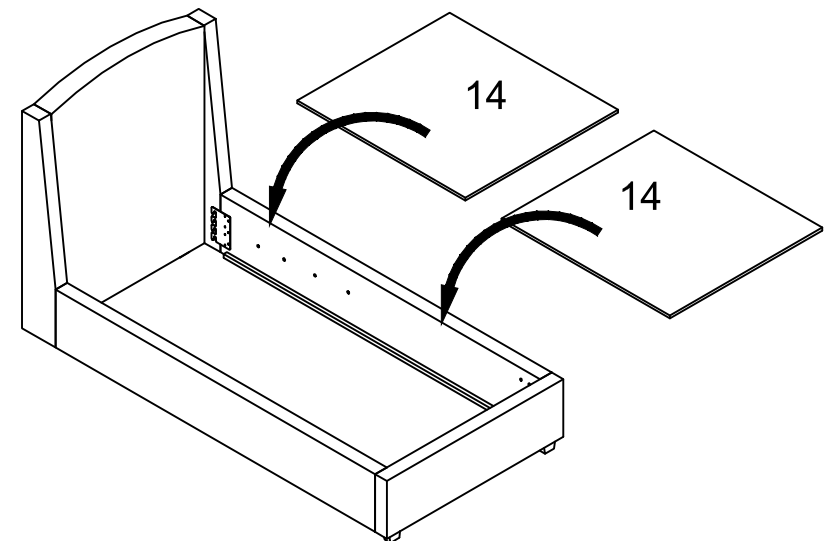


Step 5

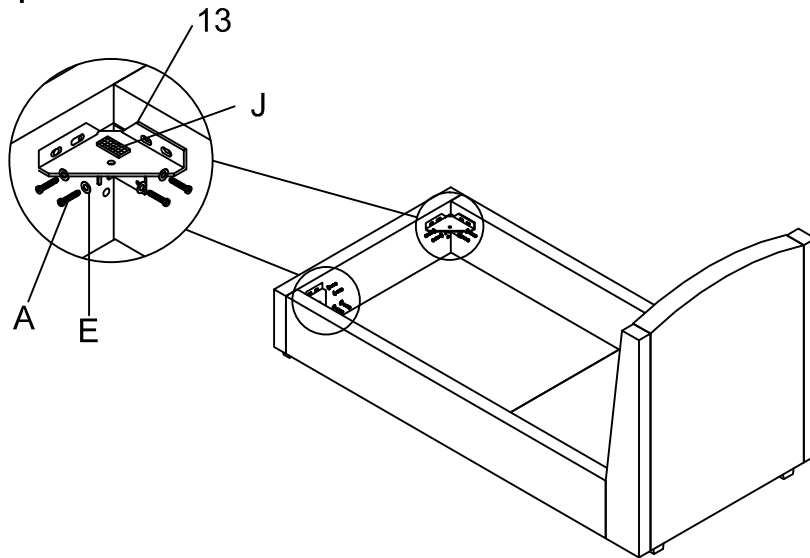

Step 6

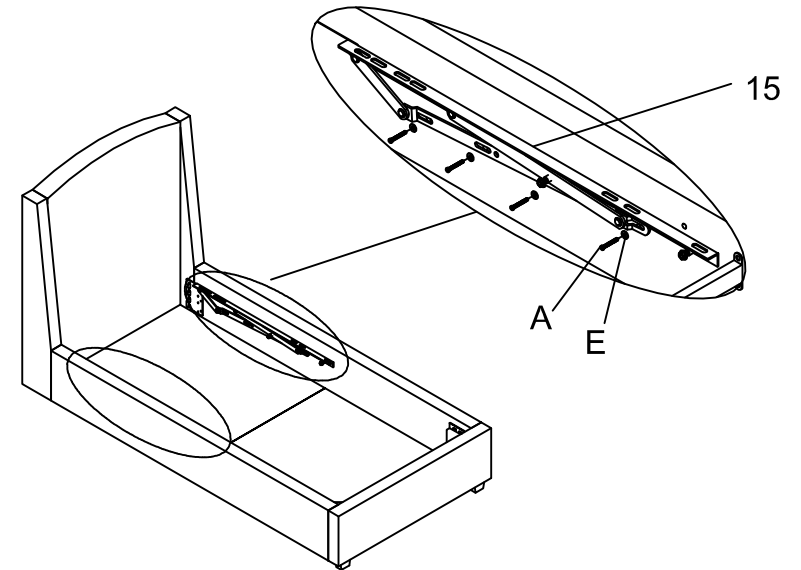


Step 7

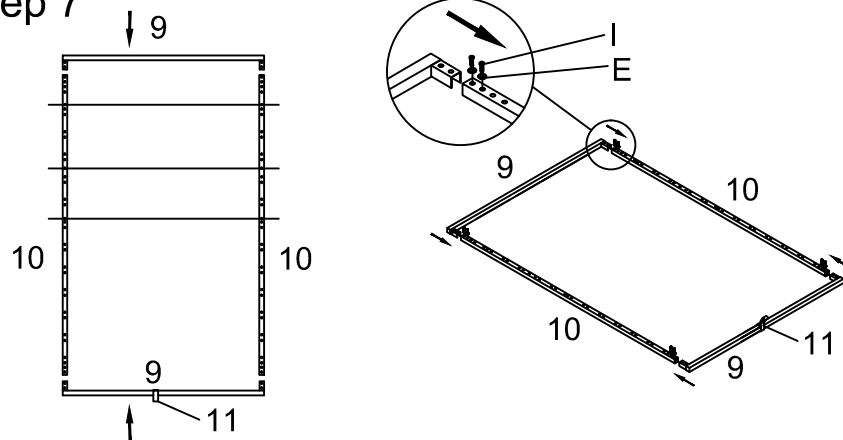


Pay attention to keep the order of parts 10 consistent, and keep the three holes in the same horizontal line

Step 8

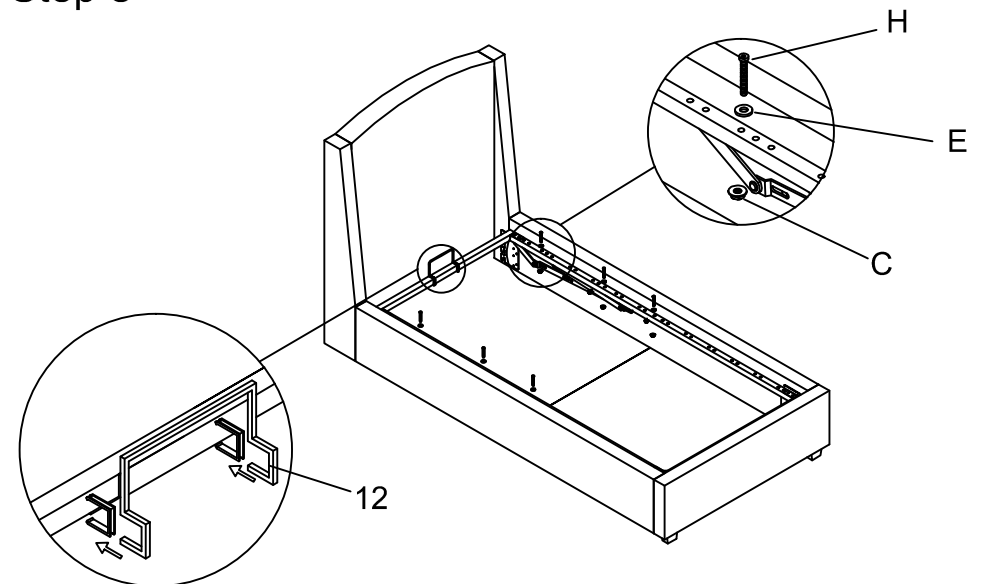

Step 9

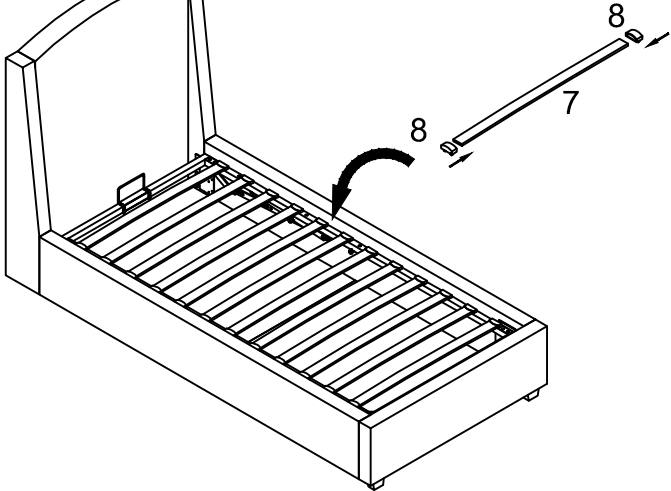

Step 10

