


ASSEMBLY INSTRUCTIONS


1. PLEASE .READ THESE INSTRUCTIONS CAREFULLY
2. DO NOT THROW AWAY PACKAGING MATERIALS UNTIL ASSEMBLY IS COMPLETE.
3. ASSEMBLE THIS ITEM ON A SOFT RUG AND SMOOTH SURFACE,SUCH AS A RUG OR CARPET,TO PROTECT THE FINISH.
4. TWO PEOPLE ARE REQUIRED TO ASSEMBLE THIS PRODUCT.
5. ONLY TIGHTEN THE SCREWS WHEN THE BED IS FULLY ASSEMBLED.
- 6.WHEN THE BED IS ASSEMBLED AND READY TO USE FOR THE FIRST TIME AND THE FRAME IS IN ITS UPRIGHT POSITION,YOU MAY HAVE TO PULL DOWN FAIRLY FIRM ON THE FRAME TO RELEASE THE GAS IN THE ARMS.
7. IF ANY OF THE BED PARTS ARE MISSING,PLEASE CONTACT YOUR RETAILER AS SOON AS POSSIBLE AND QUOTE THE MISSING PAPT NUMBER ALONG WITH YOUR FULL POSTAL ADDRESS.THIS WILL ENSURE THAT THE MISSING PART IS DISPATCHED TO YOU SPEEDILY.
8. IN THE EVENT OF ANY COURIER DAMAGE OR FAULT THAT IS SPOTTED ON OPENING THE BOXES,IT IS ESSENTIAL THAT ALL THE COMPONENTS FROM,THE AFFECTED BOX ARE PACKED BACK IN THE ORIGINAL BOX AND SAFELY SECURED. PLEASE SEND PHOTOGRAPHS OF THE DAMAGE/FAULT TO YOUR RETAILER, QUOTING THE BED SIZE AND COLOUR SO THAT THE MATTER CAN BE QUICKLY RESOLVED. THIS PROCESS USUALLY TAKES APPROXIMATELY 3-4 WORKING DAYS.

Hardware List

(A) Bolt M8x16mm -24pcs



(B) Bolt M8x40mm -14pcs




(C) Nut M8 -10pcs




(D) Allen Key M5 -1pcs




(E) Spanner -1pcs



(F) Support Left Side -1pcs

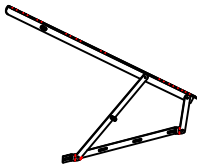


(G) Support Right Side -1pcs

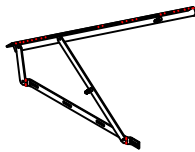

(H) Pneumatic rod -2pcs



(I) 1pcs

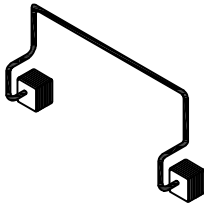


(J) 1pcs




Parts List


(1) Headboard x 1pc

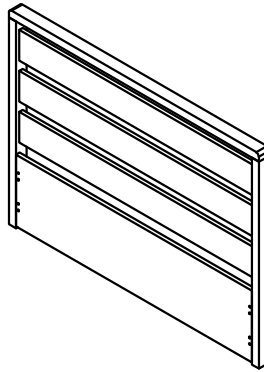


(5) Center Support x 1pc

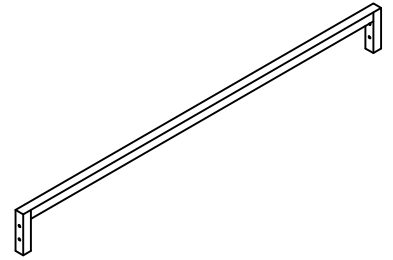


(2) Footboard x 1pc

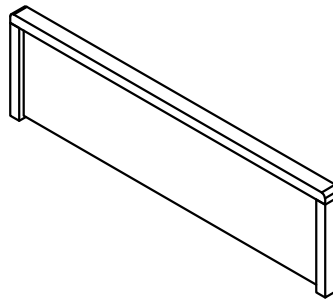

(6) Slats x 1pc

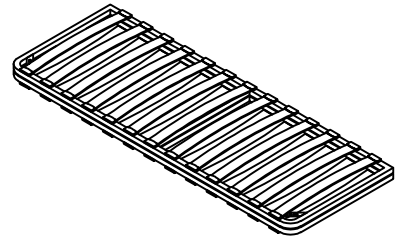


(3) Siderail Left x 1pc

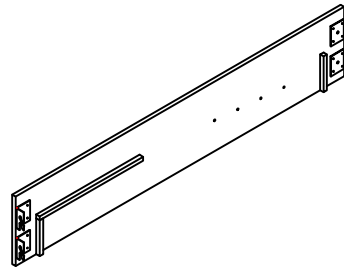

(7) Support leg x 2pc




(4) Siderail Right x 1pc

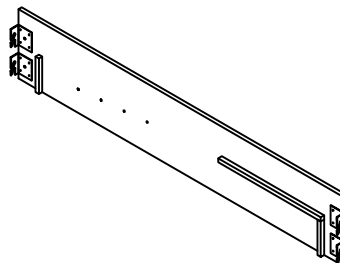


STEP 1

Ax16

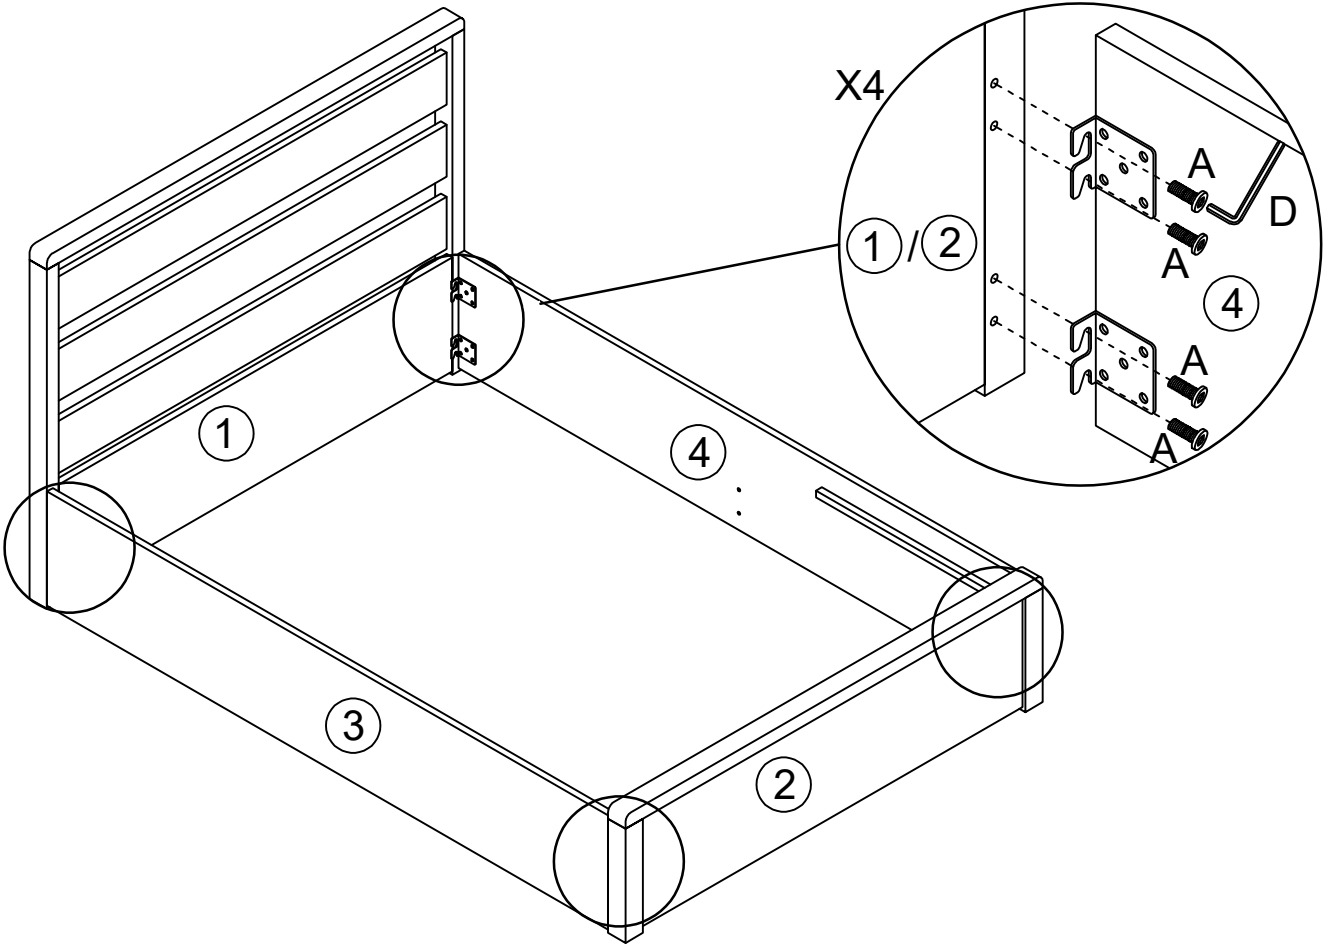


STEP 2

Bx4

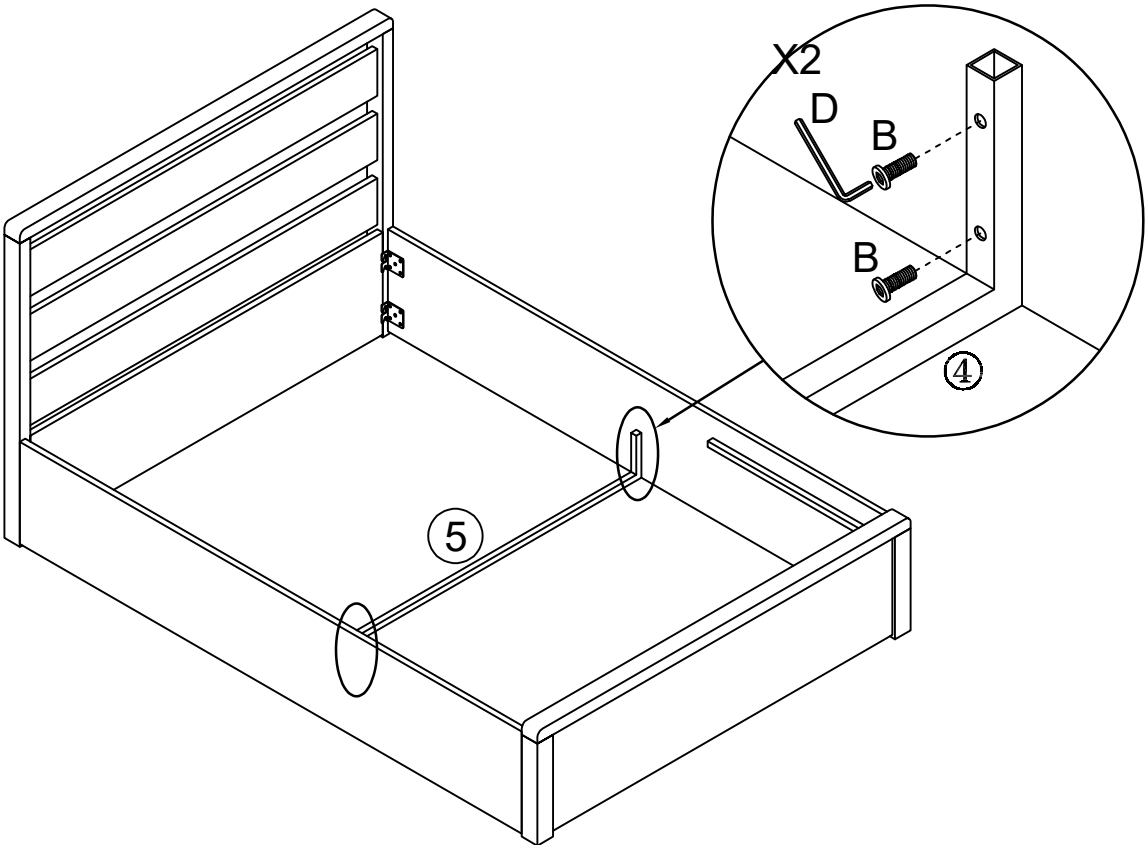


STEP 3

Ax8

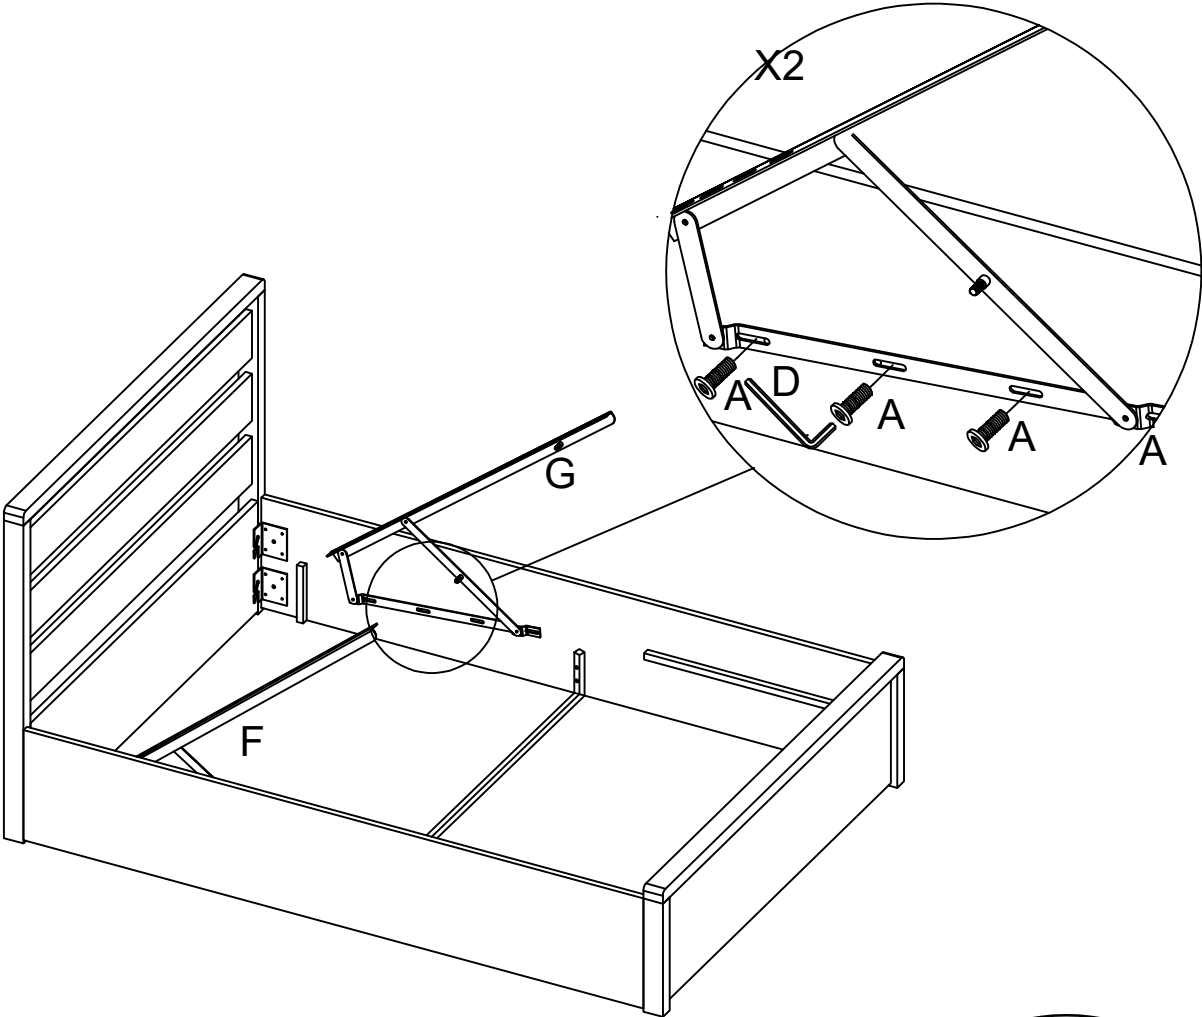

STEP 4

Cx4

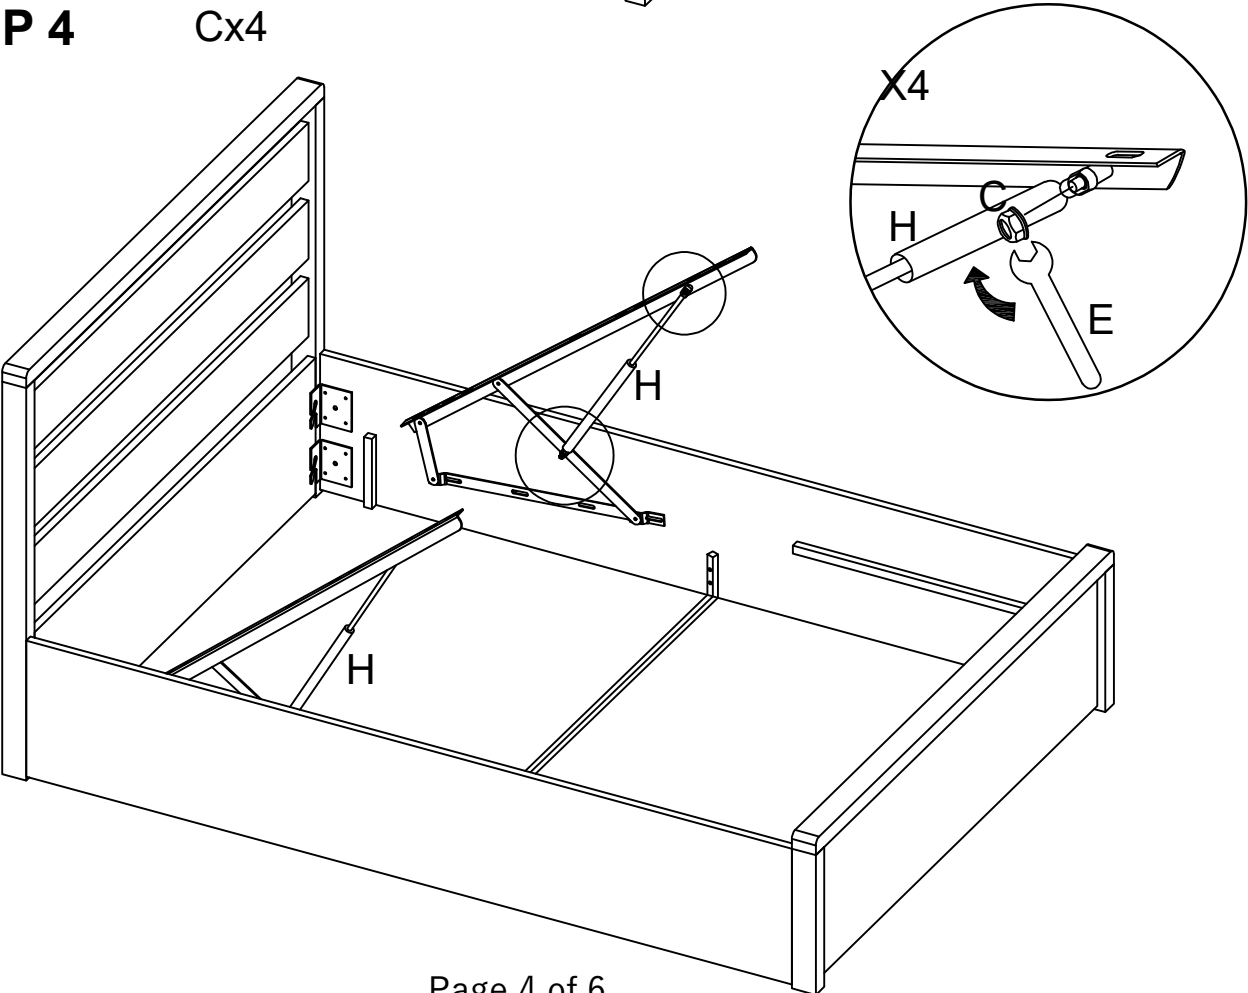


STEP 5



STEP 6

Bx6 Cx6 Jx1

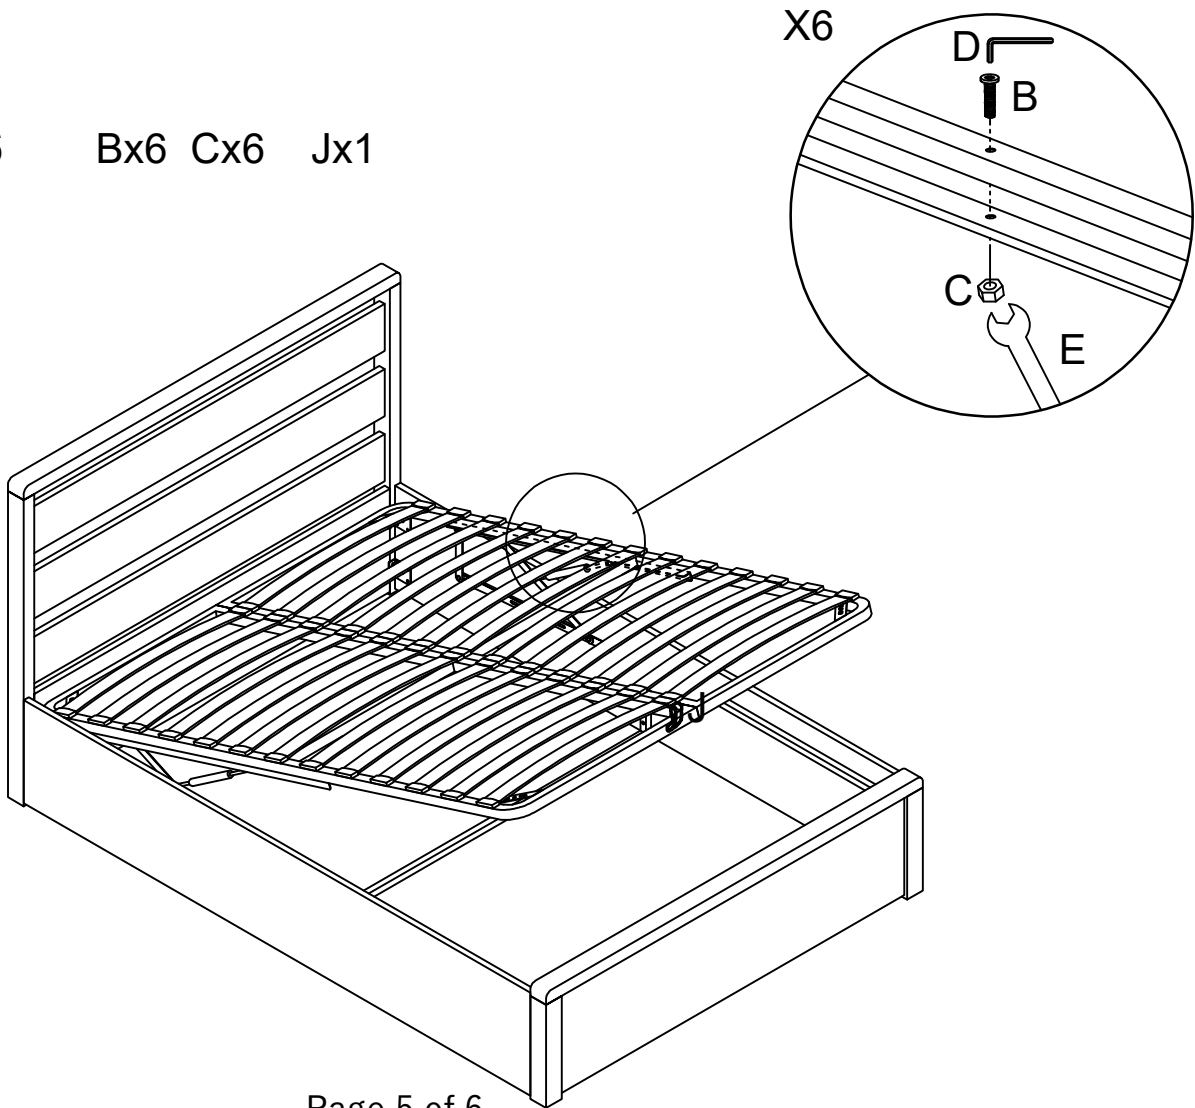

STEP 7

Bx4 Cx4

X2

