
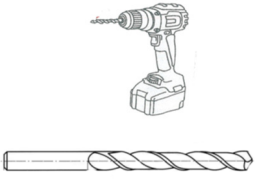


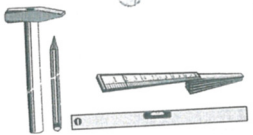
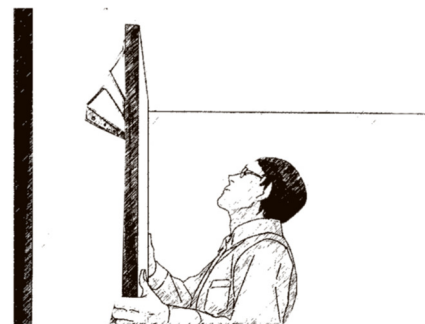
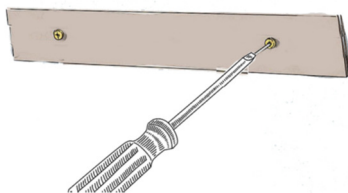
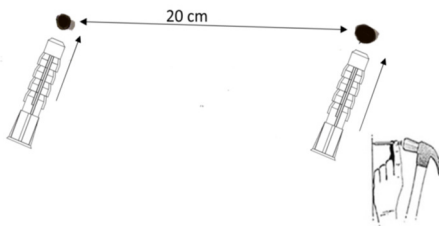
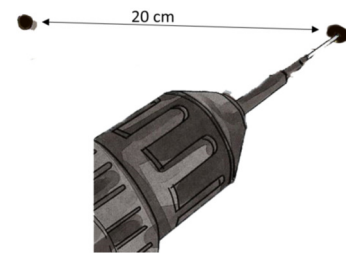


TOOLS REQUIRED

Part	Diagram	Description	Qty
A		MASONARY DRILL 6 mm	1
B		SCREWDRIVER	1
C		RAWLPLUG 6 mm x 28 mm	2
D		HAMMER, PENCIL, TAPEMEASURE, SPIRIT LEVEL	1

1. These panels are designed to hang on a wall behind a bed, with the bed pushed up against them. If you want to use them away from a bed, or there is a risk of them being knocked off, we suggest using Velcro or hook and loop tape strips near the bottom to help hold them in place. This will also help to hold them flat against the wall.
2. Measurements are given above a skirting board, or floor if no skirting board, and leaves a gap of 1cm between the wall panel and floor or skirting board.

ASSEMBLY INSTRUCTION

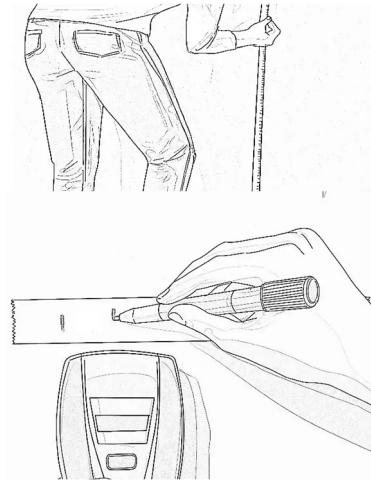

1. Plan the location of your panels relative to your bed
2. Measure a distance of 191cm up from the skirting board, or floor, and mark the wall with a pencil
3. Using a spirit level and pencil draw a horizontal line from the mark
4. Hold the wall fitting against the wall with the pre drilled holes on the pencil line again using a spirit level to ensure the wall fitting is horizontal
5. Using a pencil mark the wall through the screw holes
6. Remove the wall fitting and drill 2 holes with the 6 mm drill bit for the wall plugs
 - a. Check the construction of the wall first, the fittings supplied are suitable for a solid masonry wall, appropriate fittings will be needed for other wall types
 - b. Check that there aren't any hidden pipes or wires in the wall
7. Fit the wall bracket, with the pointed part facing the room and uppermost, using plugs and screws supplied
8. Hang your wall panel in place
9. If you are fitting multiple panels use a long straight edge and spirit level to align adjacent wall fittings

