



ASSEMBLY INSTRUCTION

MODEL : YUMA GUEST BED FYUGB-PINK/ FYUGB-CRM		
A	Arm 	2 pcs
B	Back Panel 	1 pc
C	997mm Slat 13 Pcs 	1 pc
D	Front Side Rail (PU) 	1 pc
E	Back Side Rail 	1 pc
F	Trundle Front Panel (PU) 	1 pc
G	Trundle Back Panel 	1 pc
H	Trundle Side Panel 	2 pcs
I	997mm Slat 13 Pcs 	1 pc
J	Wooden Block 	4 pcs
Packing Hardware		
1	M5 x 70 mm 	1 pc
2	M4 x 65 mm 	1 pc
3	CSK M4 x 32mm 	64 pcs
4	JCBC M6 X 50 	4 pcs
5	SPRING WASHER 	4 pcs
6	FLAT WASHER 	4 pcs
7	Roller 	6 pcs
8	CSK M3.5 x 16 mm 	24 pcs
9	JCBB M8 X 20 	16 pcs

Step 1 : Attach side rail (D) & (E) to arm (A) by pushing the bracket down to fit it.

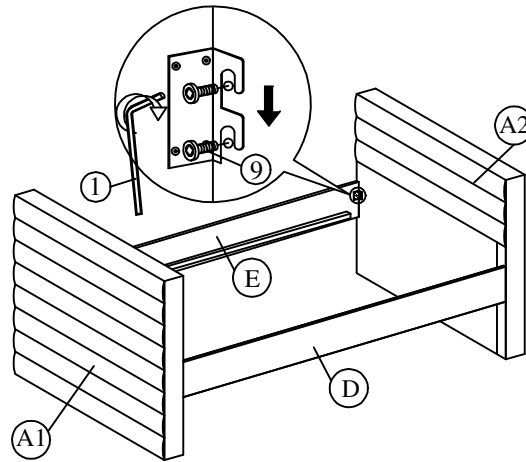


Step 2 : Attach the Back Panel (B) to the arm (A) as shown.

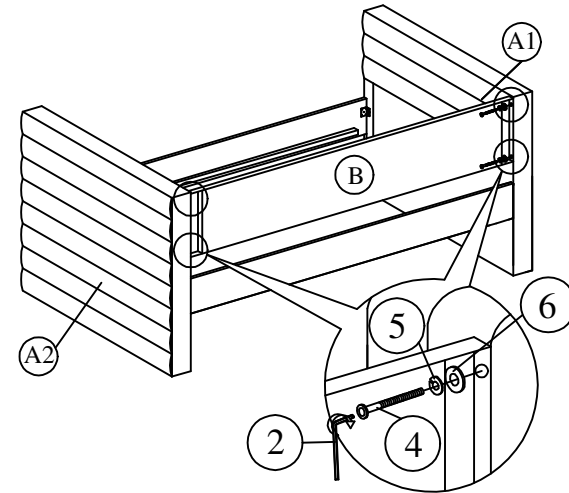


BACK VIEW


Step 3 : Tighten the 4 Corner with Allen Key (1). Install the slats to side rail. Tighten the slats with CSK screw (3). The distance of the slats should be sufficient to obtain desirable bed stability.

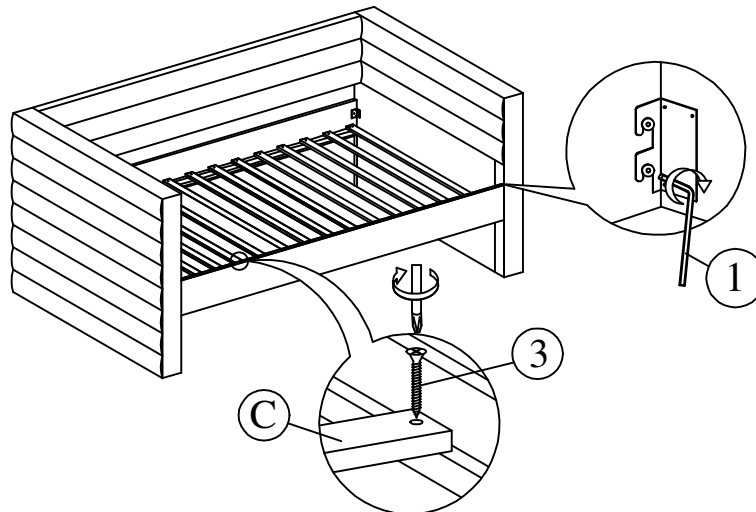


Step 4 : Attach trundle side panel (H) and trundle front panel (F) to trundle back panel (G) by pushing the bracket down to fit it.

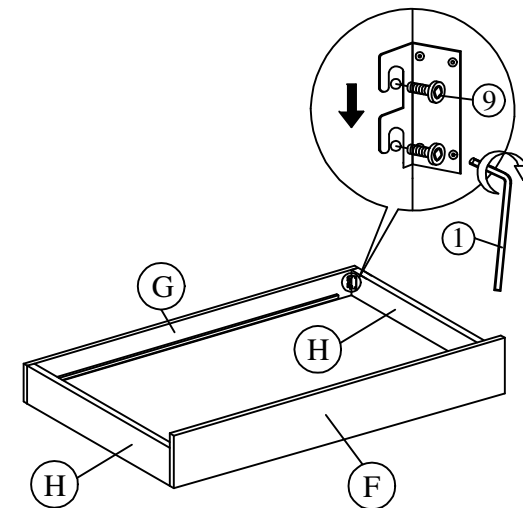

Step 5 : Affix the roller (7) to the slat (I) follow the marking on the slat (I).

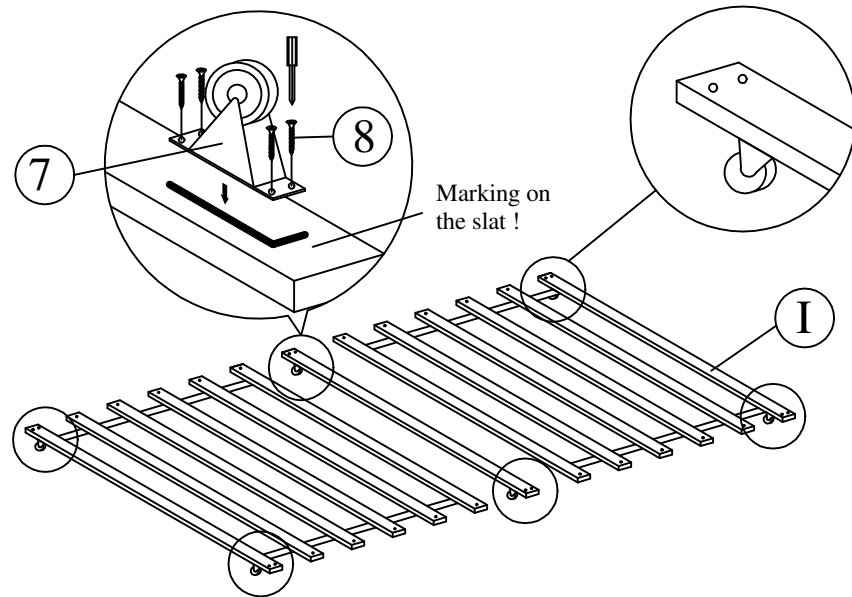

Step 6 : Place the wooden blocks (J) at the corner of the trundle and fix the slat (I) to the trundle at (F) & (G) .

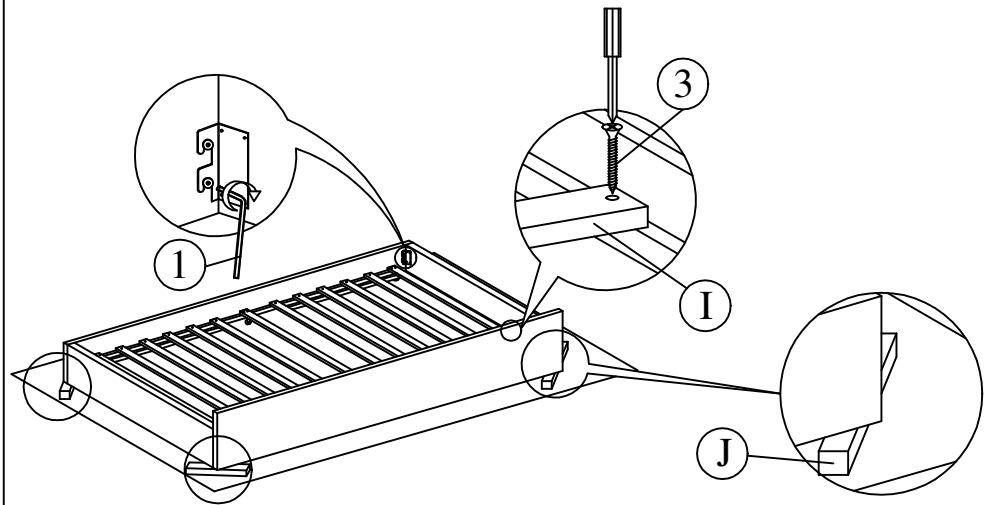

Step 7 : Assembly is complete.

