

Part List

Carton 1 of 3:

Part	Description	QTY
1	Center Panel-left	1
2	Bottom Panel-left	1
3	Front Panel Down-left	1
4	Side Panel-left	1
5	Small Center Panel-left	1
6	Back Panel-left	1
7	Fix Panel-left	1
8	Top Panel-left	1
9	Center Panel-right	1
10	Bottom Panel-right	1
11	Front Panel-right	1
12	Side Panel-right	1
13	Small Center Panel-right	1
14	Back Panel-right	1
15	Fix Panel-right	1
16	Top Panel-right	1
17	Front Panel Up-left & right	2

Carton 2 of 3:

Part	Description	QTY
18	Side Rail Left	1
19	Side Rail Right	1
20	Footboard Panel	1

Carton 3 of 3:


Part	Description	QTY
21	End Holder	26
22	Middle Holder	13
23	Slat	26
24	Pump Mounting Bracket (L/R)	2
25	Gas Spring	2
26	Bracket Base	2
27	FB / SR Angle Bracket	2
28	Main Frame (Front & End)	2
29	Main Frame (Side)	2
30	Center Rail	1
31	Metal Corner Bracket	4
32	Rubber Corner Connector	4
33	Support Leg	1
34	Stopper	1
35	Black Woven	1

Hardware List : Carton 3 of 3


Headboard Hardware	QTY
A Allen Key M4	1
B Allen Key M5	1
C Plastic Dowel M8x25mm	40
D Mini Fix Bolt	68
E Mini Fix Housing	68
F Mini Fix Cap	68
G White Nail Leg	16
H CSK Screw M4x28mm	8
I JCBC W Screw M6x40	8

Hardware List : Carton 3 of 3


Bed Frame Hardware	QTY
J JCBC M6 X 20 (Black)	8
K JCBC M6 X 40 (Black)	8
L JCBC M6 X 50 (Black)	18
M JCBB M8 X 50 (Black)	10
N M6 Spring Washer (Black)	52
O M6 Flat Washer (Black)	52
P M6 Hex Nut (Black)	18
Q M8 Spring Washer (Black)	20
R M8 Flat Washer (Black)	20
S M8 Hex Nut (Black)	10
T M6 Spanner	1
U M8 Spanner	1
V Fabric Loop Lifter	1
W Adjuster (Pre-Assembly)	1
X JCBB M8 X 20	8
Y CSK Screw M4x32mm Black	8

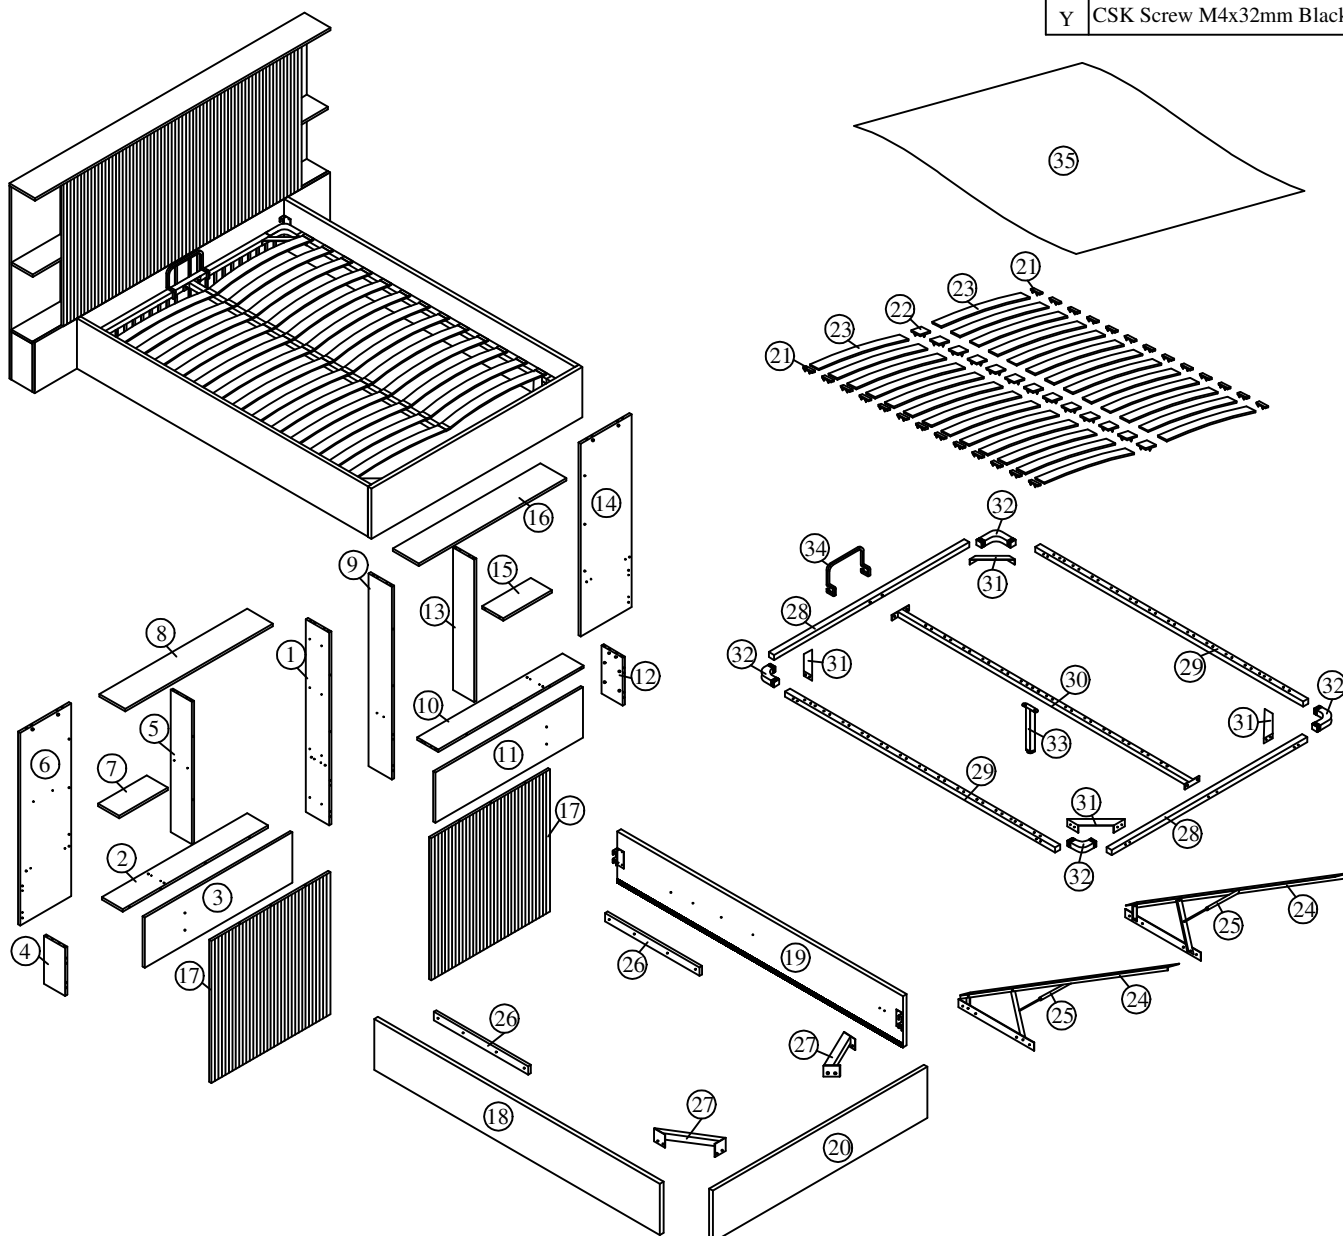


Step 1

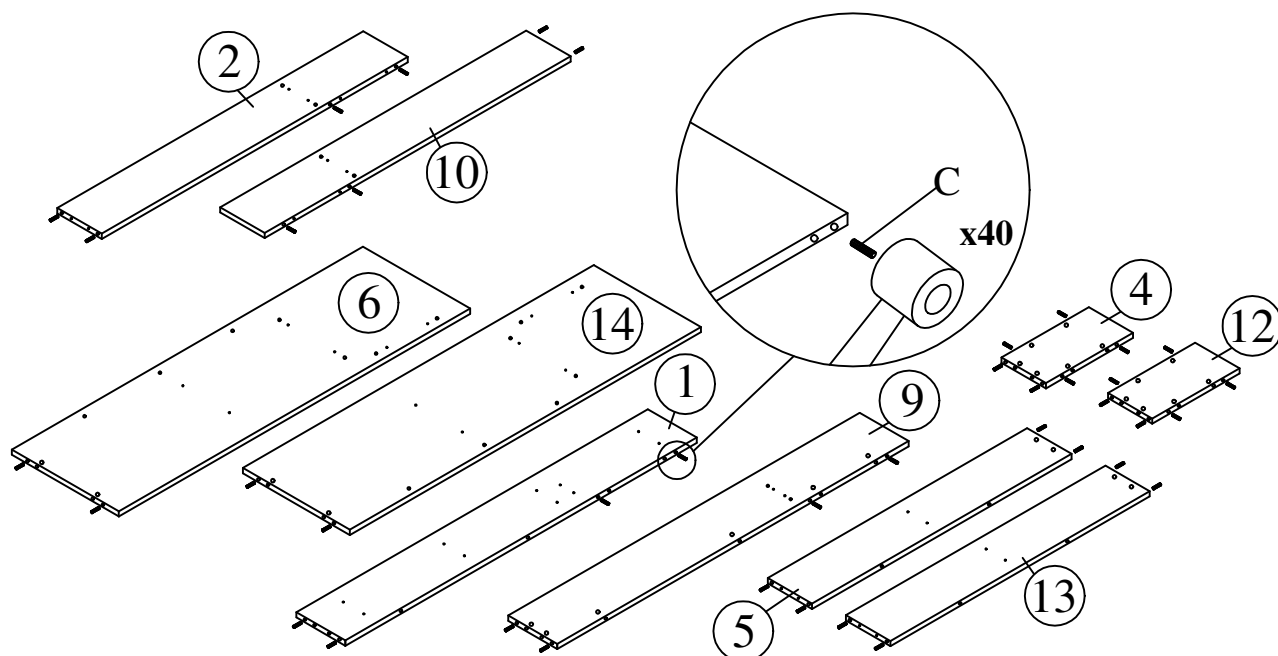


Step 2

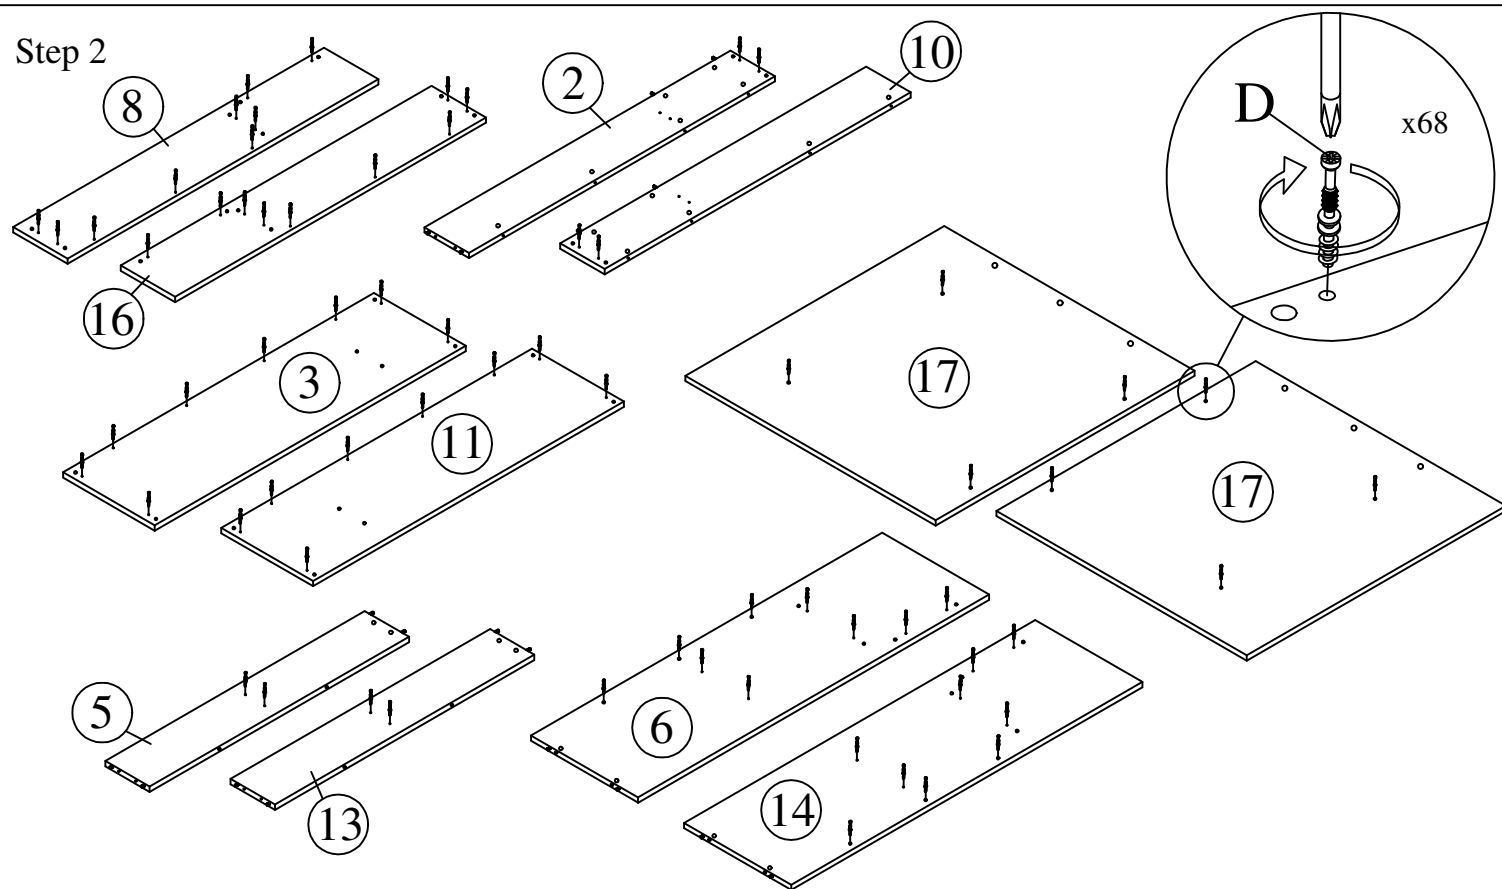


Step 3

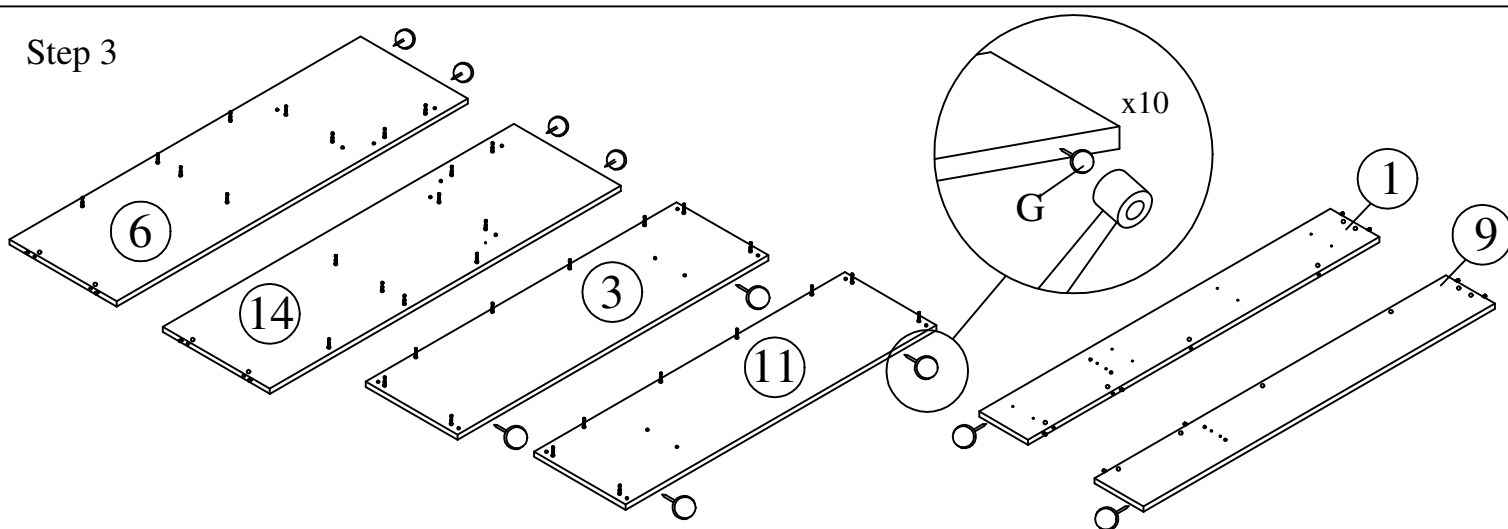


Step 4

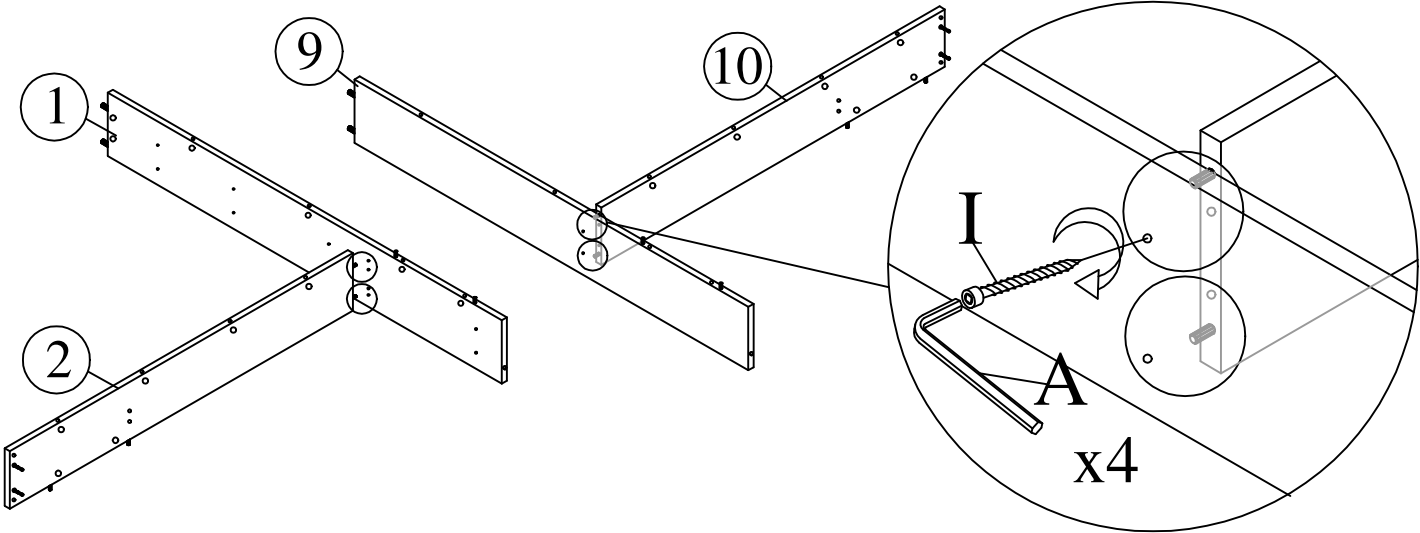


Step 5

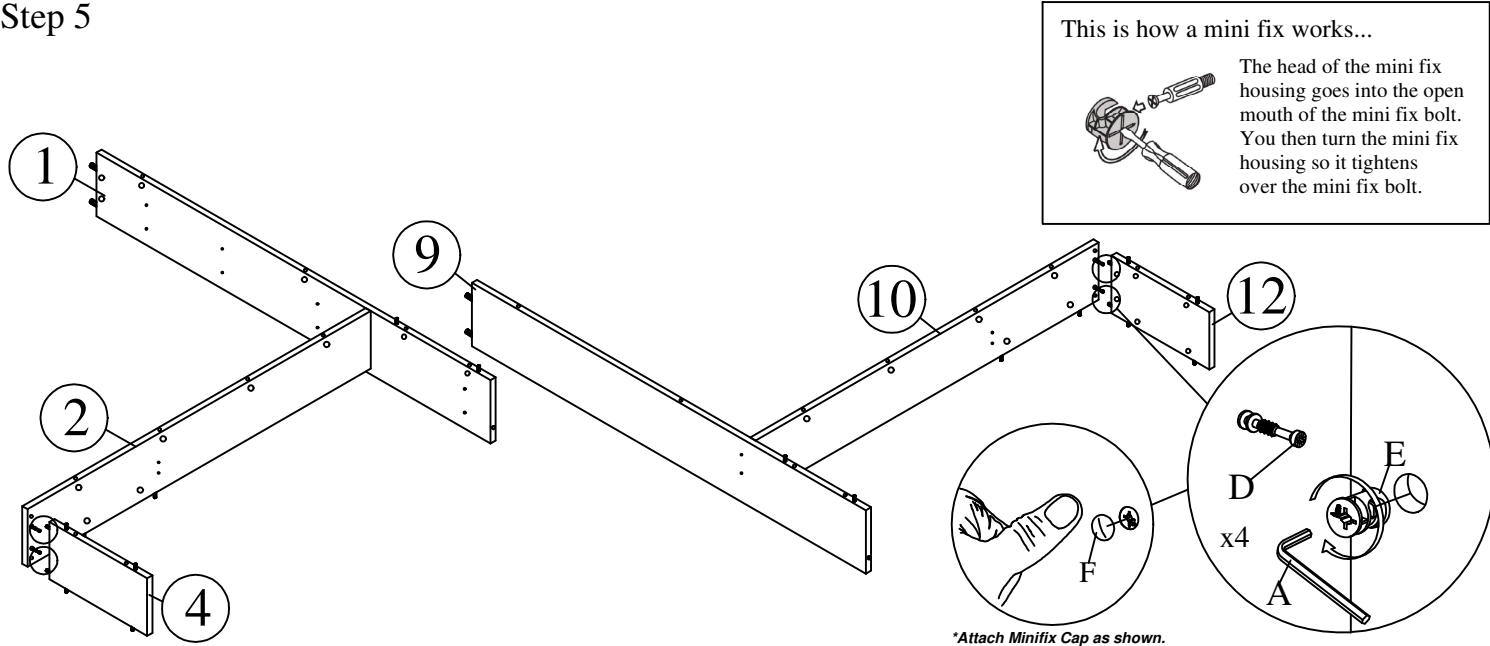


Step 6

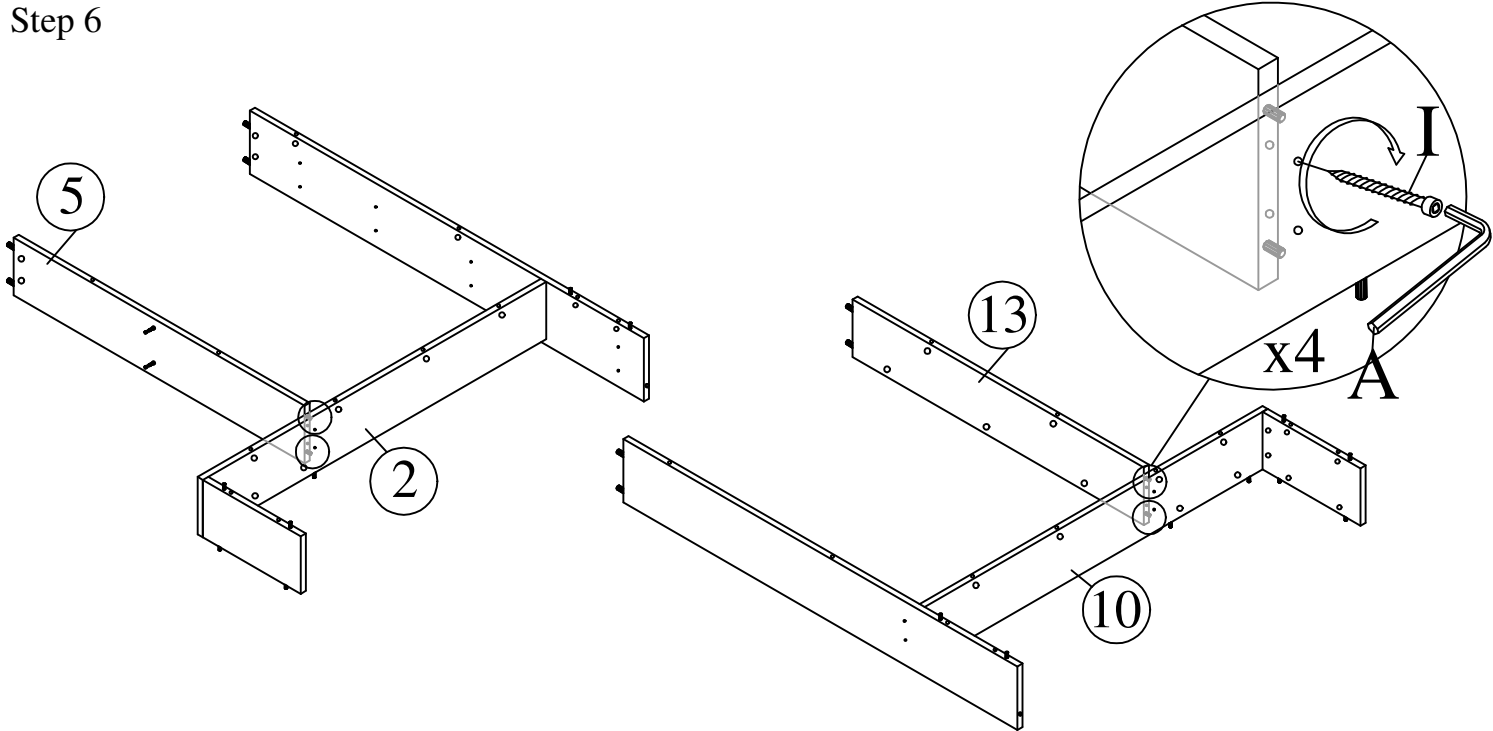


Step 7

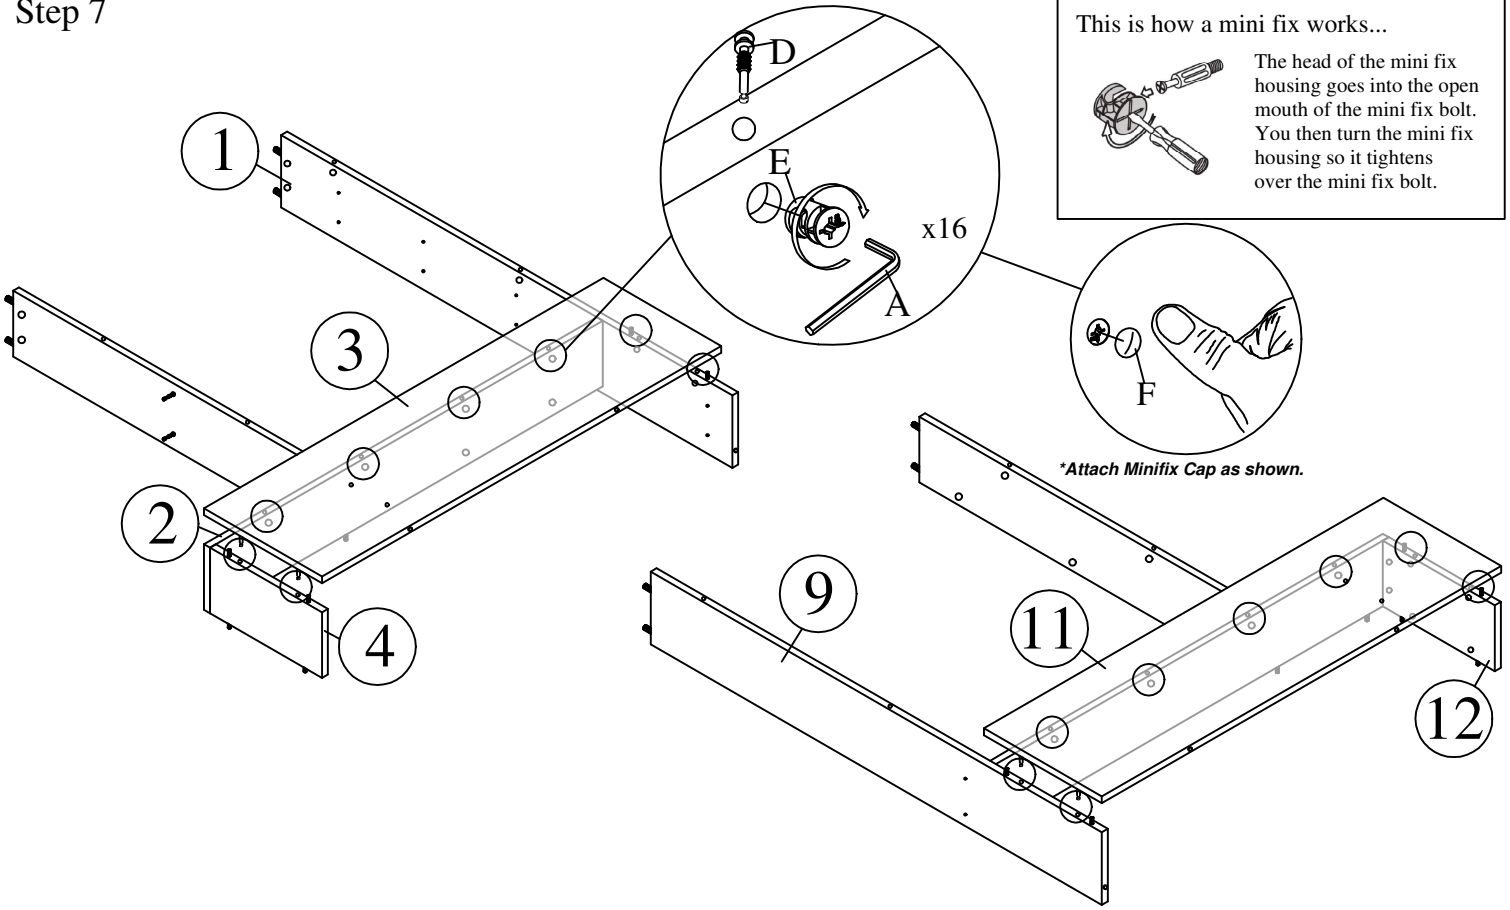


Step 8

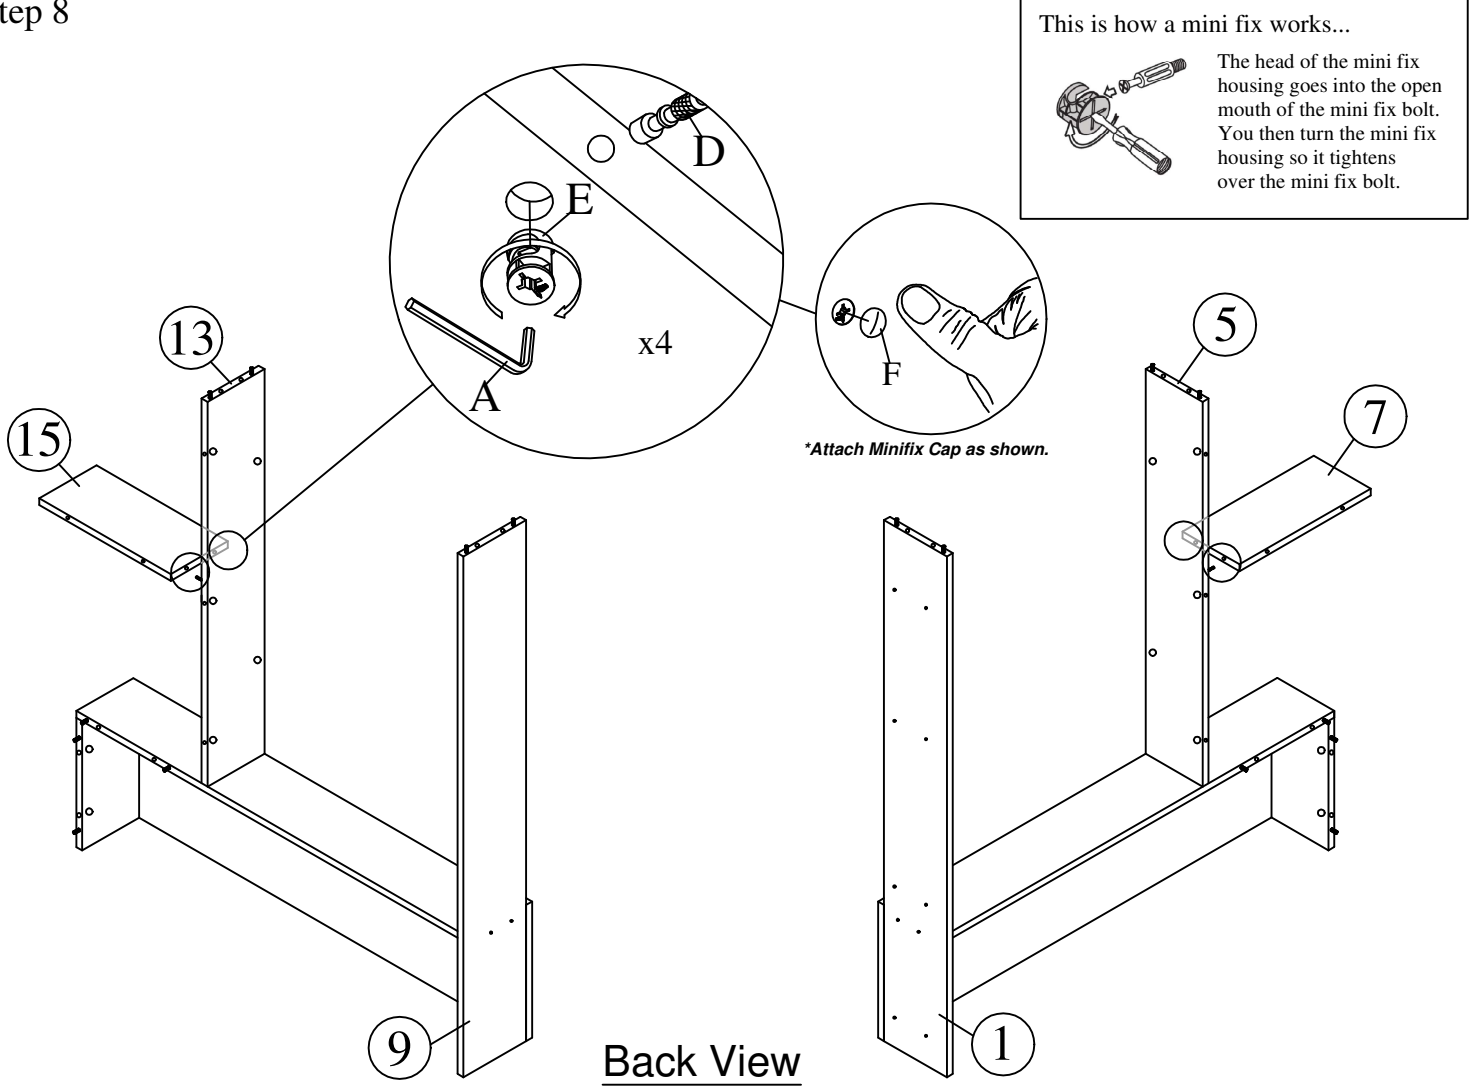

Step 9

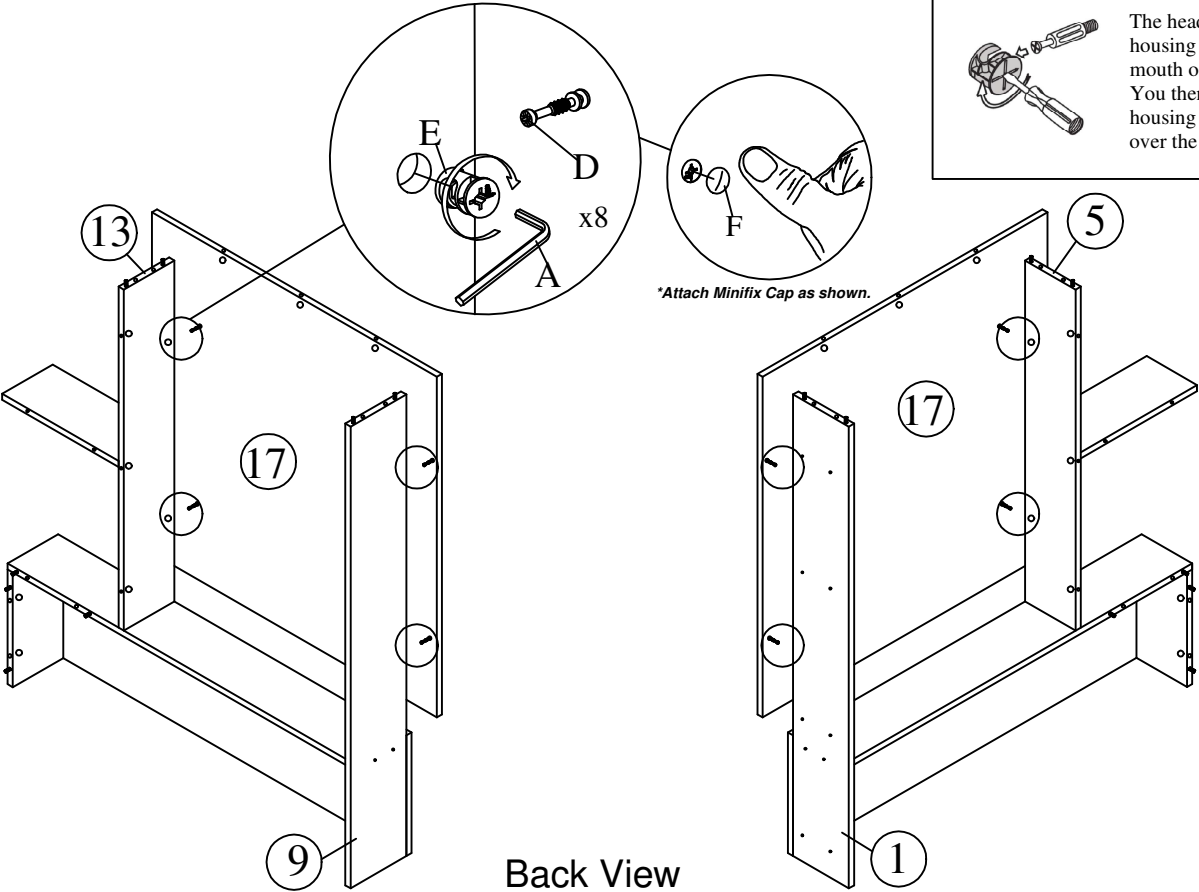


Step 10

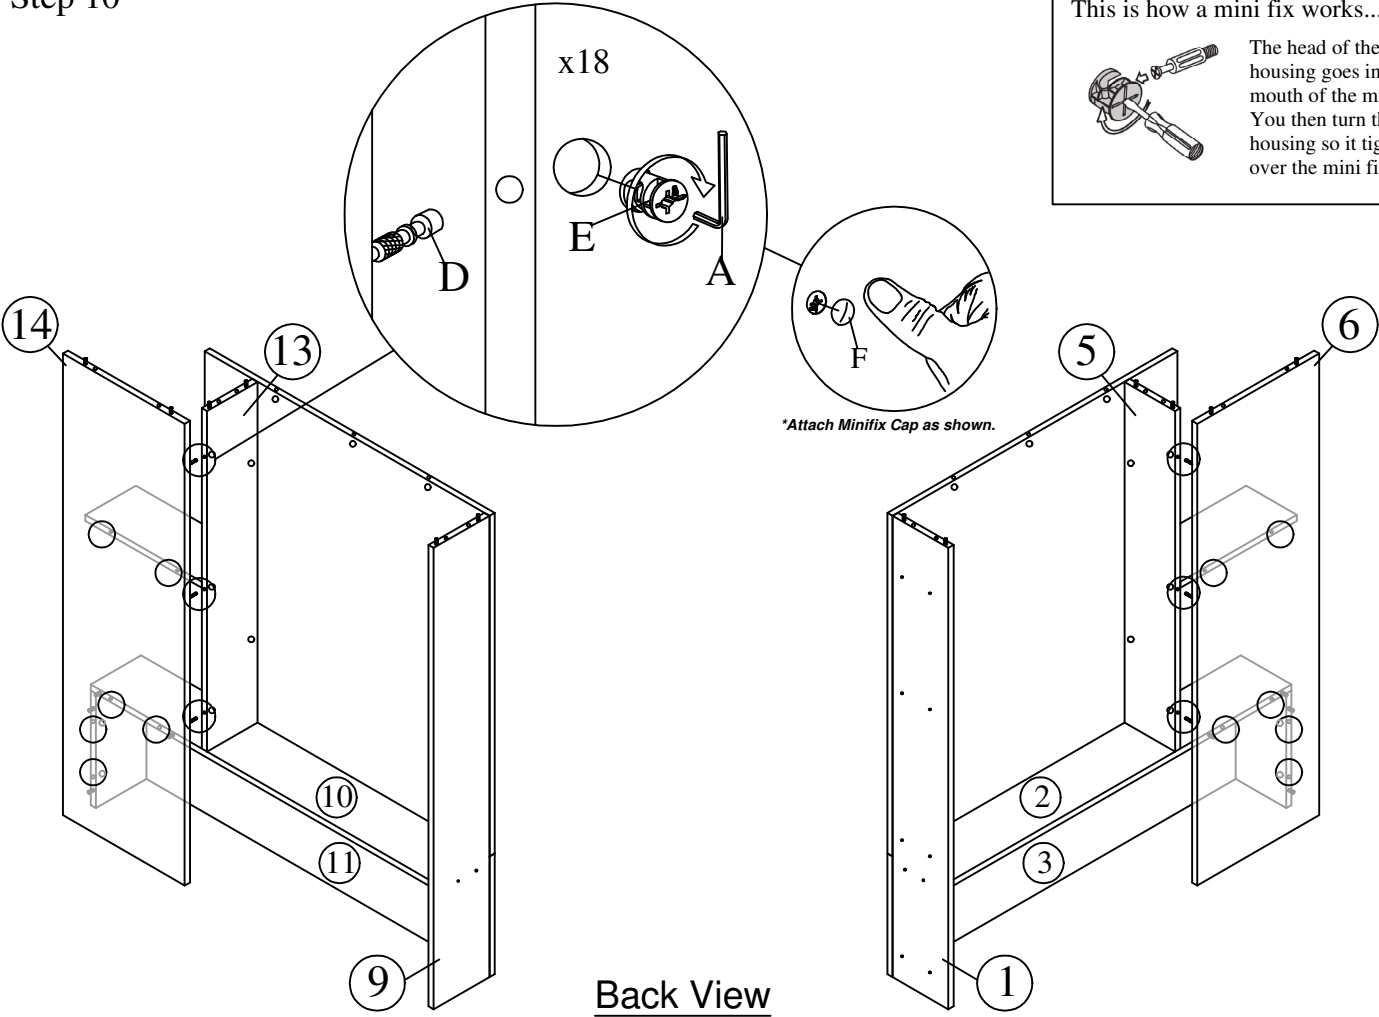


Step 11



This is how a mini fix works...

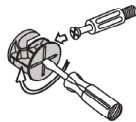



The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

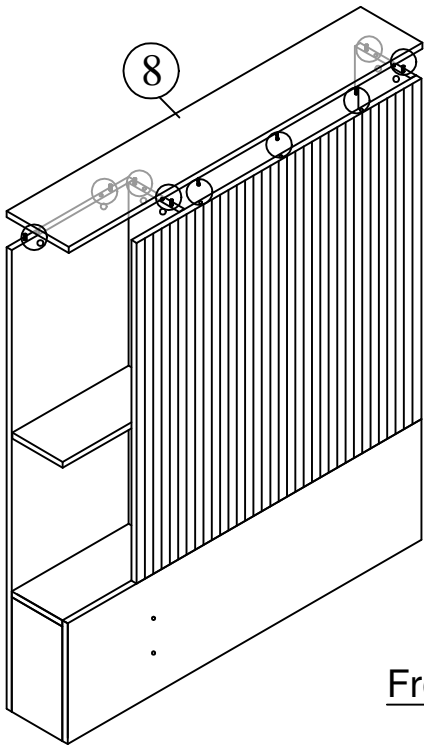

Front View

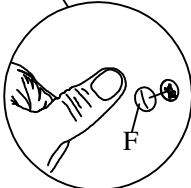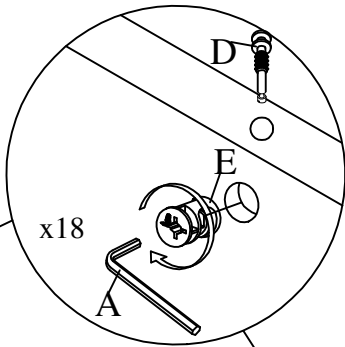


Step 12

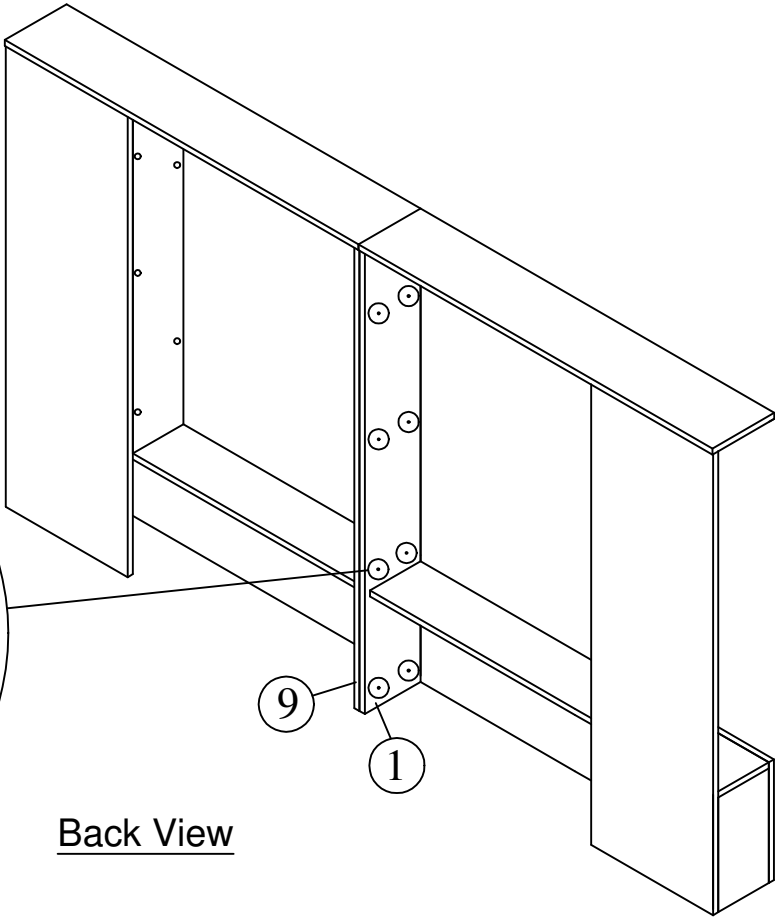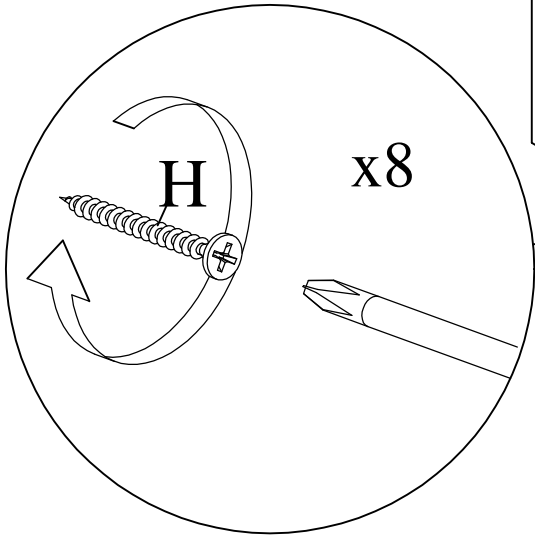


Back View

Step 13

IMPORTANT: Part 26 base bracket MUST BE ATTACHED before attaching Part 24 the pump mounting bracket.

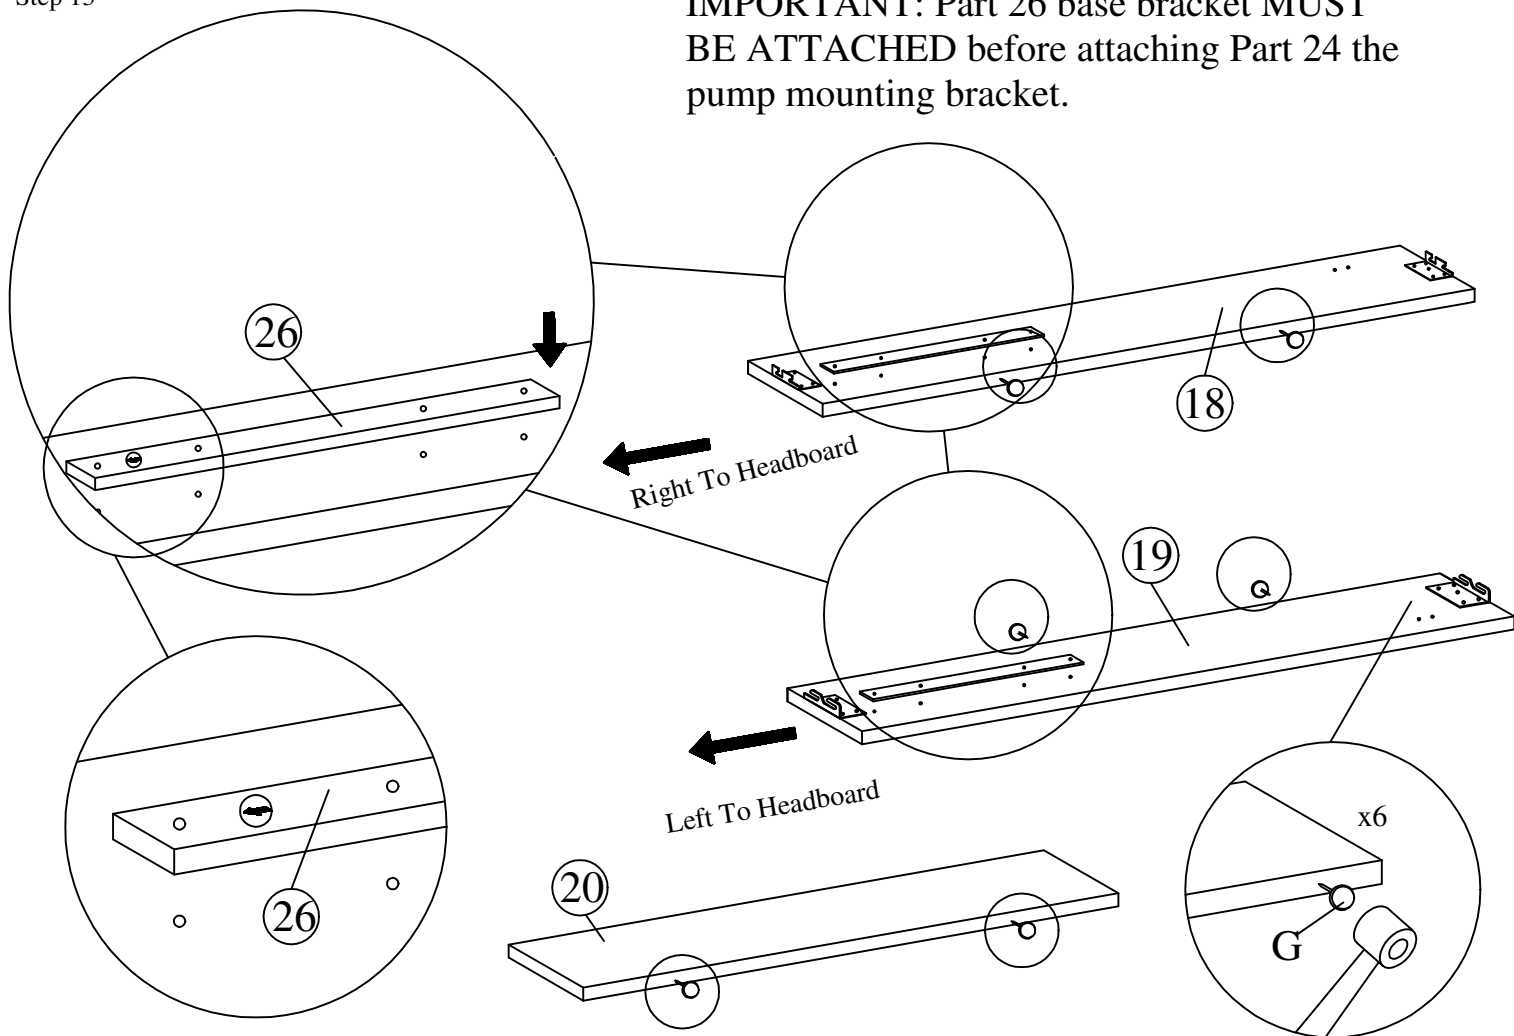


Step 14

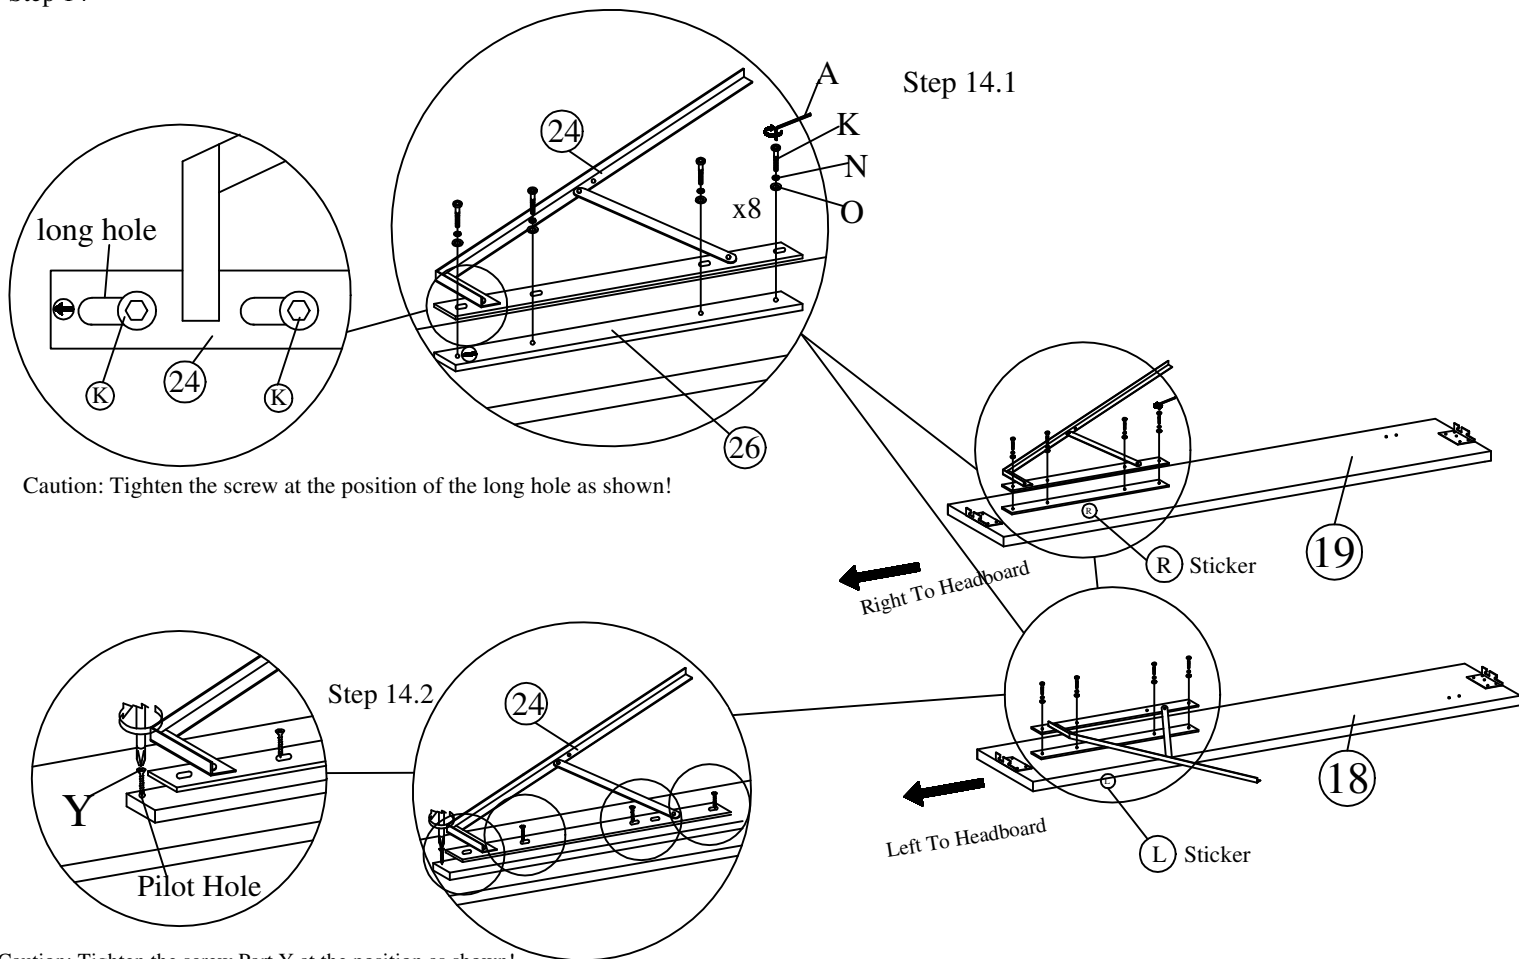


Caution: Tighten the screw Part Y at the position as shown!


Step 15

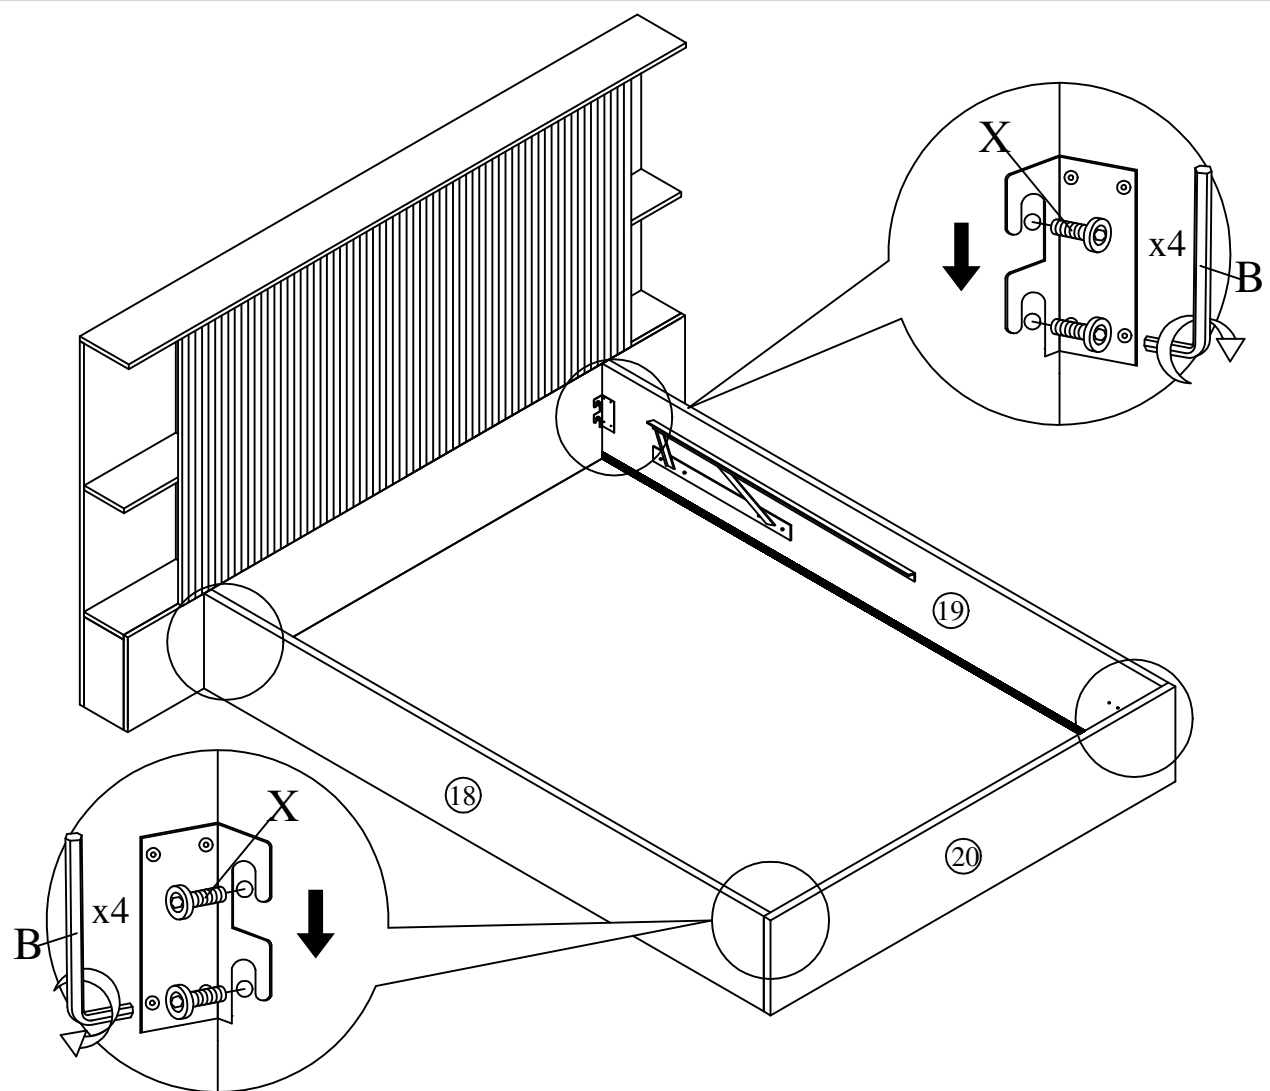


Step 16

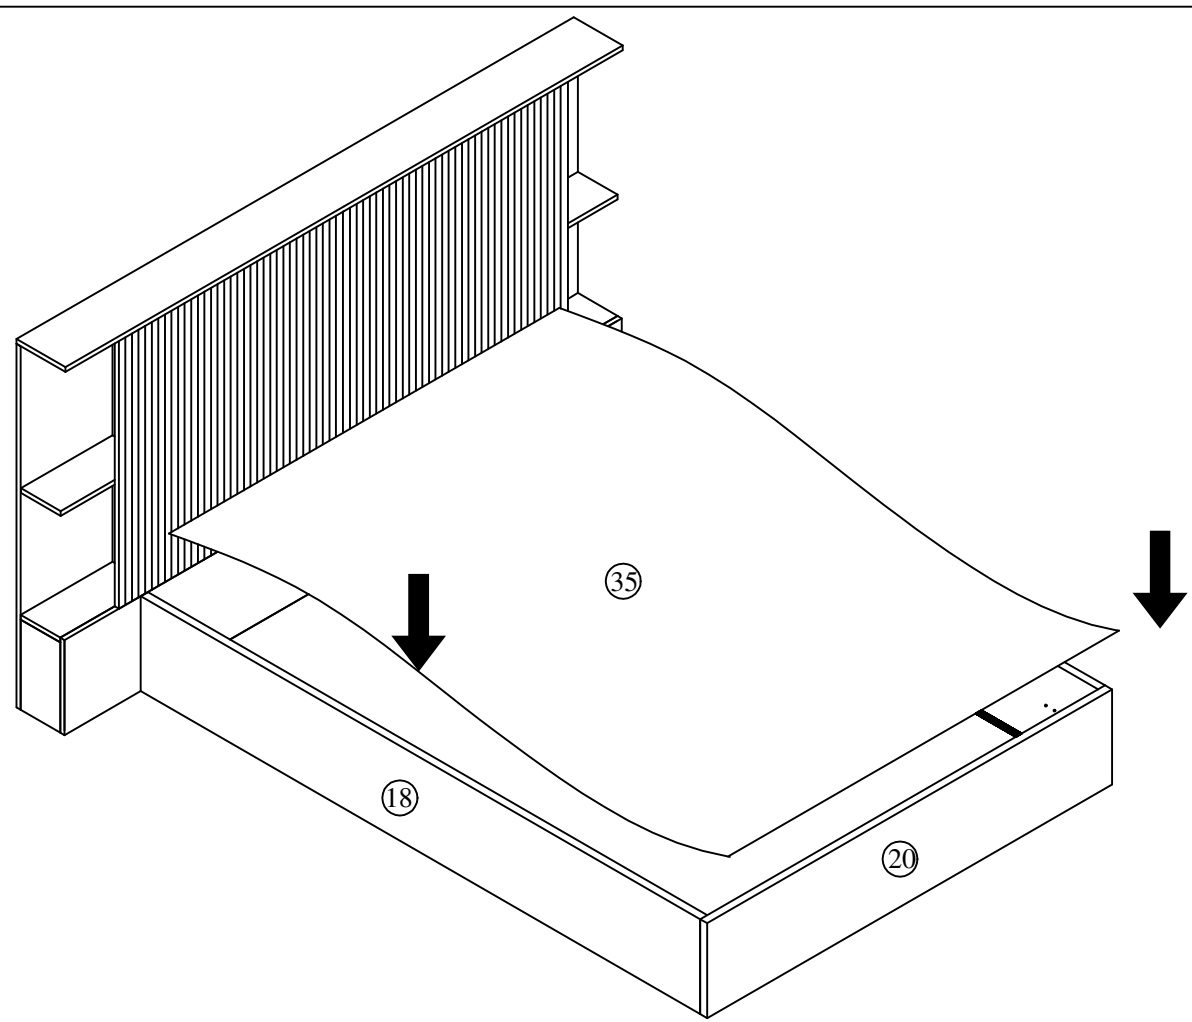


Step 17

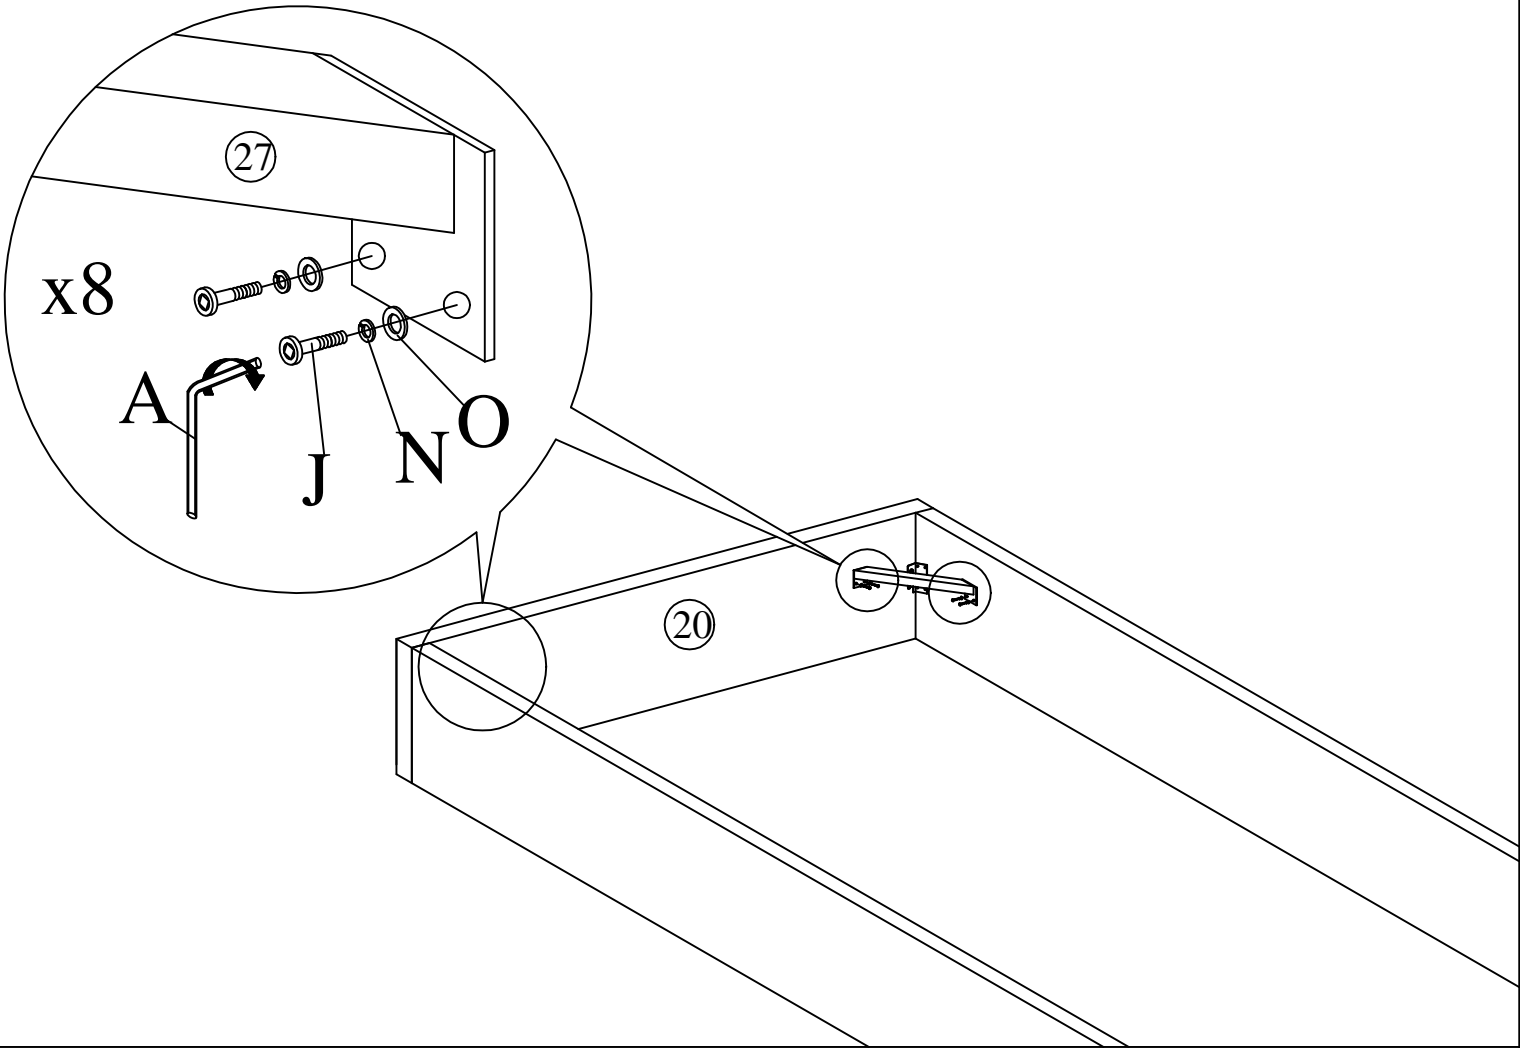


Step 18

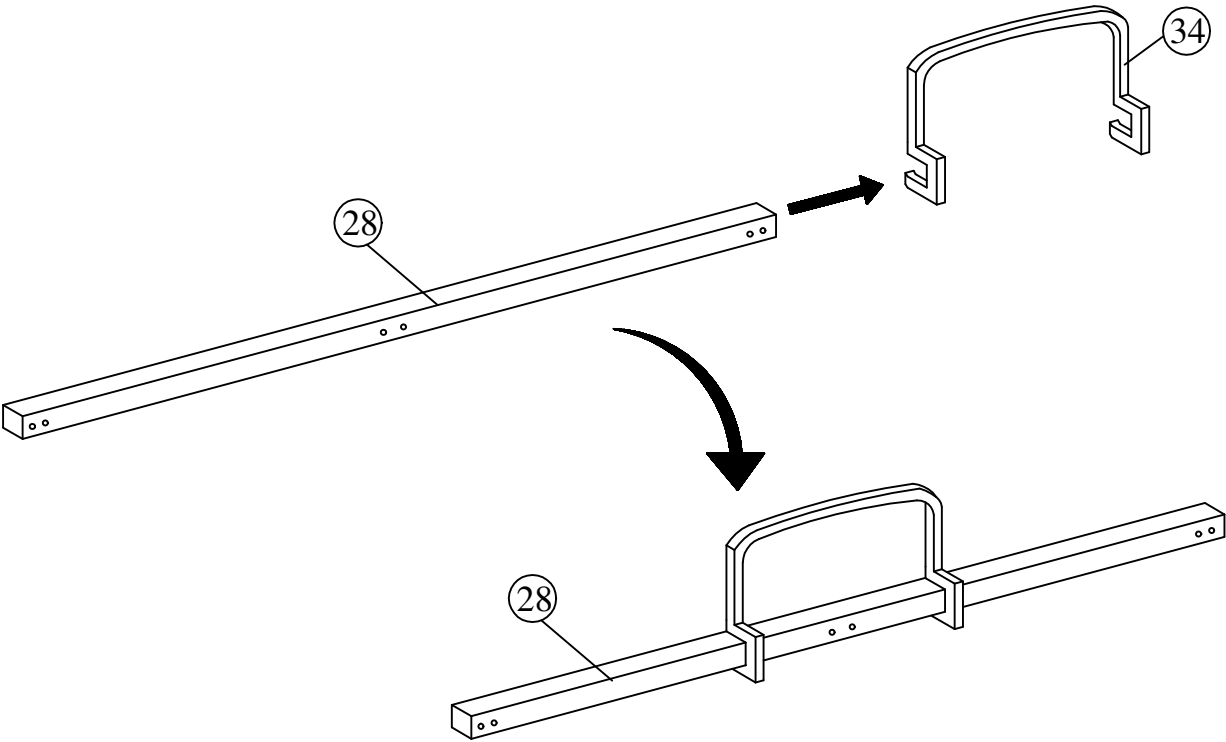


Step 19

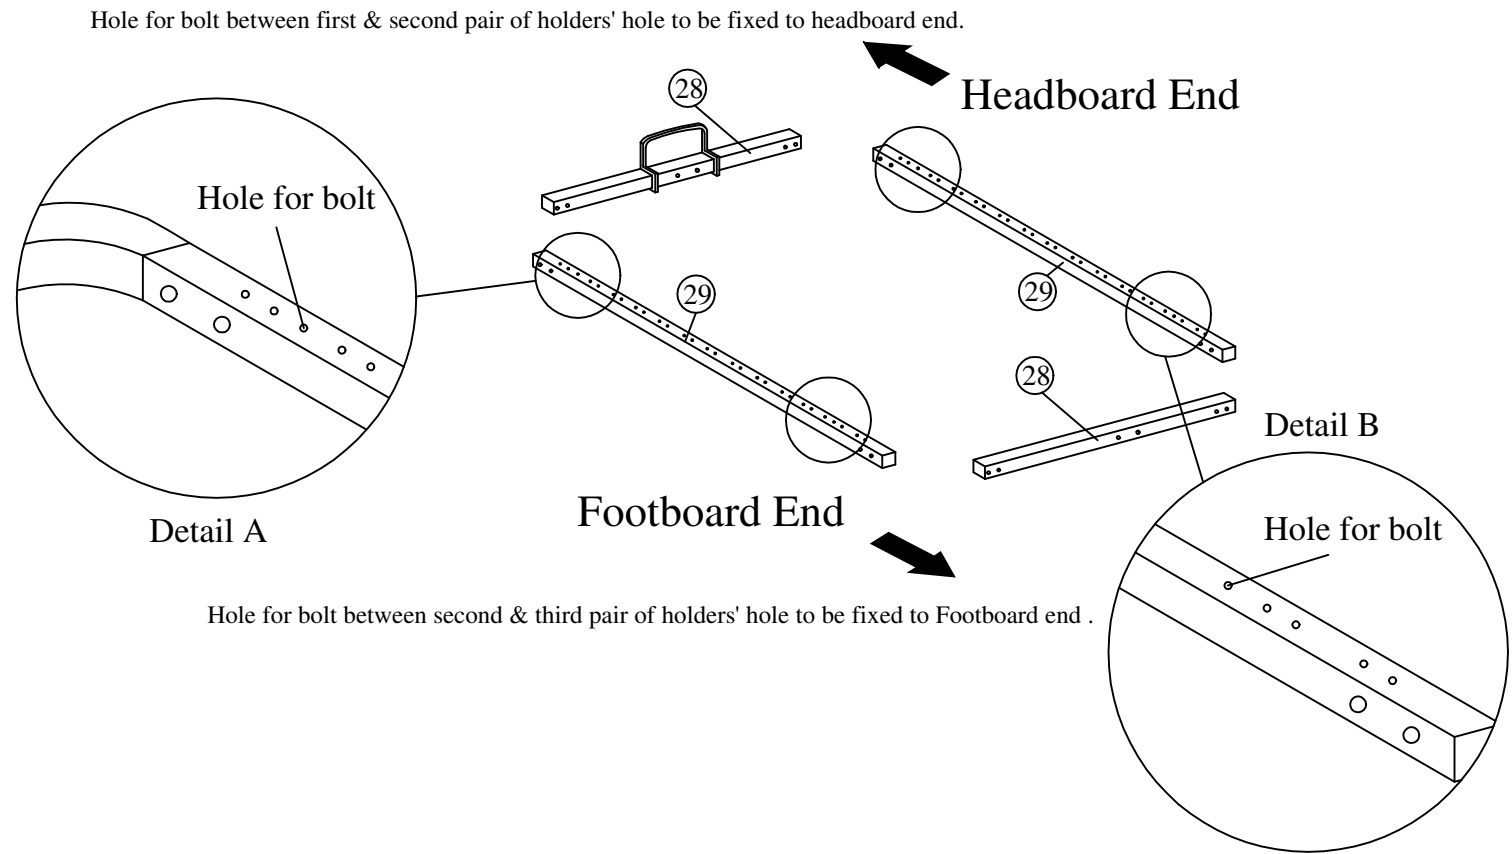


Step 20

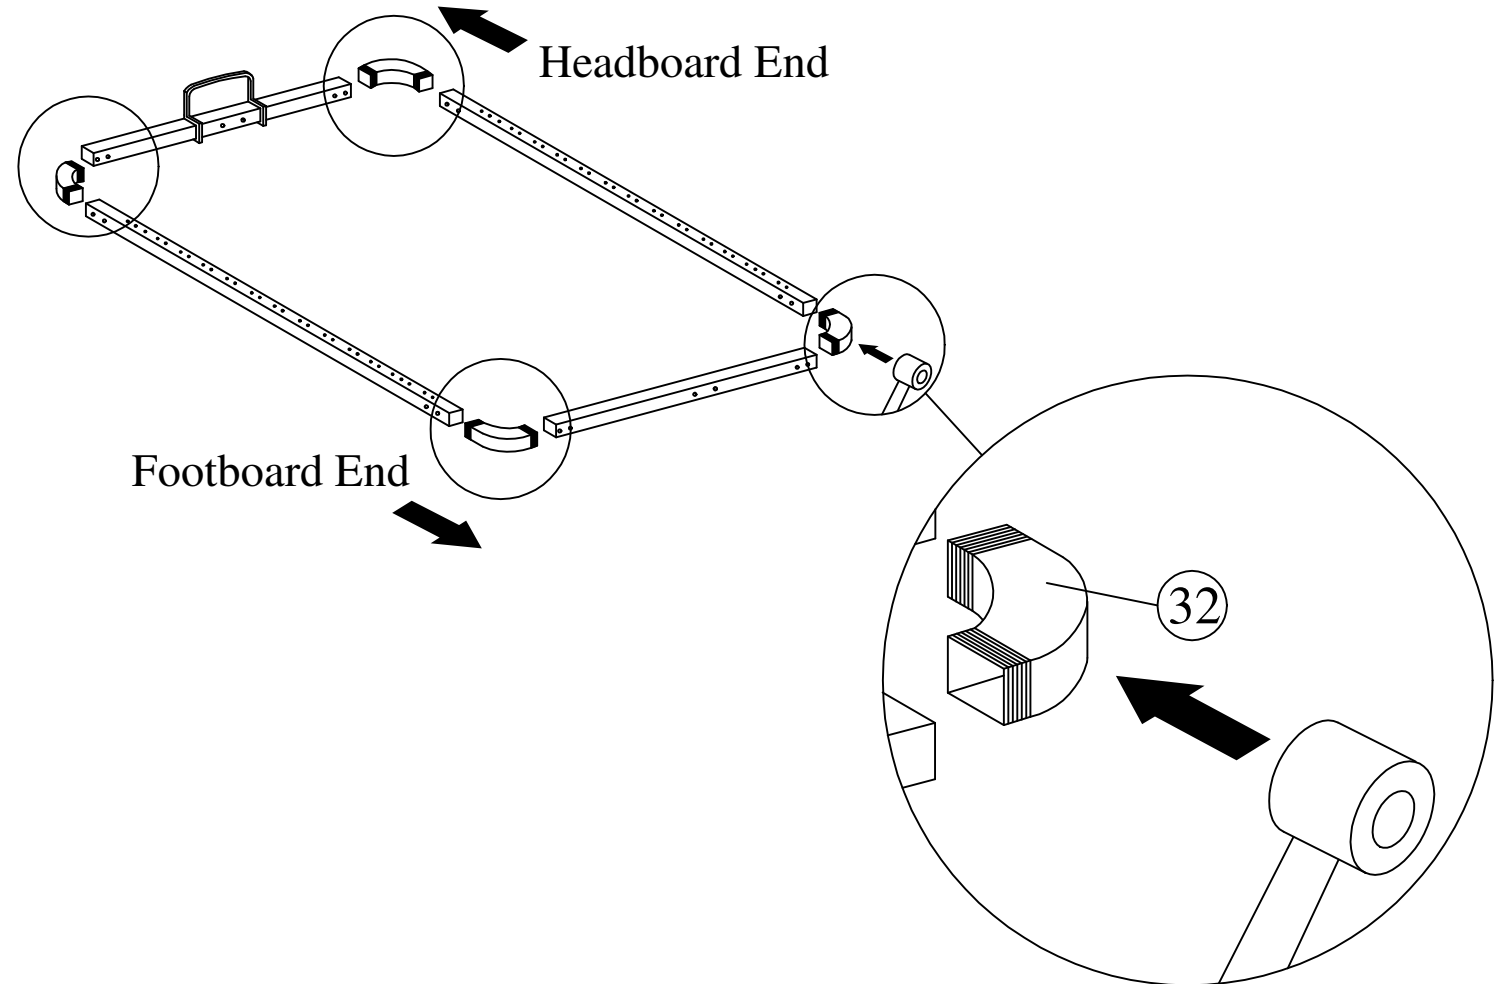


Step 21

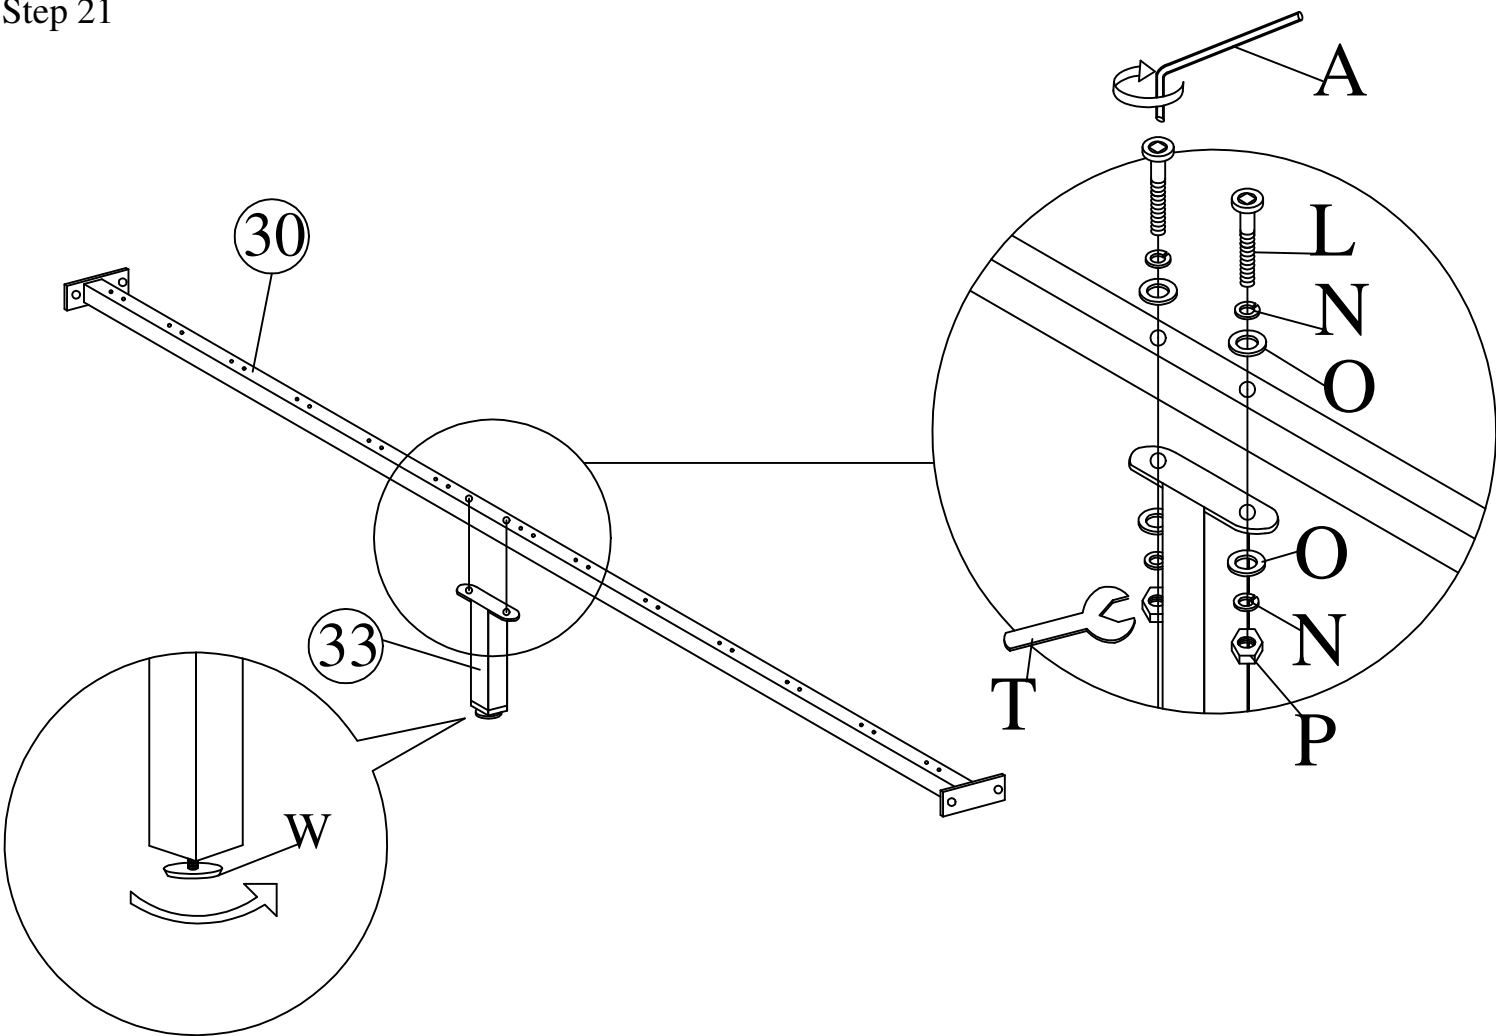

Step 22

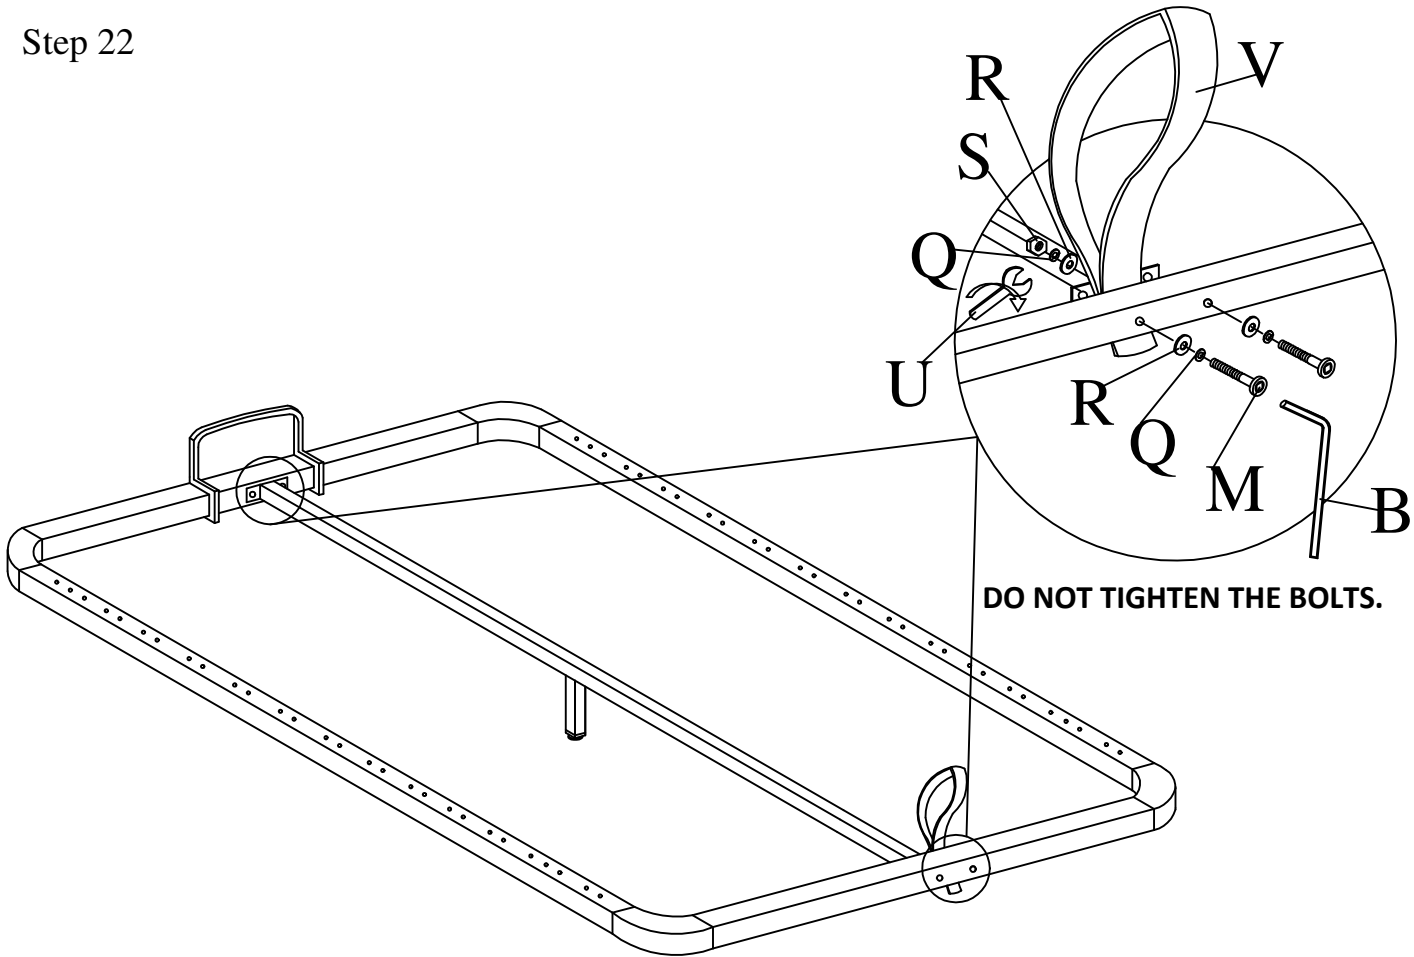


Step 23

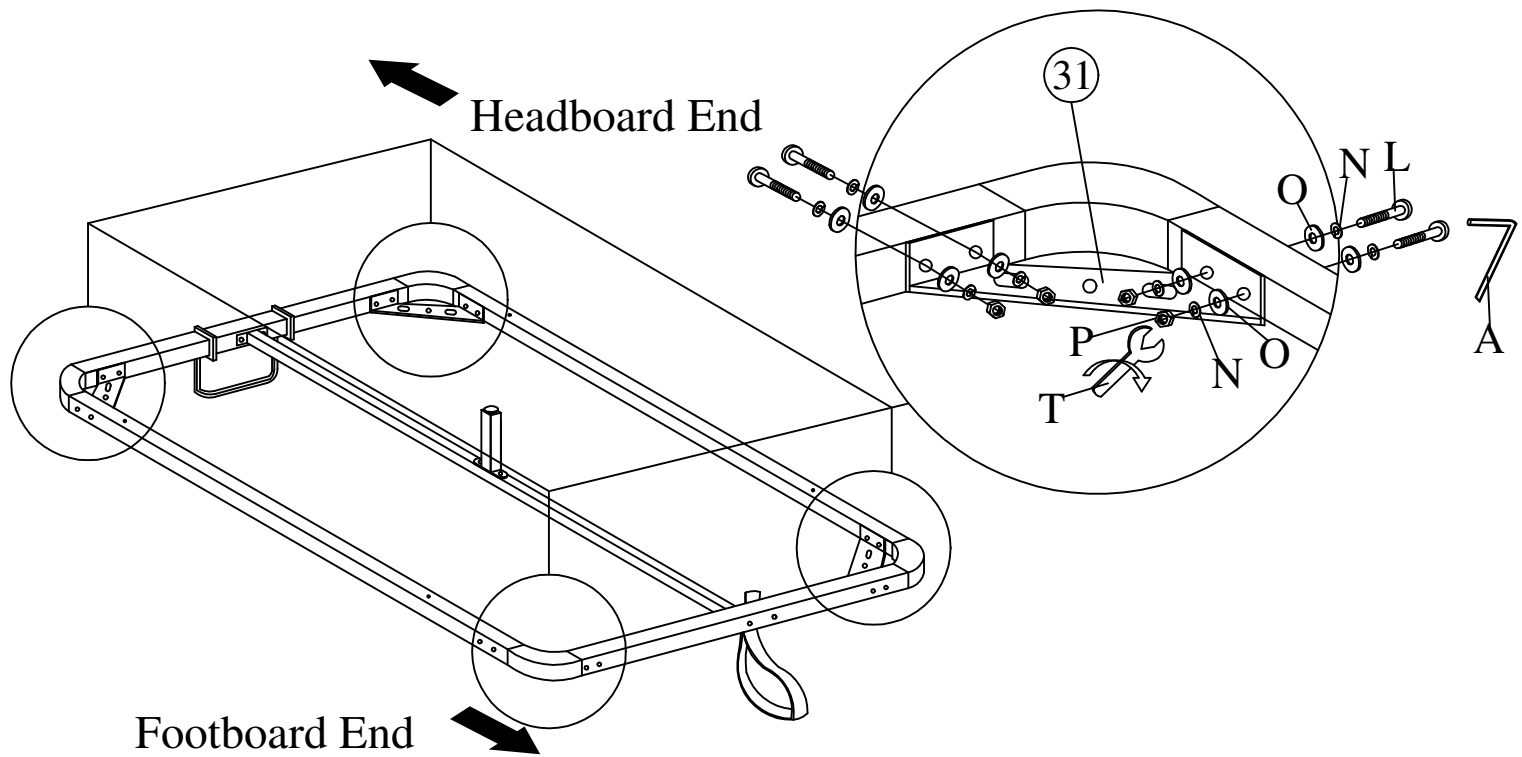


Step 24


Fit Slat Holders (21) first & attach to outside rail , then fit slat holders (22) and attach to center rail (Note : fit 21 first then 22)

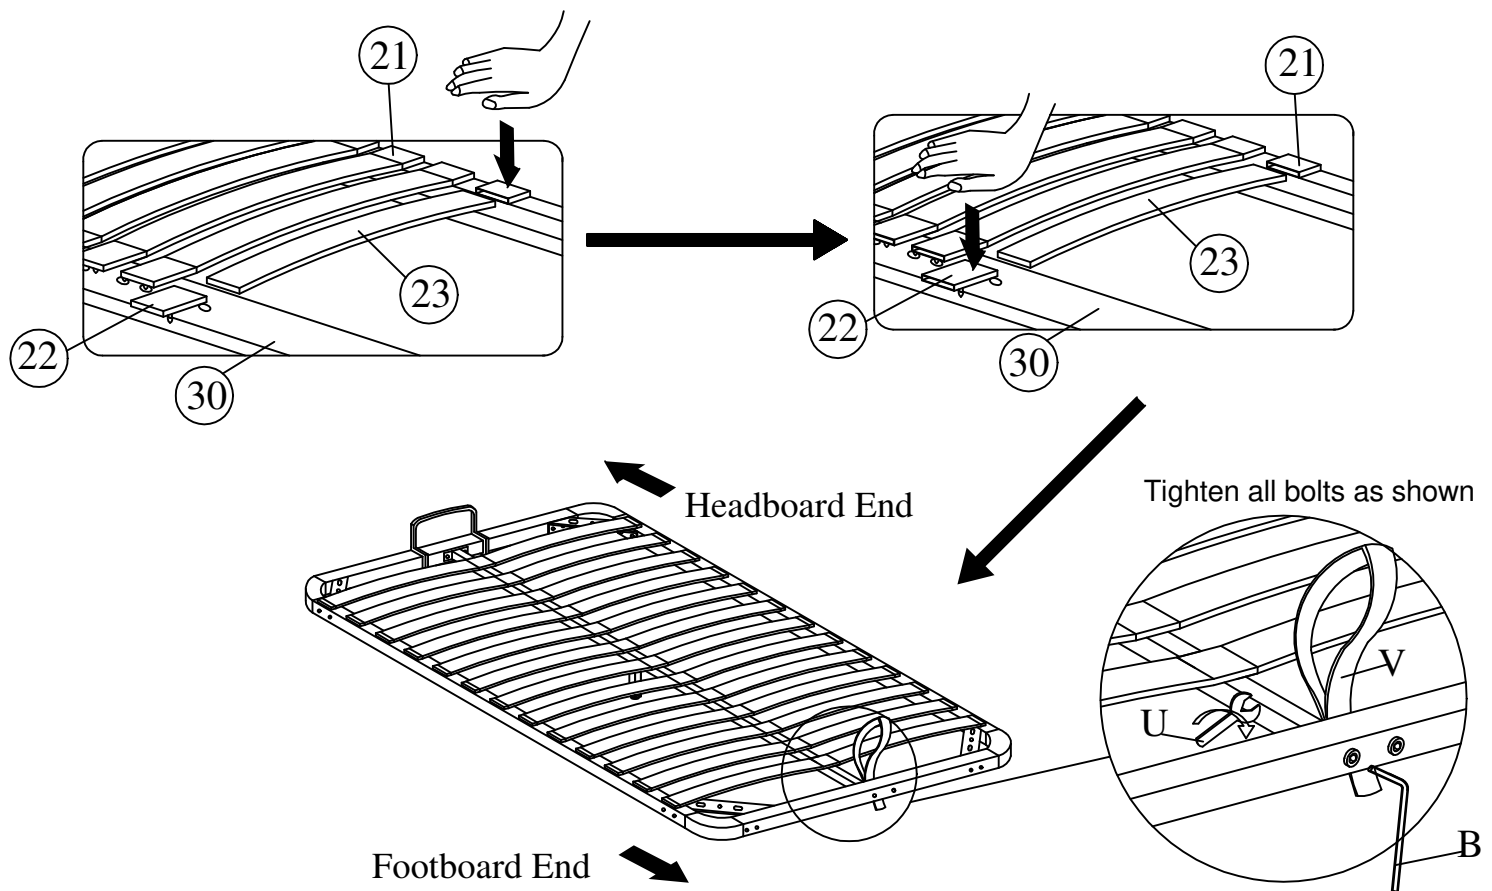

Step 25

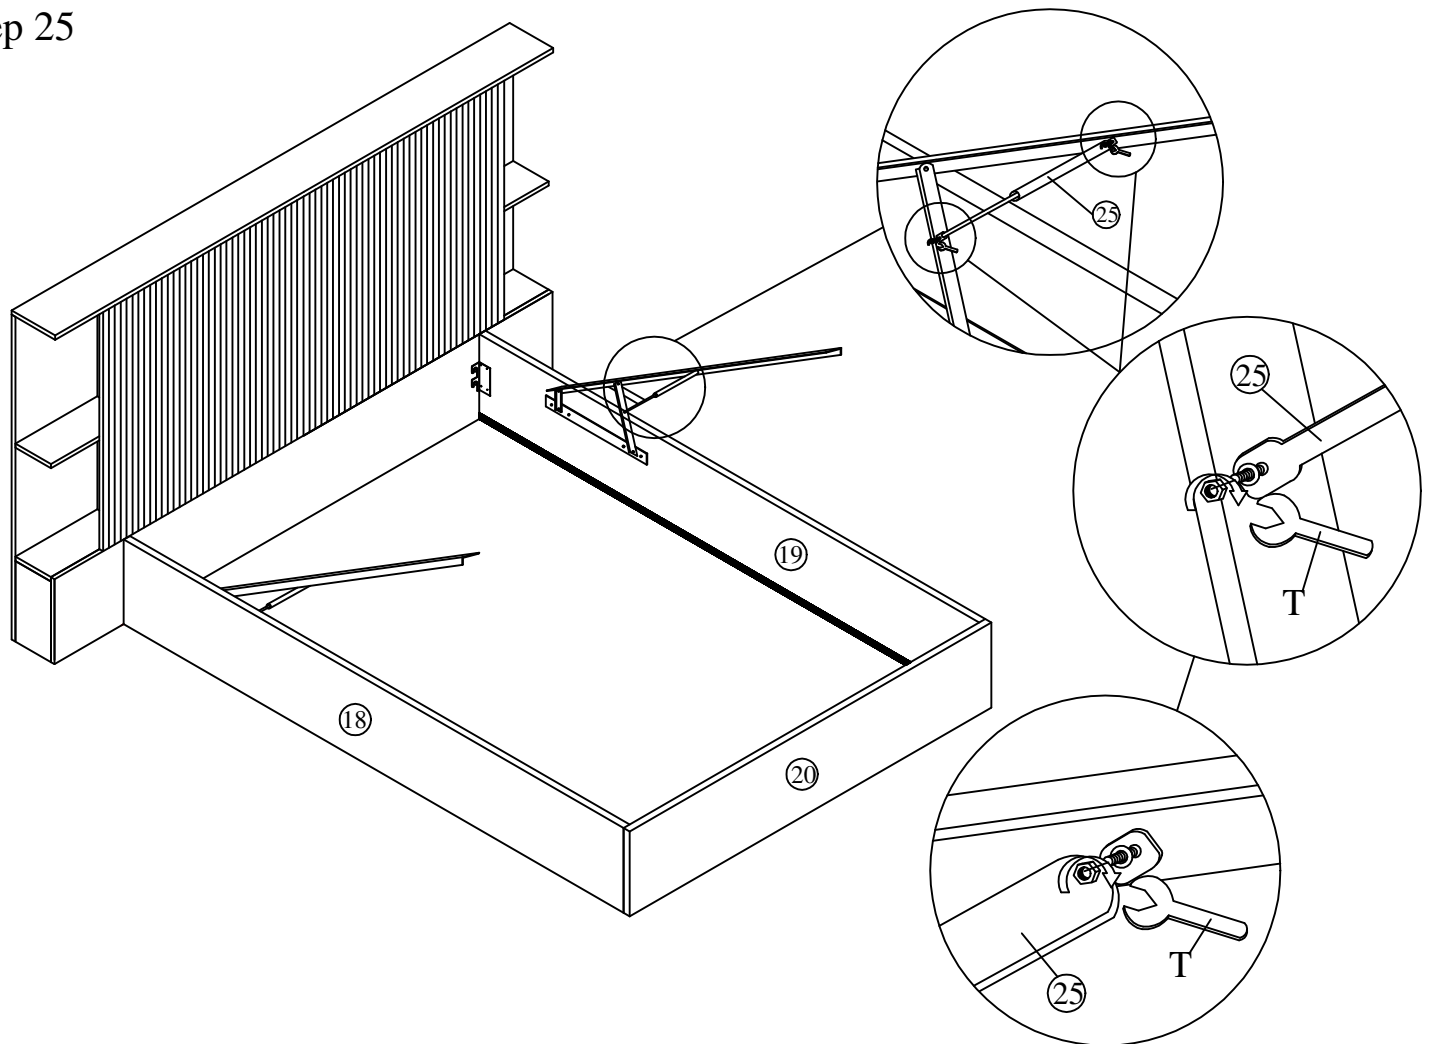

Step 26

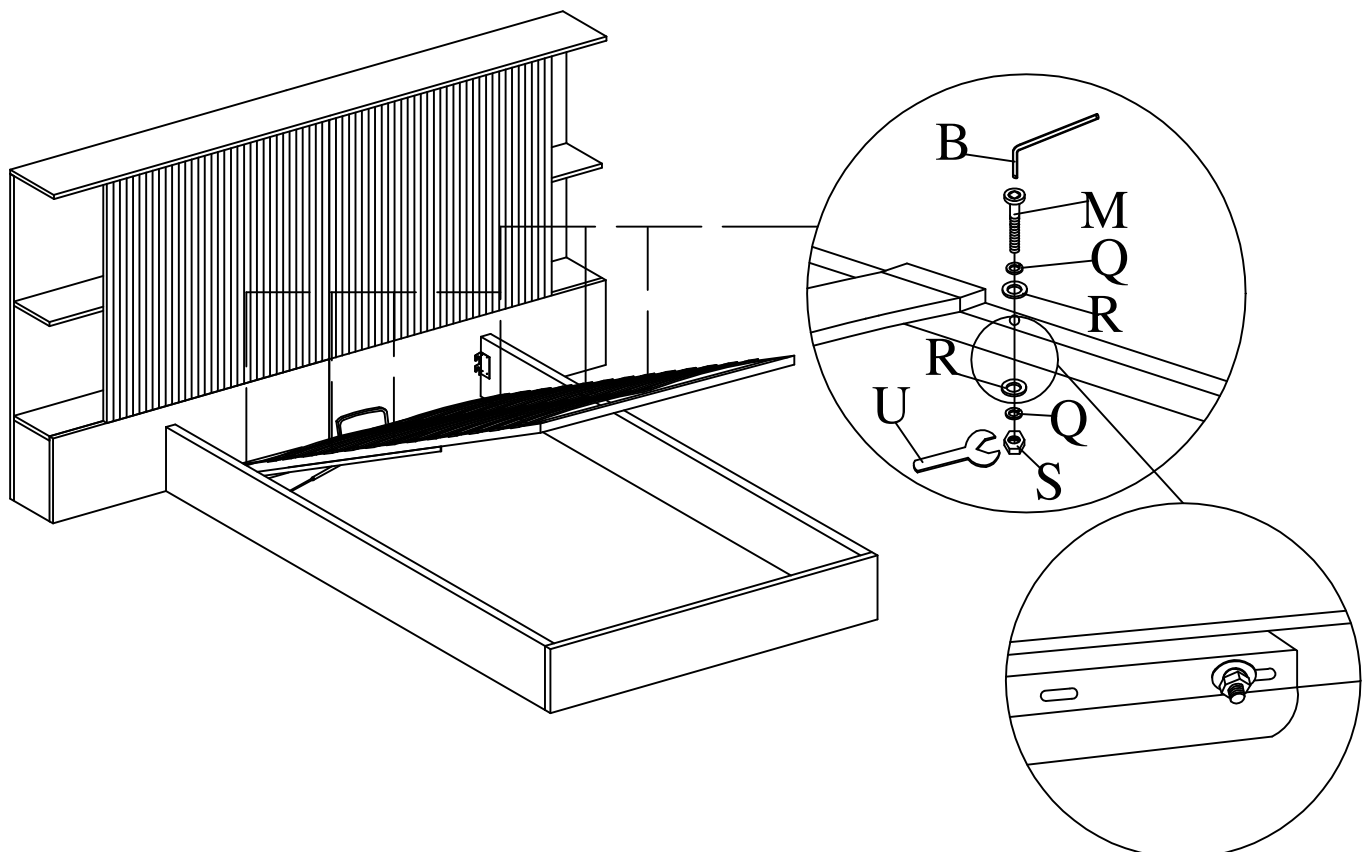

Caution: Adjust the screw at the position of the long hole as shown, then tighten the screw!

Additional Information:

- Caution. This bed uses a pressurised mechanism.
- Use caution when operating - Always use two hands at arm's length, and only where illustrated on the product.
- You must ensure the mattress is on the bed frame before lifting the mechanism - Failure to do so may result in injury.
- Please ensure Children and pets are kept away from the bed when operating the bed mechanism.
- If removing the mattress, make sure that the frame is secured as it could flip open.
- Only use the storage compartment when the frame is fully raised in the 'up' position.
- No children and animals are left unattended when the frame is in the 'up' position.
- Do not remain on the bed whilst the lifting mechanism is in use.
 - Beware of Entrapment - Keep both hands clear of mechanism when operating the mechanism.
- When lifting the bed remove all bedding - Except the fitted sheet.

