


TAYLOR OTTOMAN BED WITH BEDSIDE TABLE-DOUBLE
STAYDOBS-WOOD/STAYDOBS-BLK


Exploded view diagram of a bed frame assembly. The diagram shows the main bed frame structure, including the headboard, footboard, side rails, and slats. A separate inset shows the assembly of the slats (19) with the support rails (21). The parts are numbered 1 through 33. The parts list table is as follows:

AE	CSK Screw M4x32mm Black	AE	CSK Screw M4x32mm Black
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
10	10	10	10
11	11	11	11
12	12	12	12
13	13	13	13
14	14	14	14
15	15	15	15
16	16	16	16
17	17	17	17
18	18	18	18
19	19	19	19
20	20	20	20
21	21	21	21
22	22	22	22
23	23	23	23
24	24	24	24
25	25	25	25
26	26	26	26
27	27	27	27
28	28	28	28
29	29	29	29
30	30	30	30
31	31	31	31
32	32	32	32
33	33	33	33

Step 1

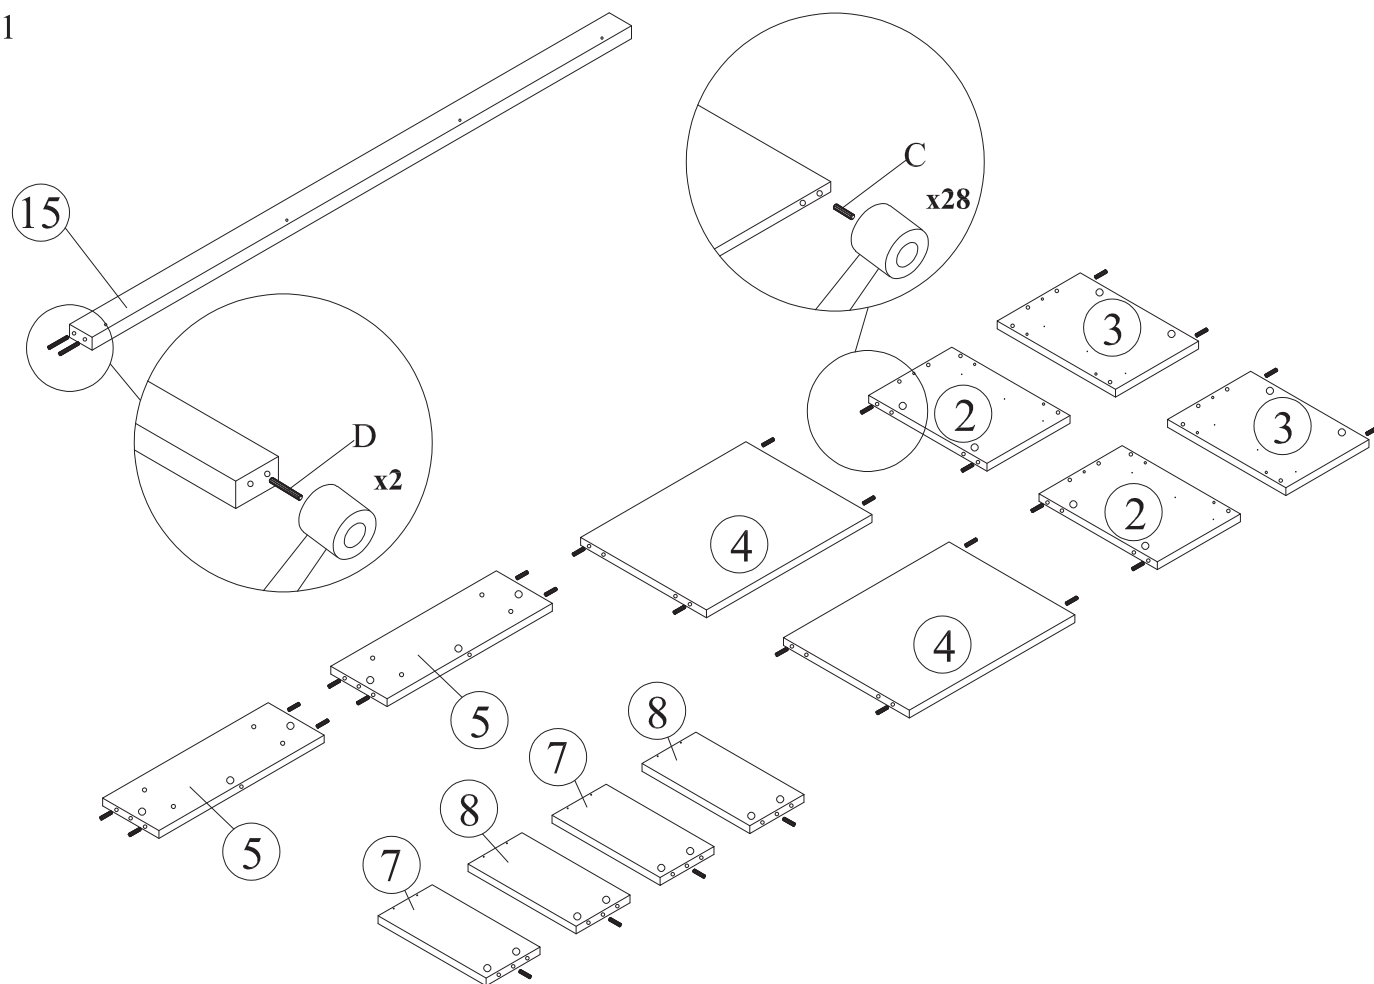


Step 2

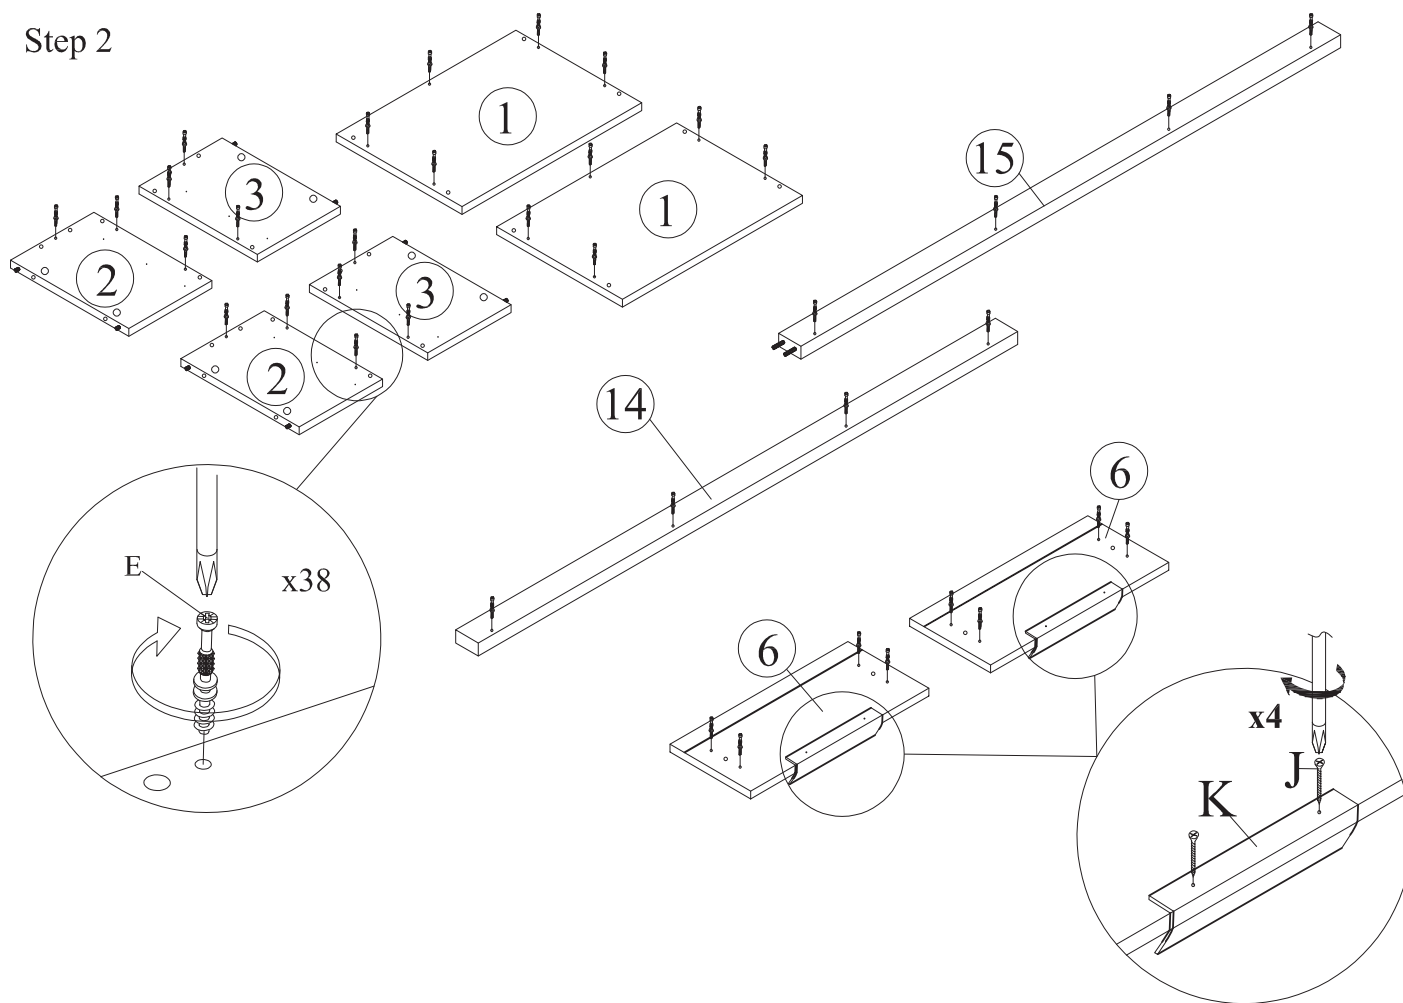


Step 3

x2

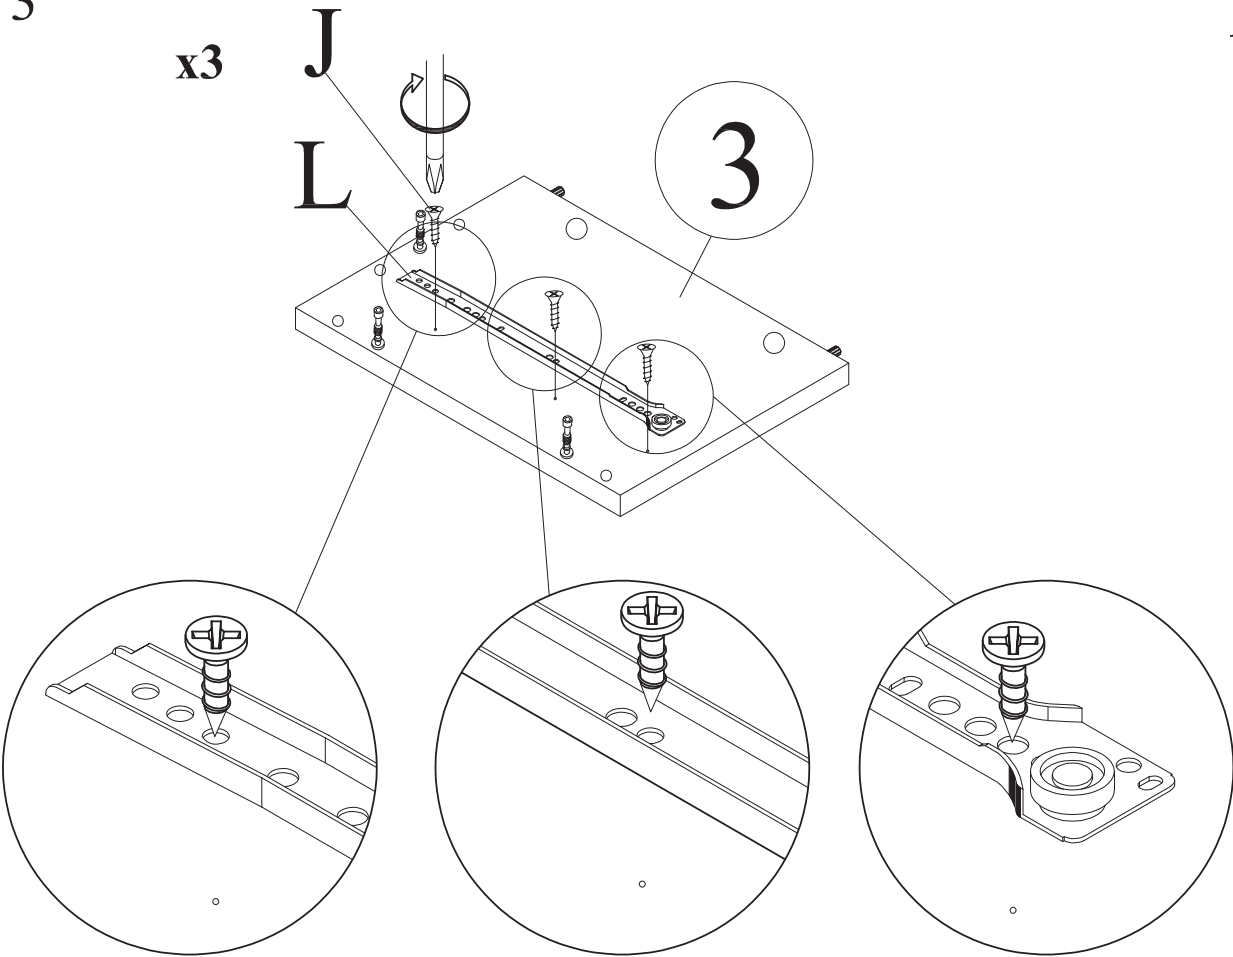


Step 4


x2

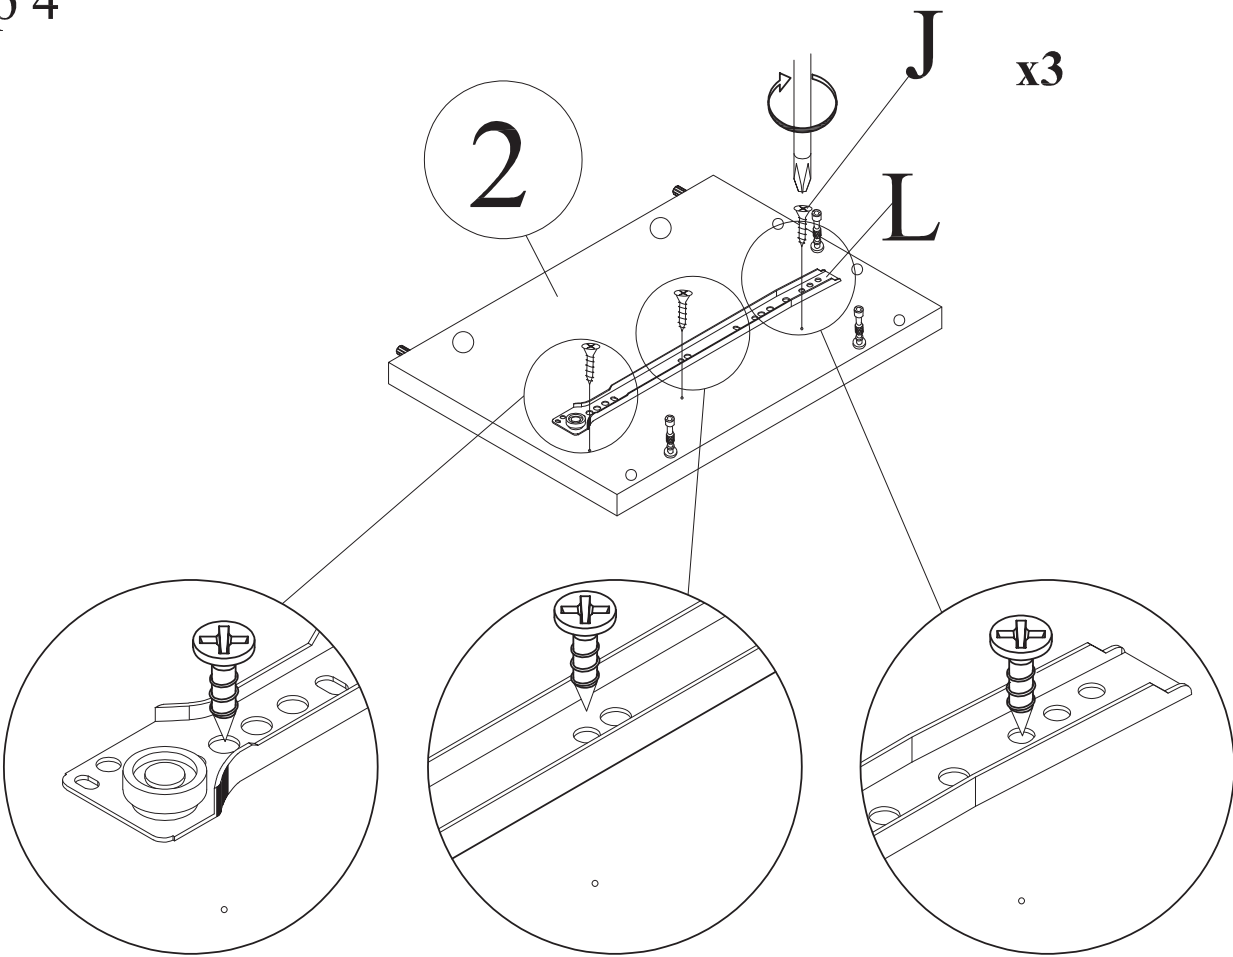

Step 5

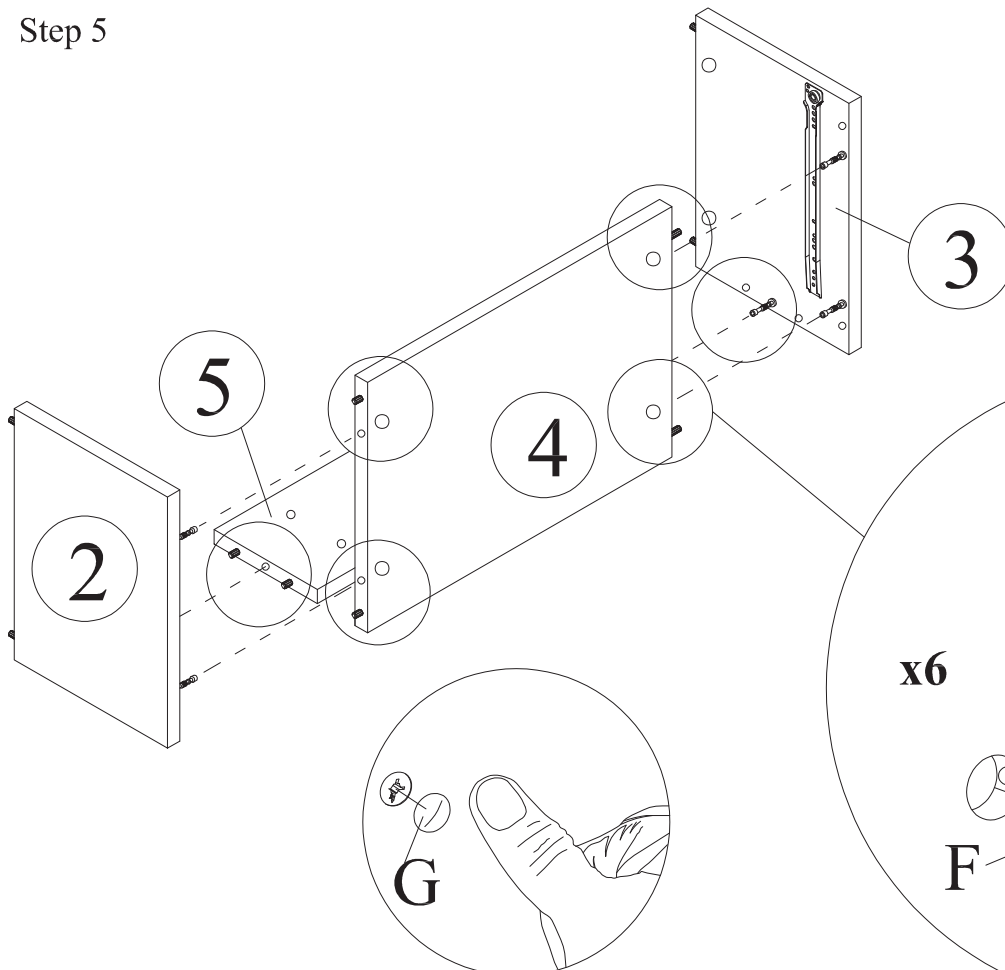

This is how a mini fix works...




The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.


x2

**Attach Minifix Cap as shown.*

Step 6

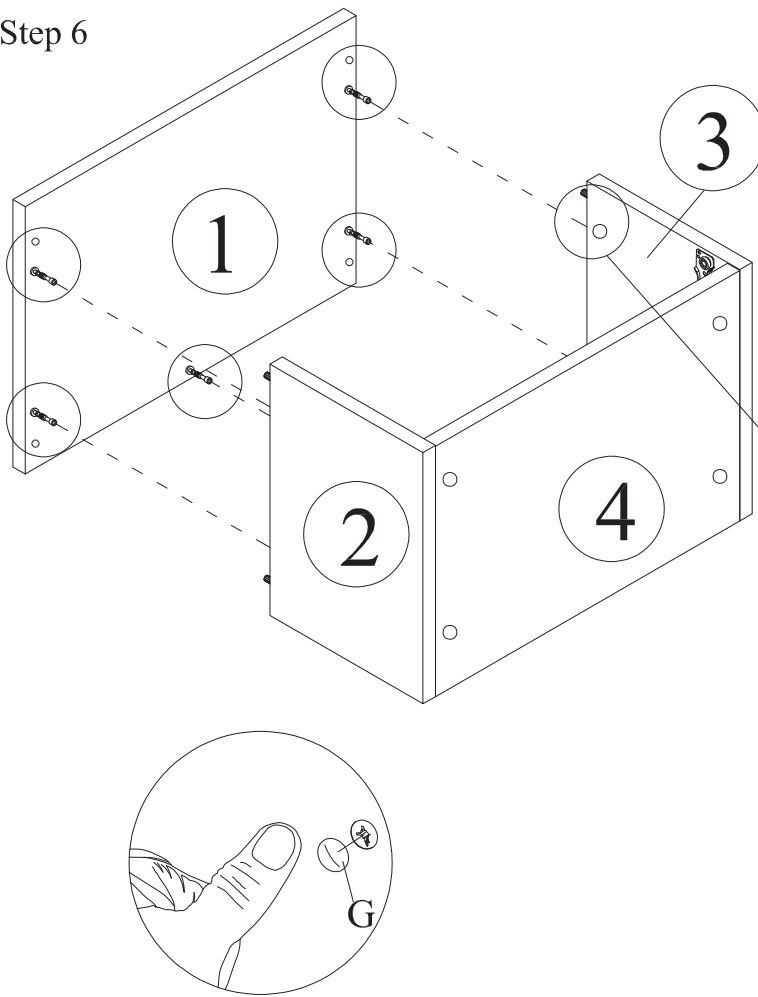

This is how a mini fix works...




The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

x2

**Attach Minifix Cap as shown.*


Step 7

This is how a mini fix works...




The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

Step 7.1

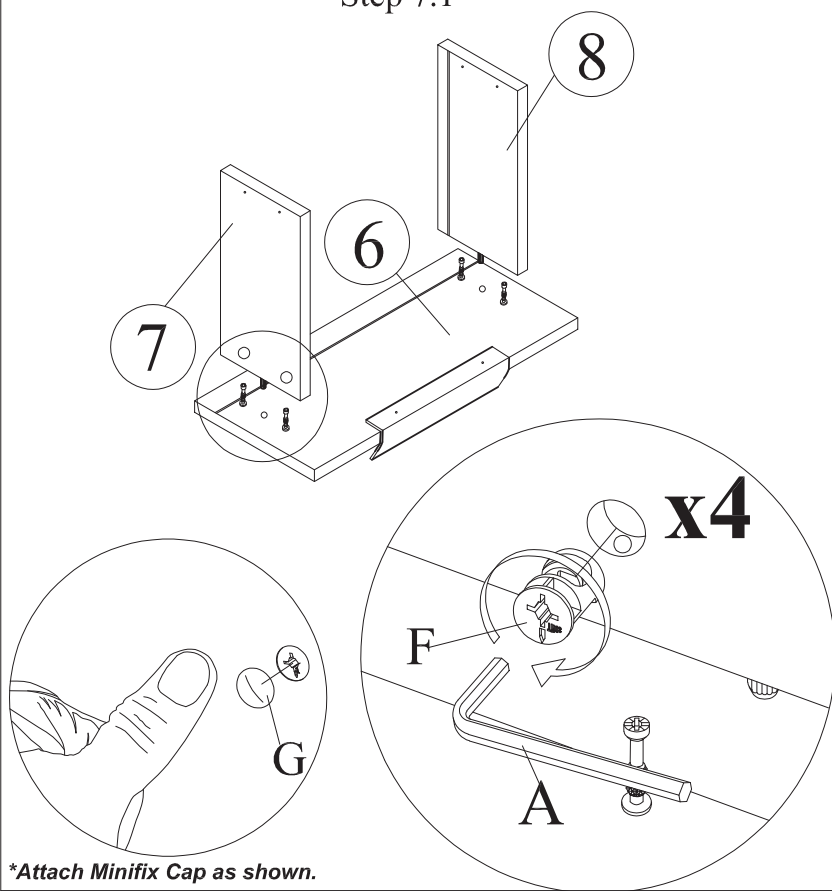

x2


Step 7.2

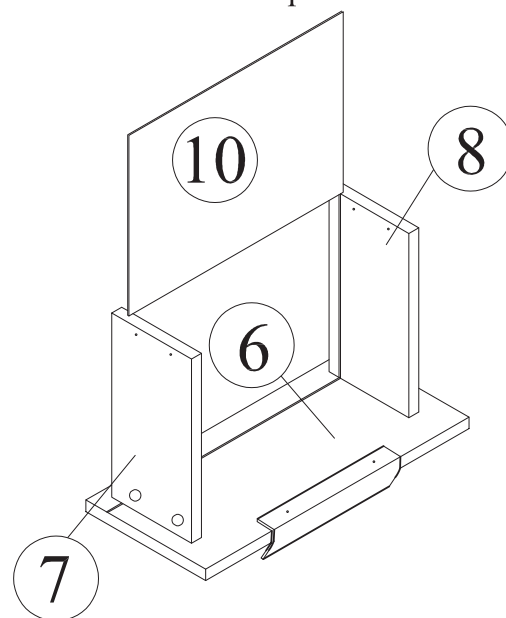


Step 8

x2

Step 8.1

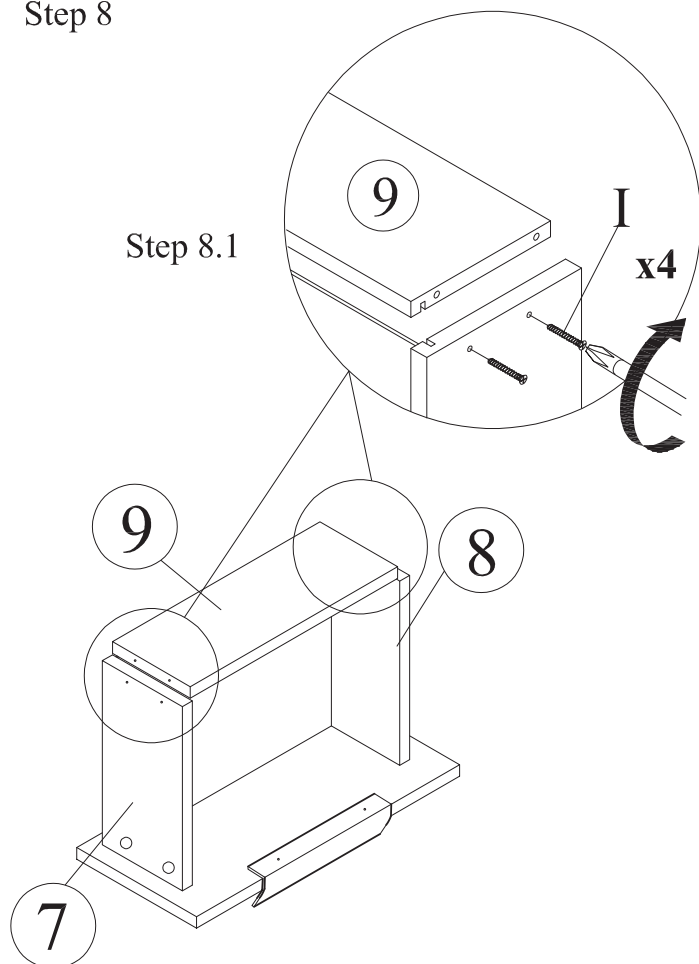


Step 8.2

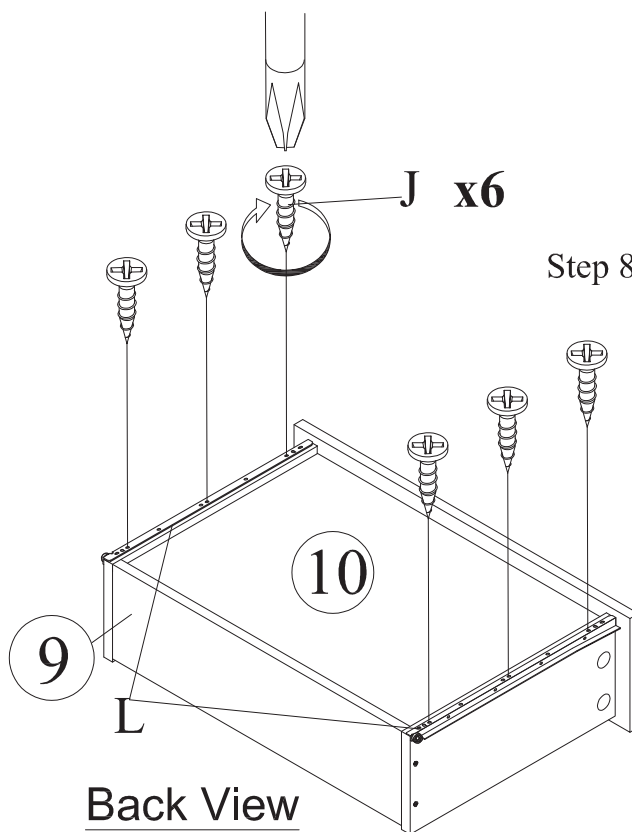


Step 9

Back View

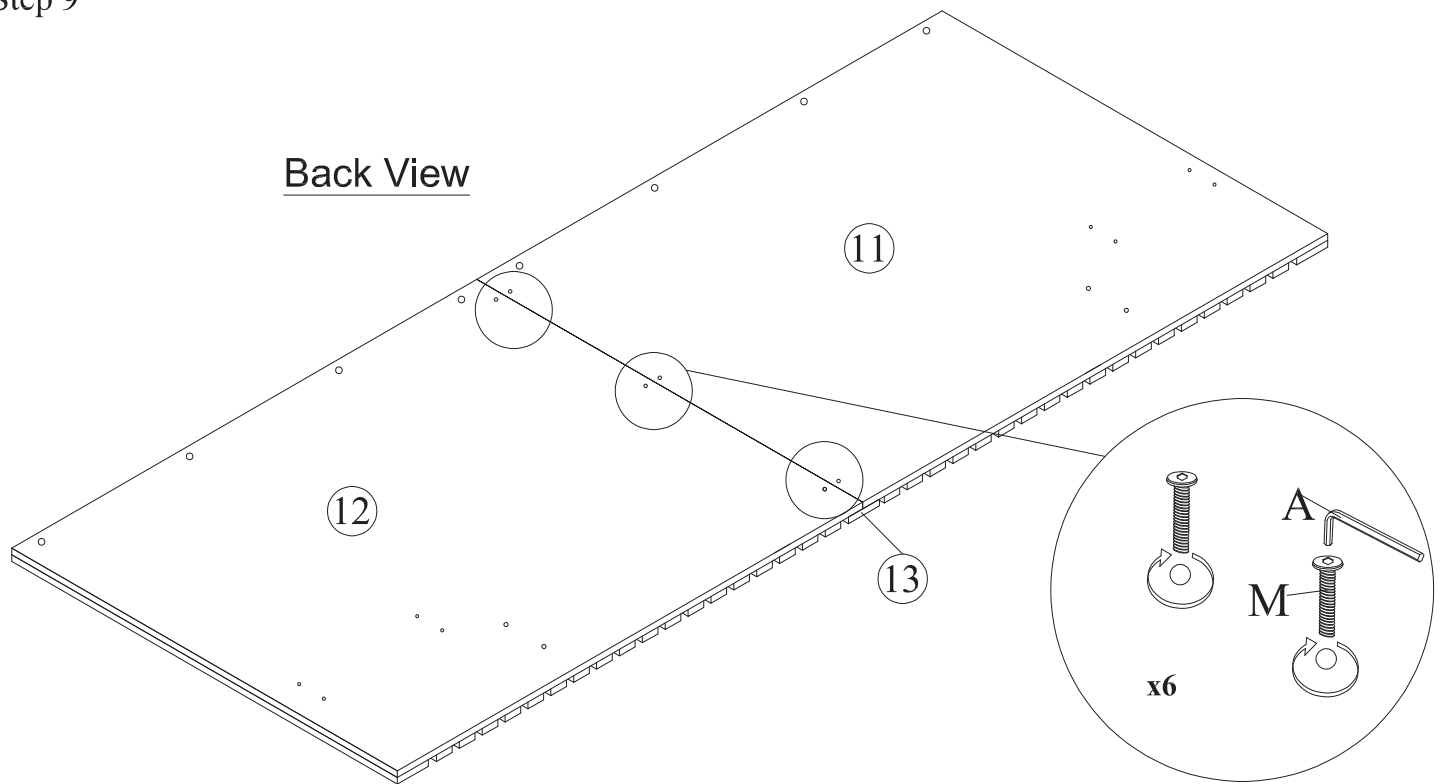


Step 10


Back View

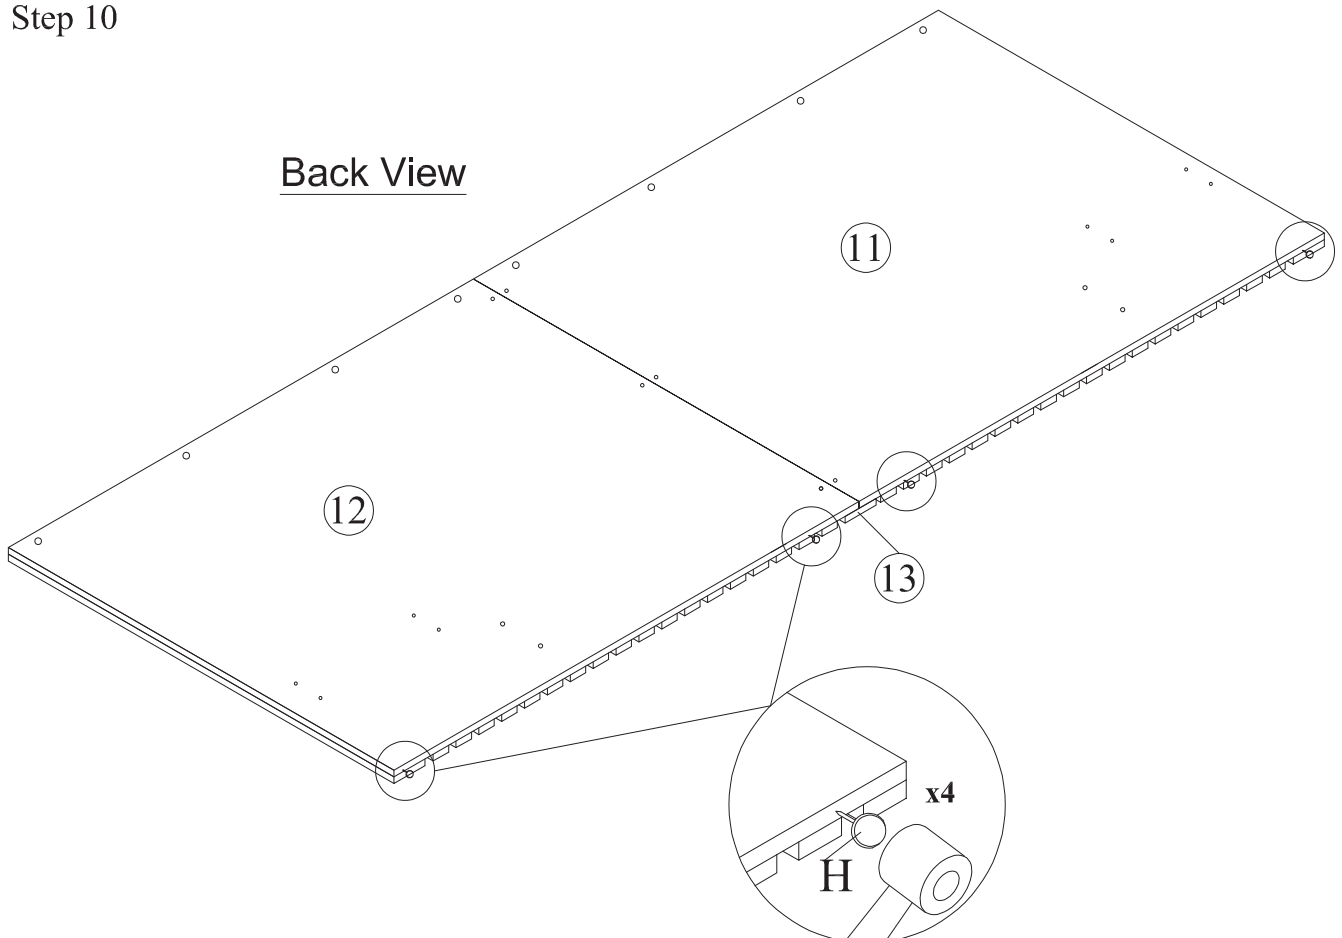


IMPORTANT: Part 24 base bracket MUST BE ATTACHED before attaching Part 22 the pump mounting bracket.

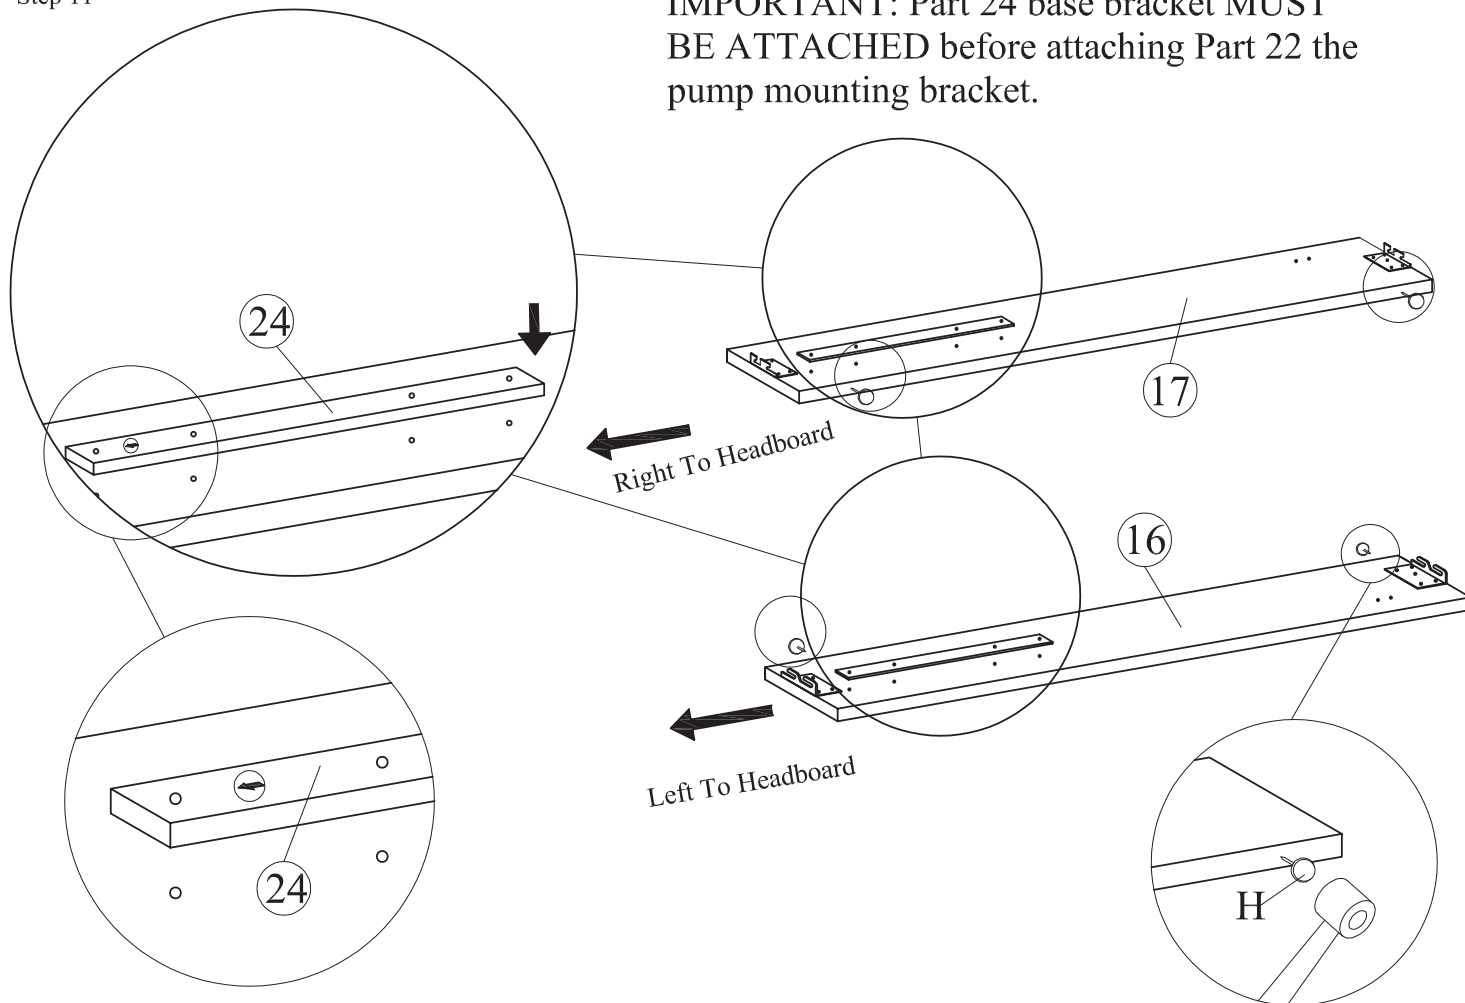


Step 12.1

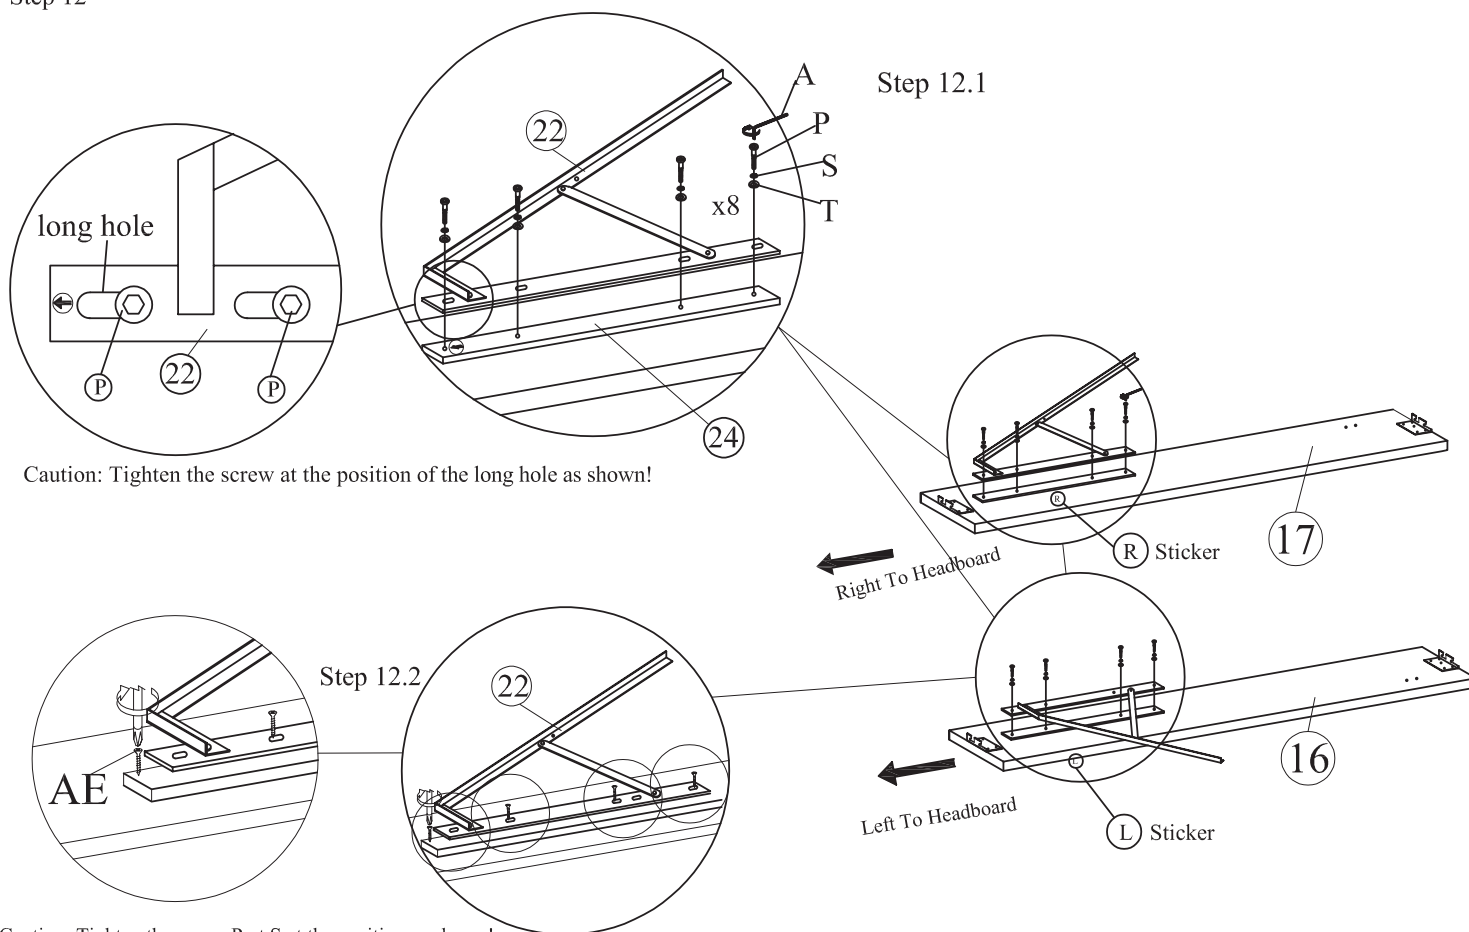


Step 13

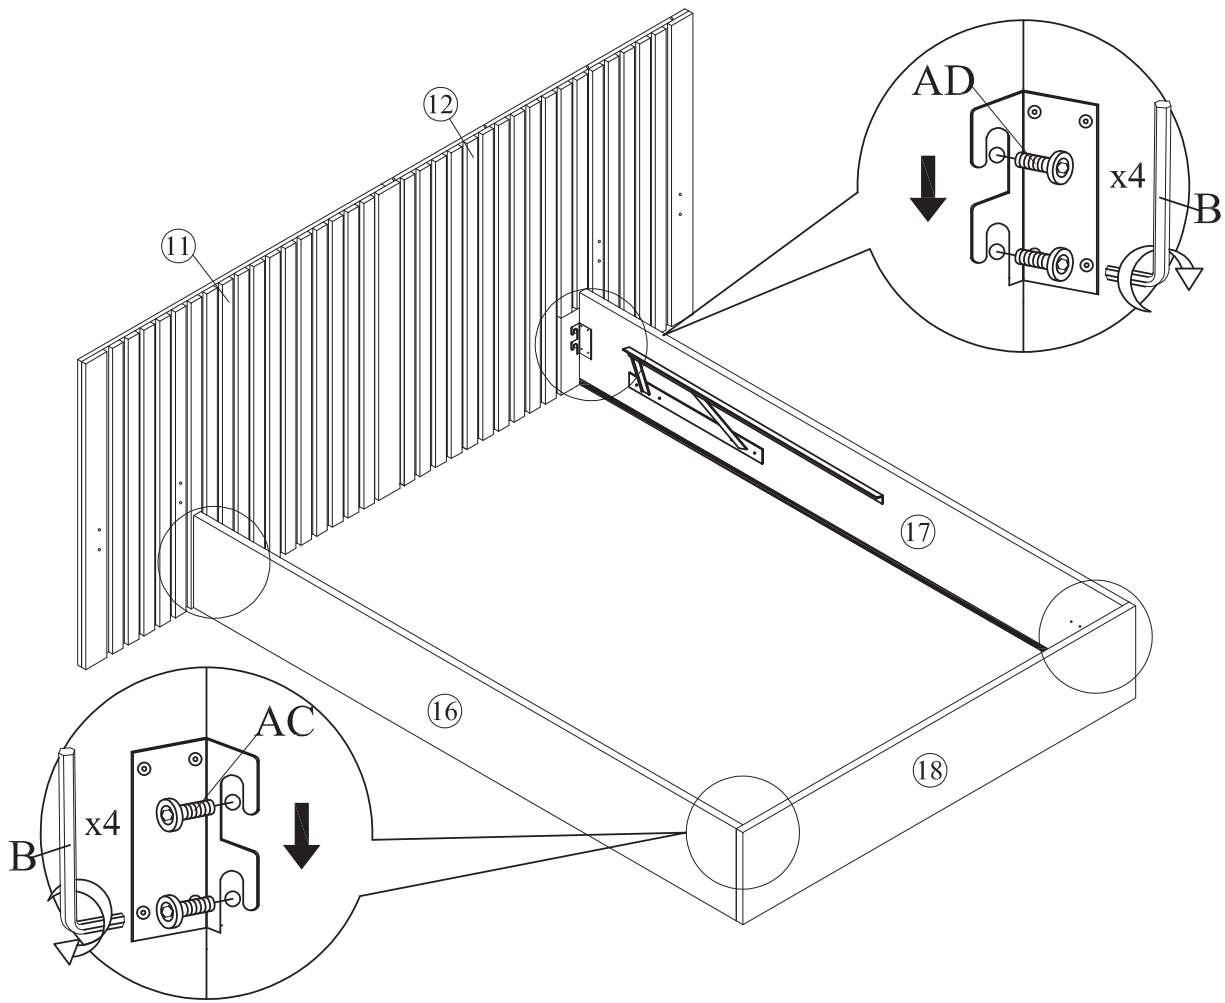


Step 14

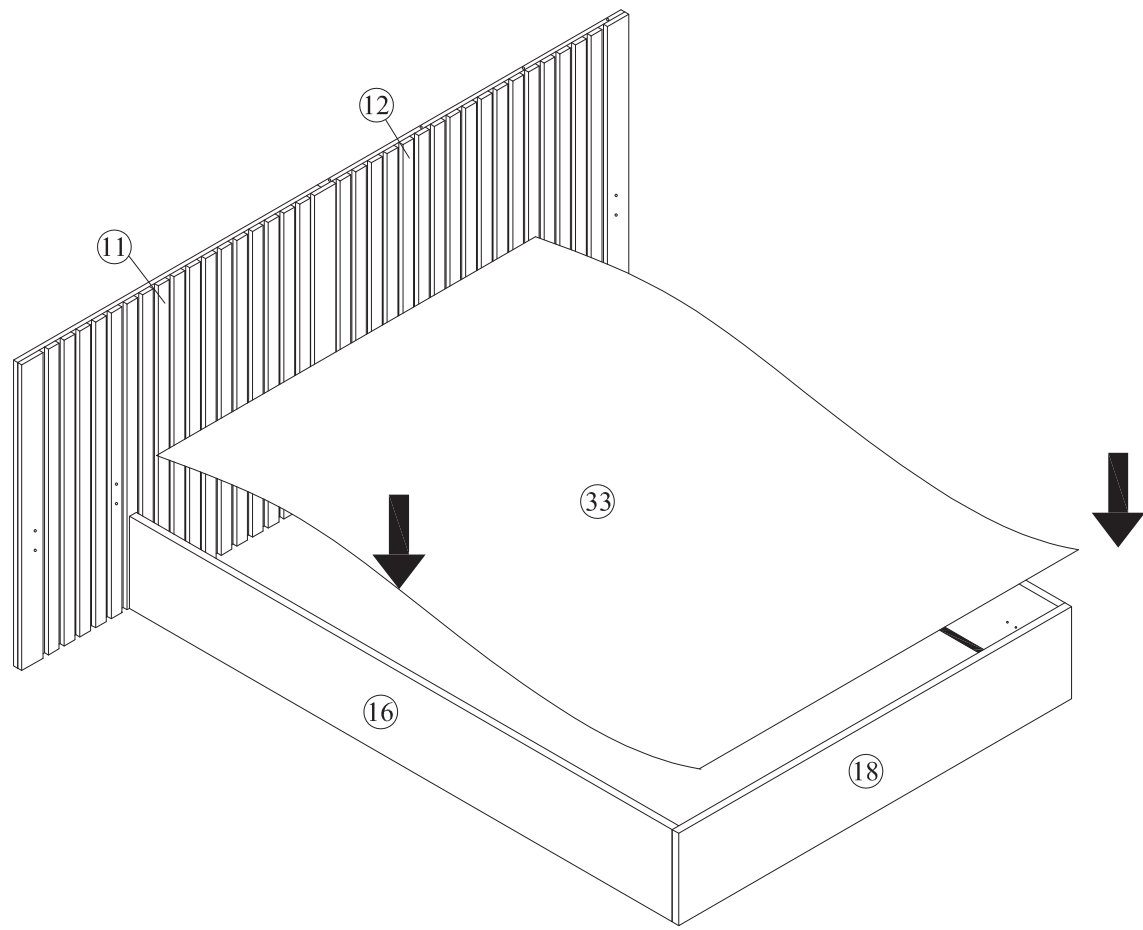

Step 15

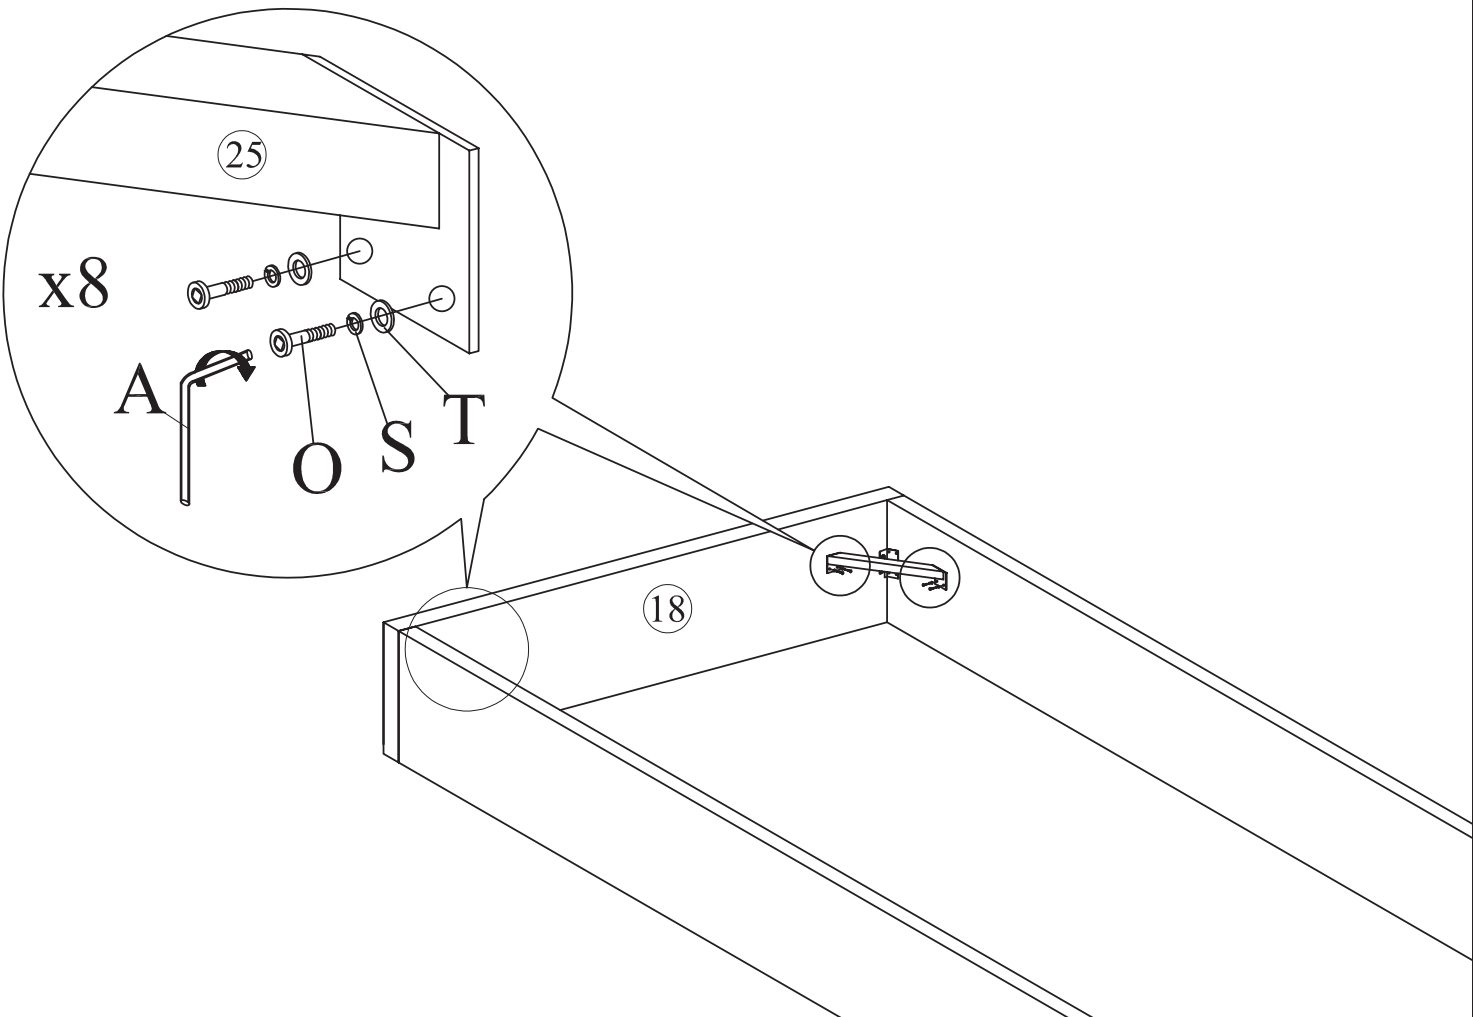


Step 16

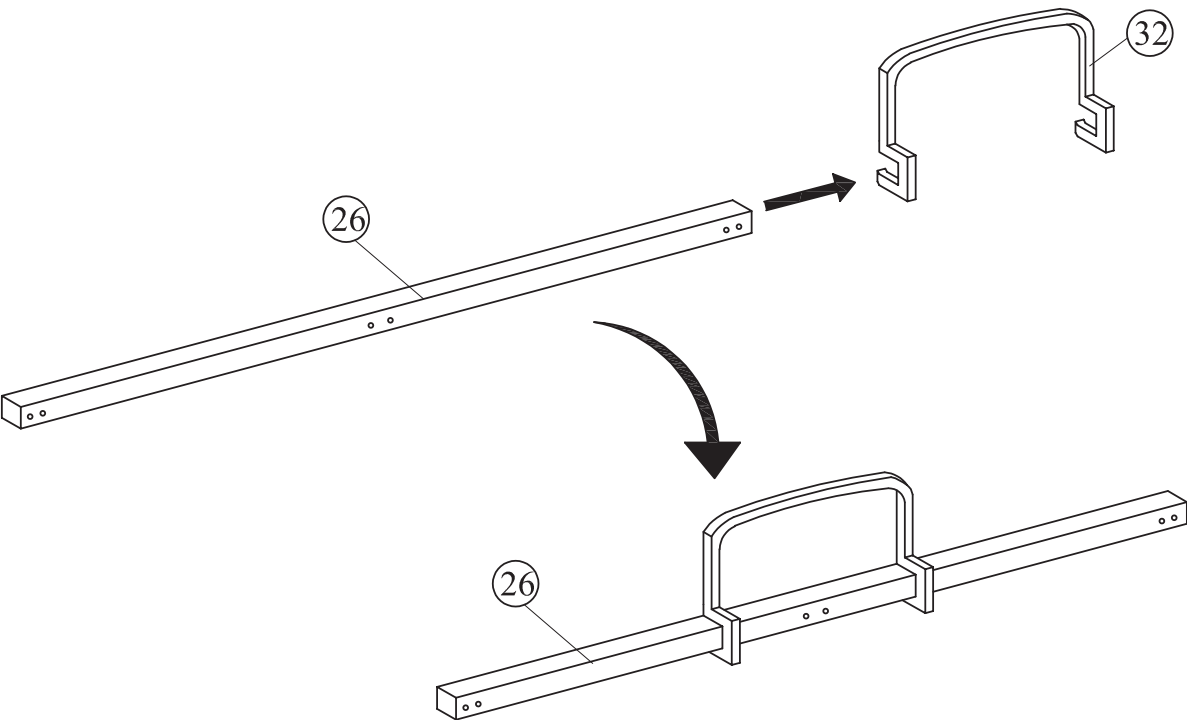


Step 17


Hole for bolt between first & second pair of holders' hole to be fixed to headboard end.

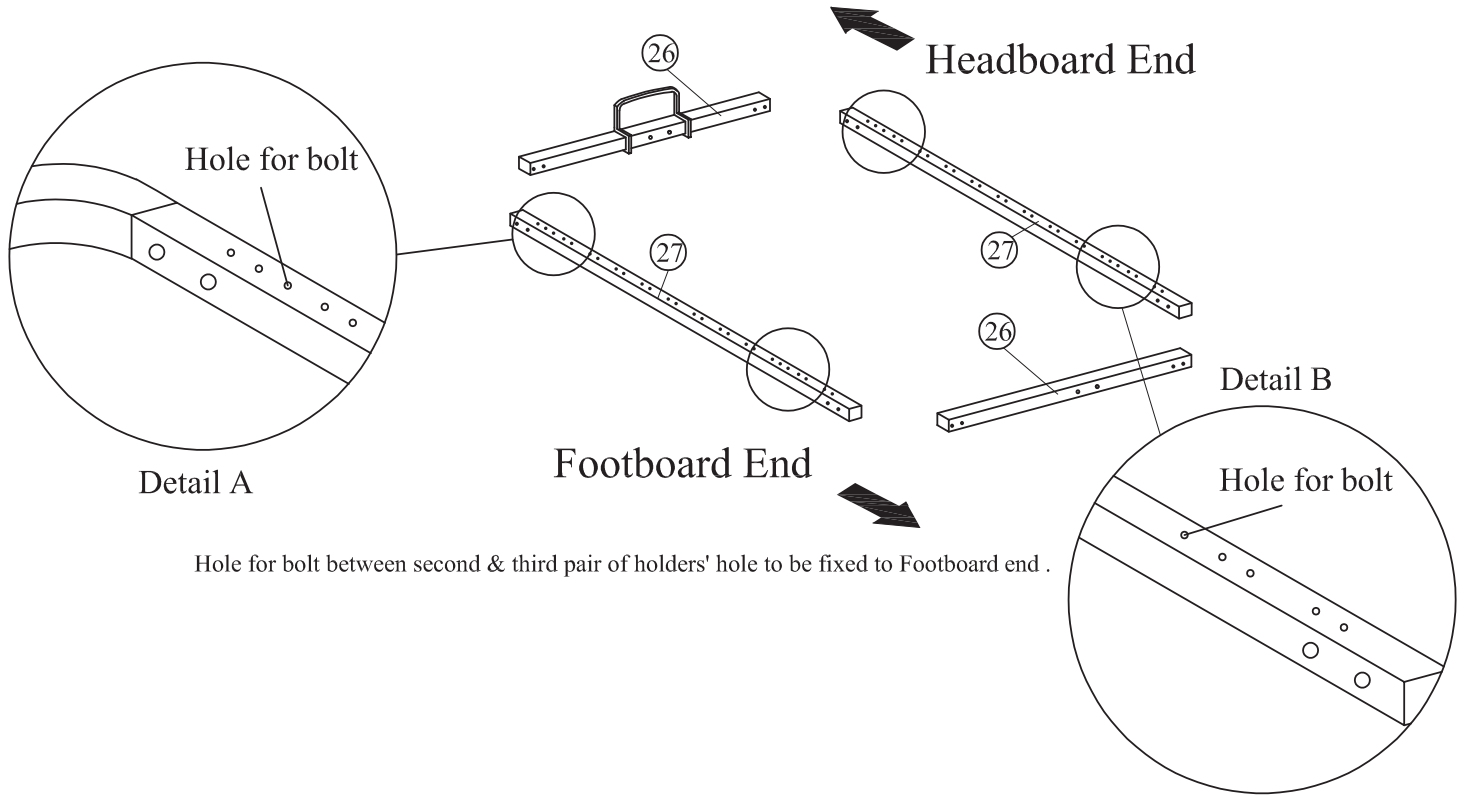


Step 18

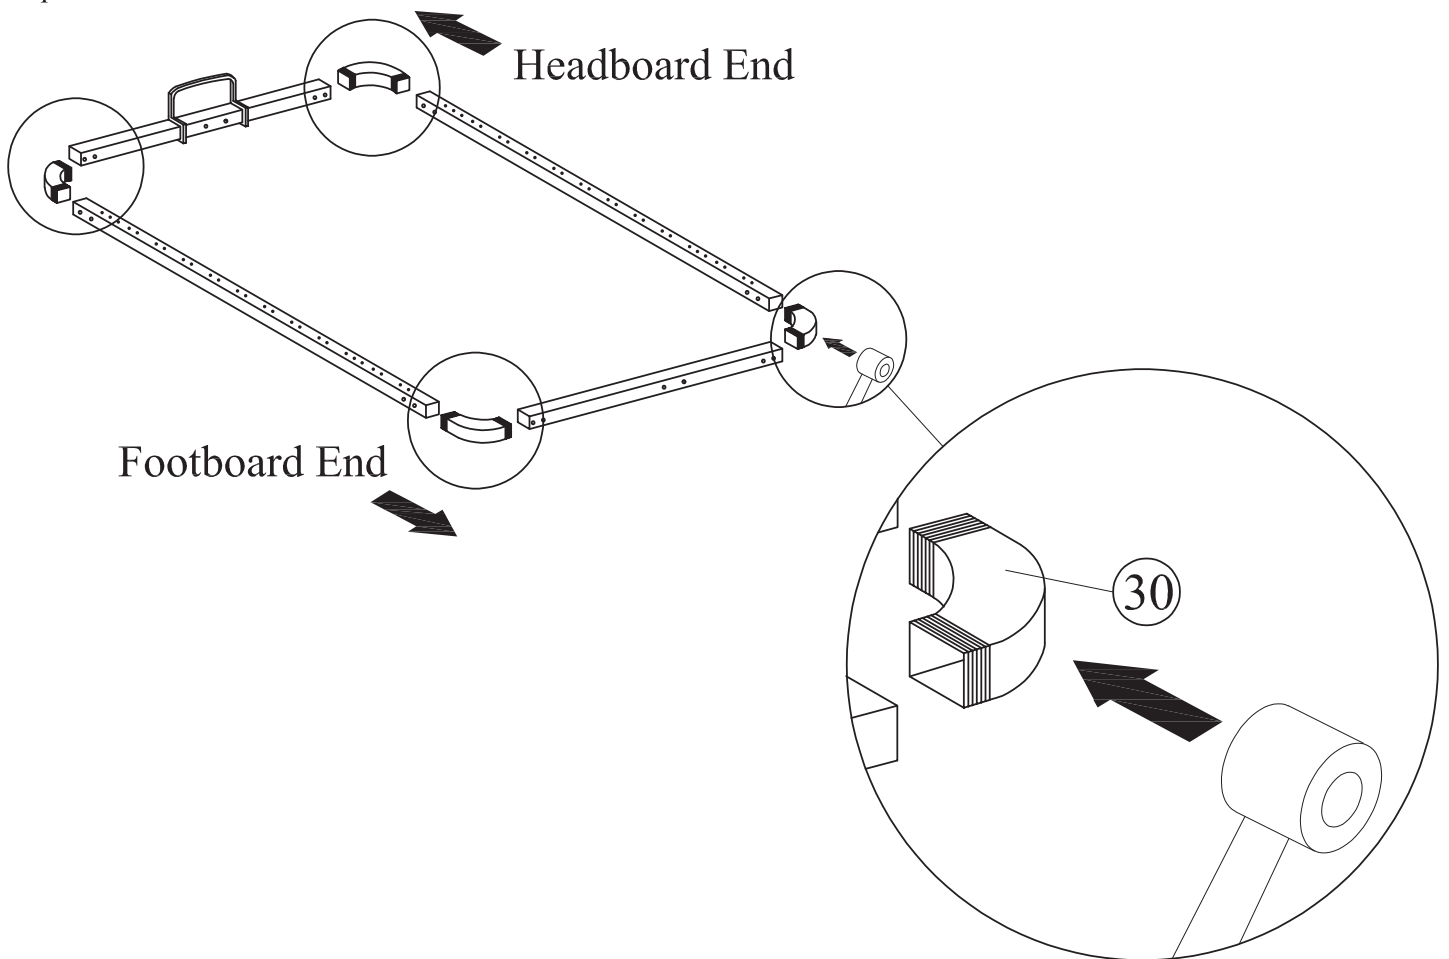


Step 19

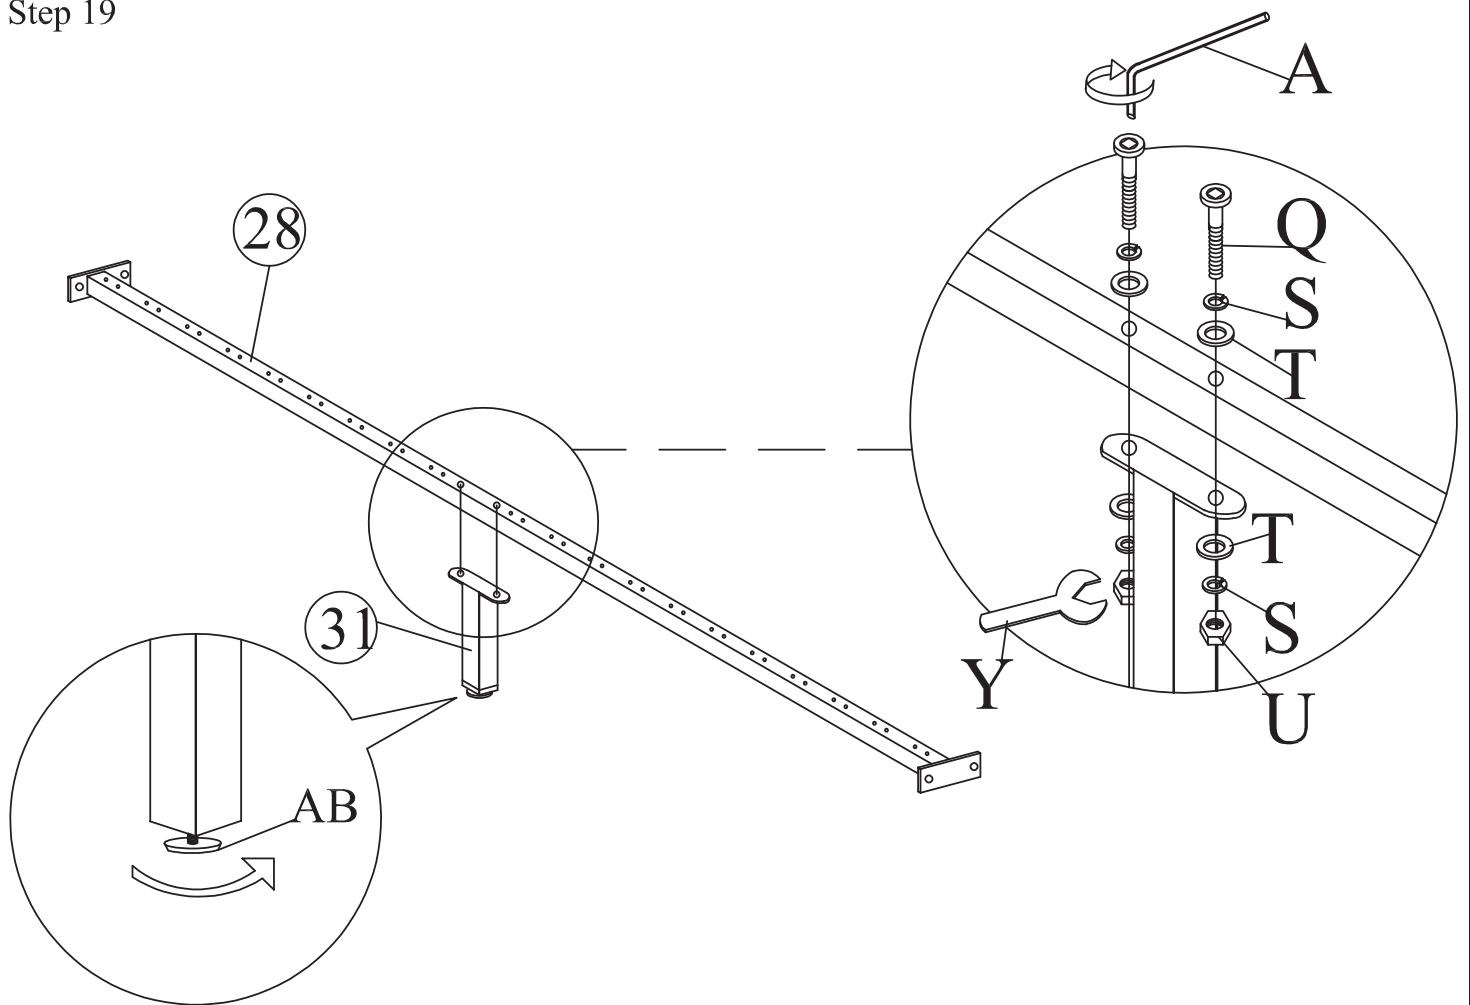

Step 20

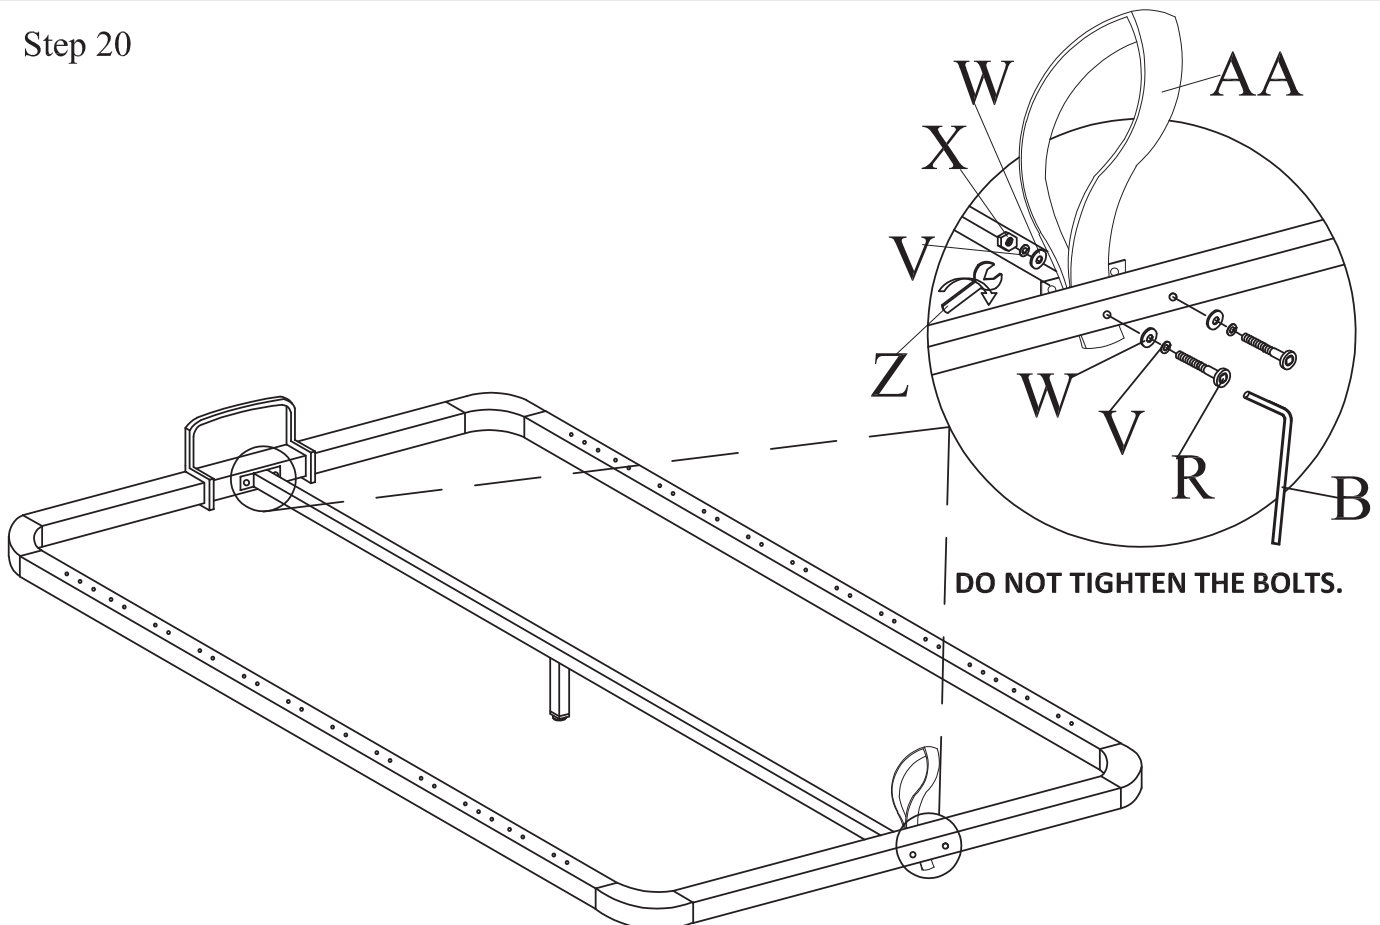


Step 21

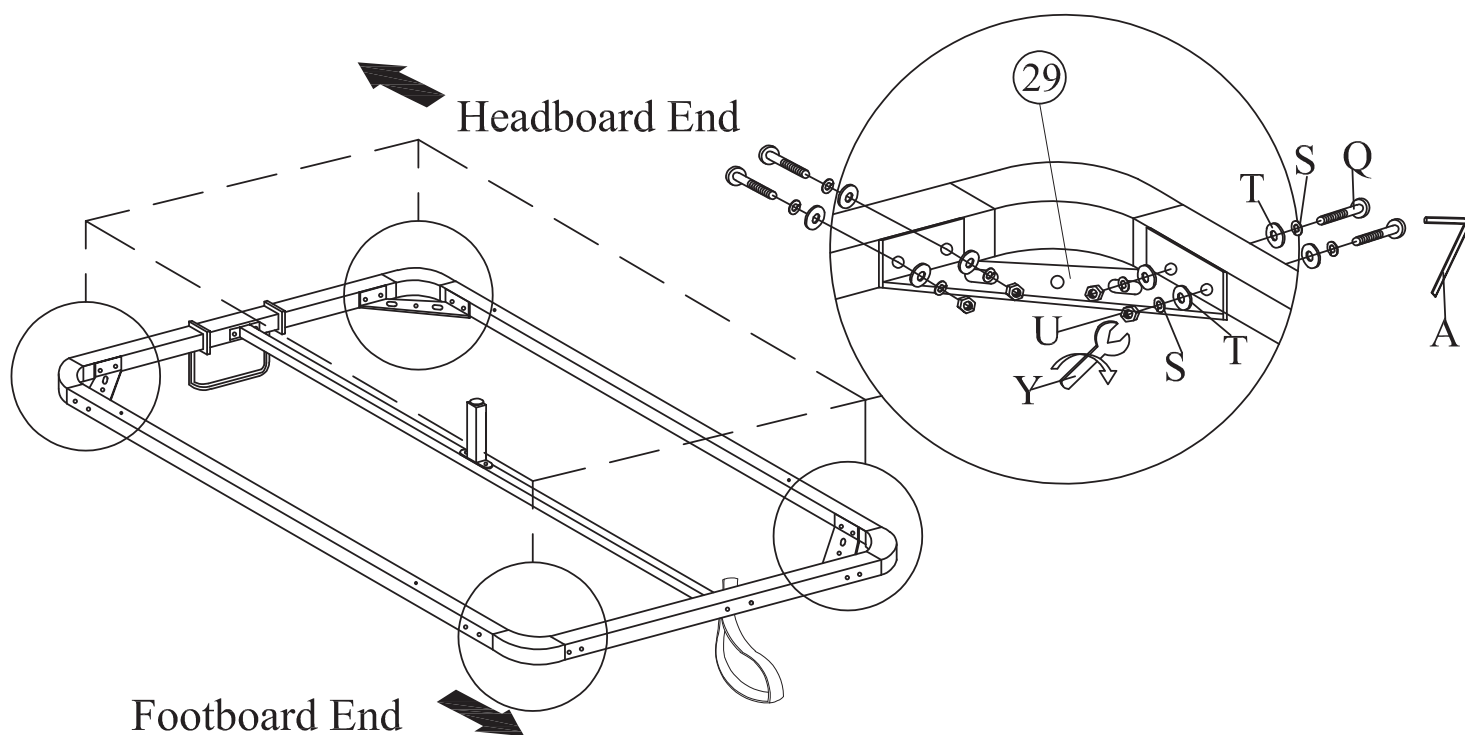


Step 22


Fit Slat Holders (19) first & attach to outside rail , then fit slat holders (20) and attach to center rail (Note : fit 19 first then 20)

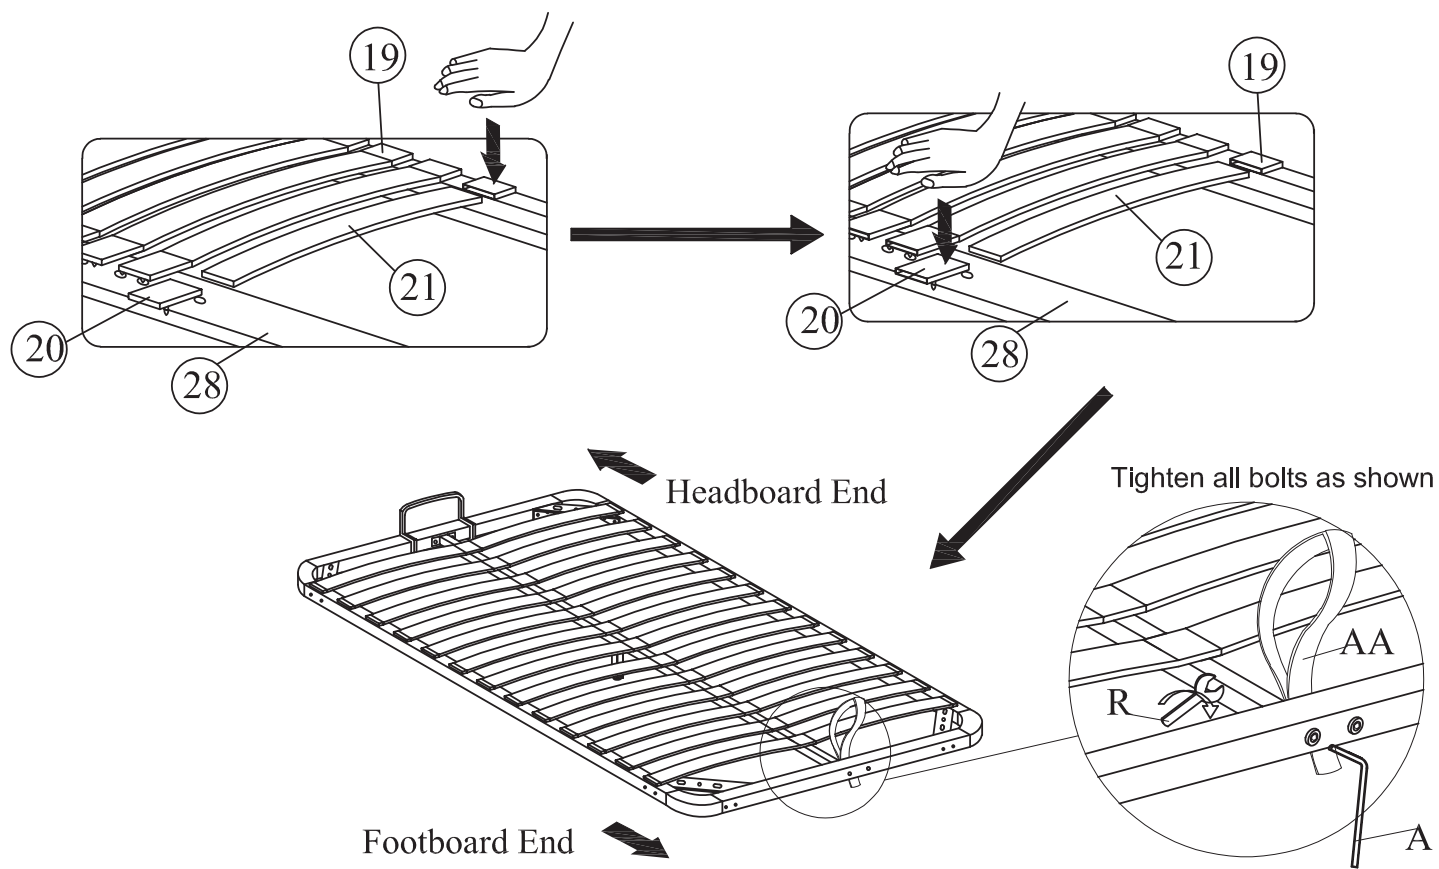

Step 23

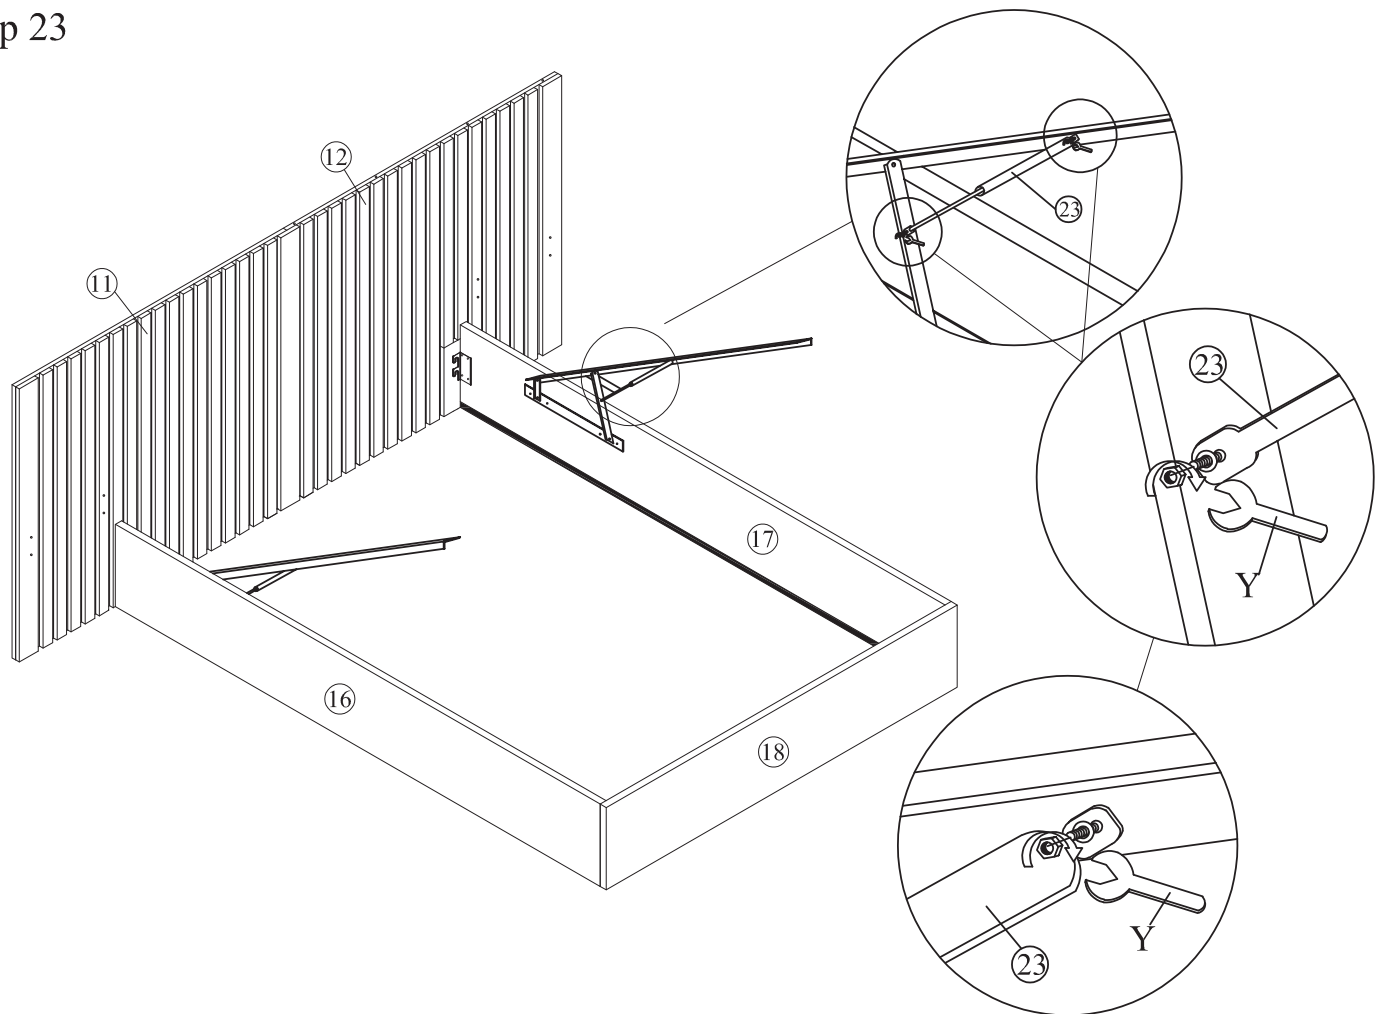


Step 24

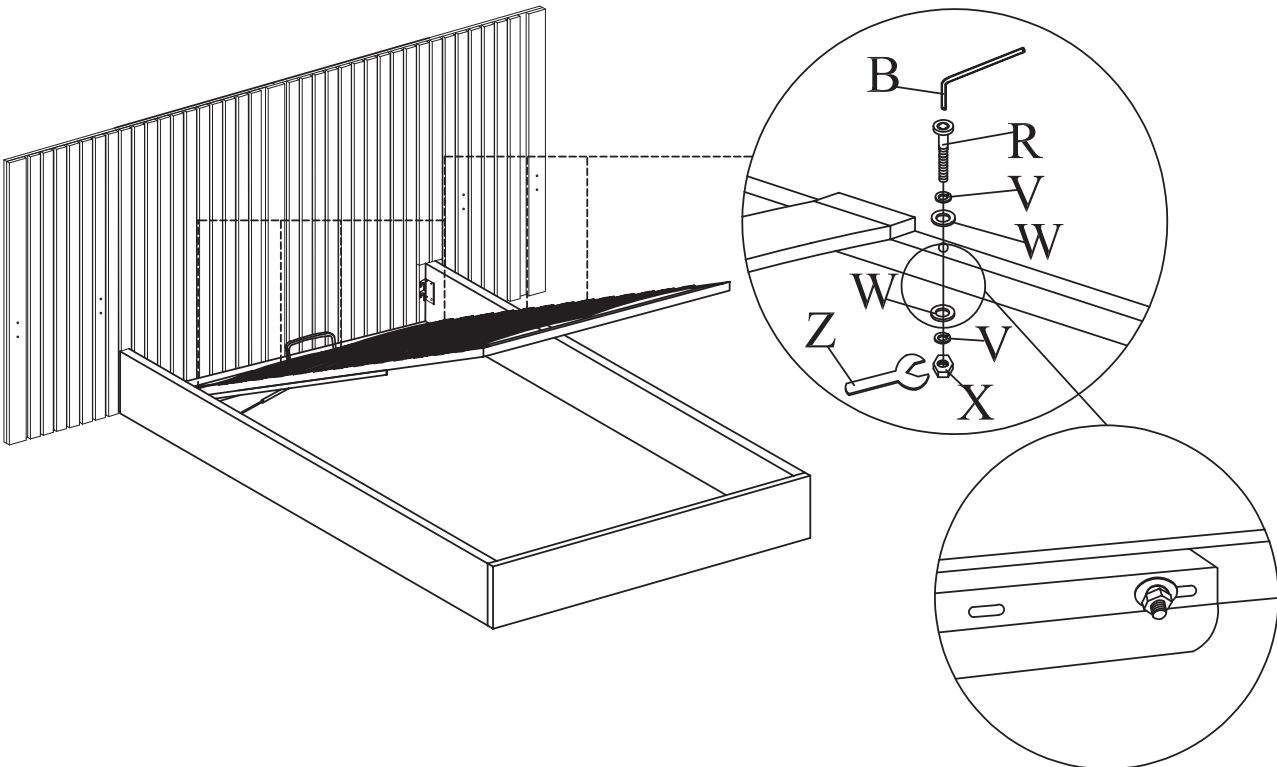

Caution: Adjust the screw at the position of the long hole as shown, then tighten the screw!

Step 25

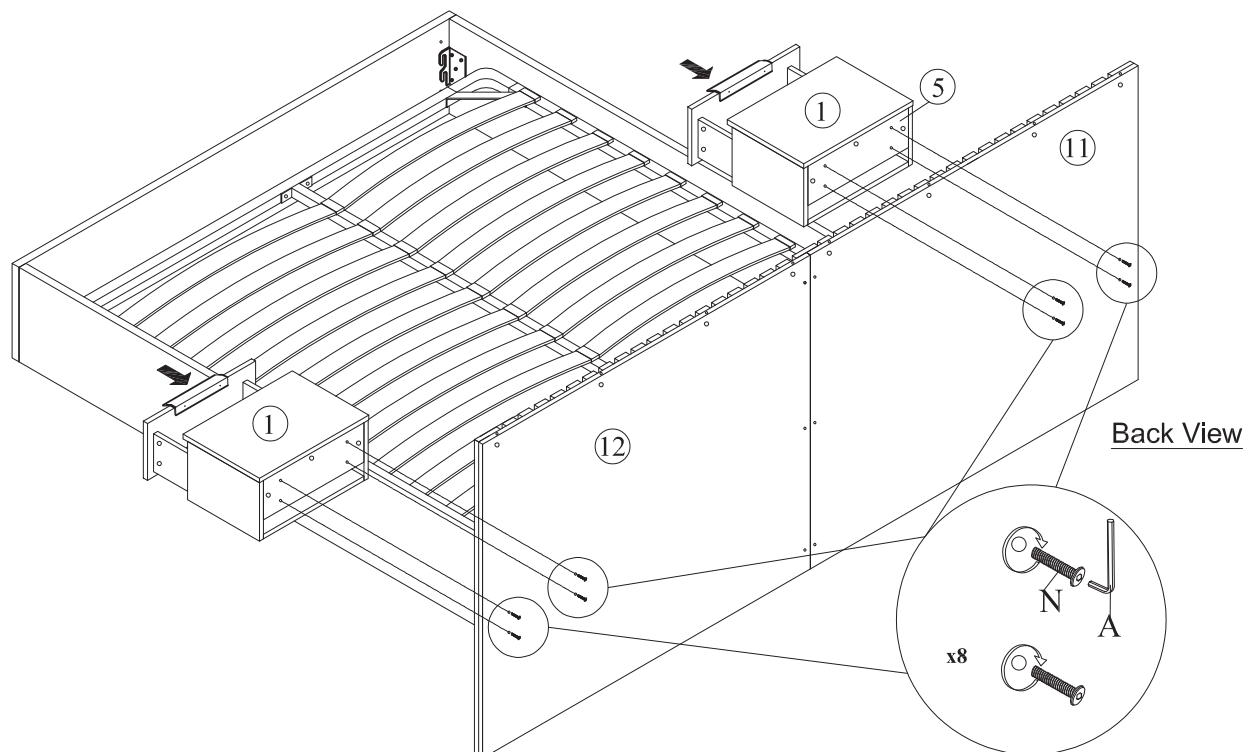


Step 26

This is how a mini fix works...



The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

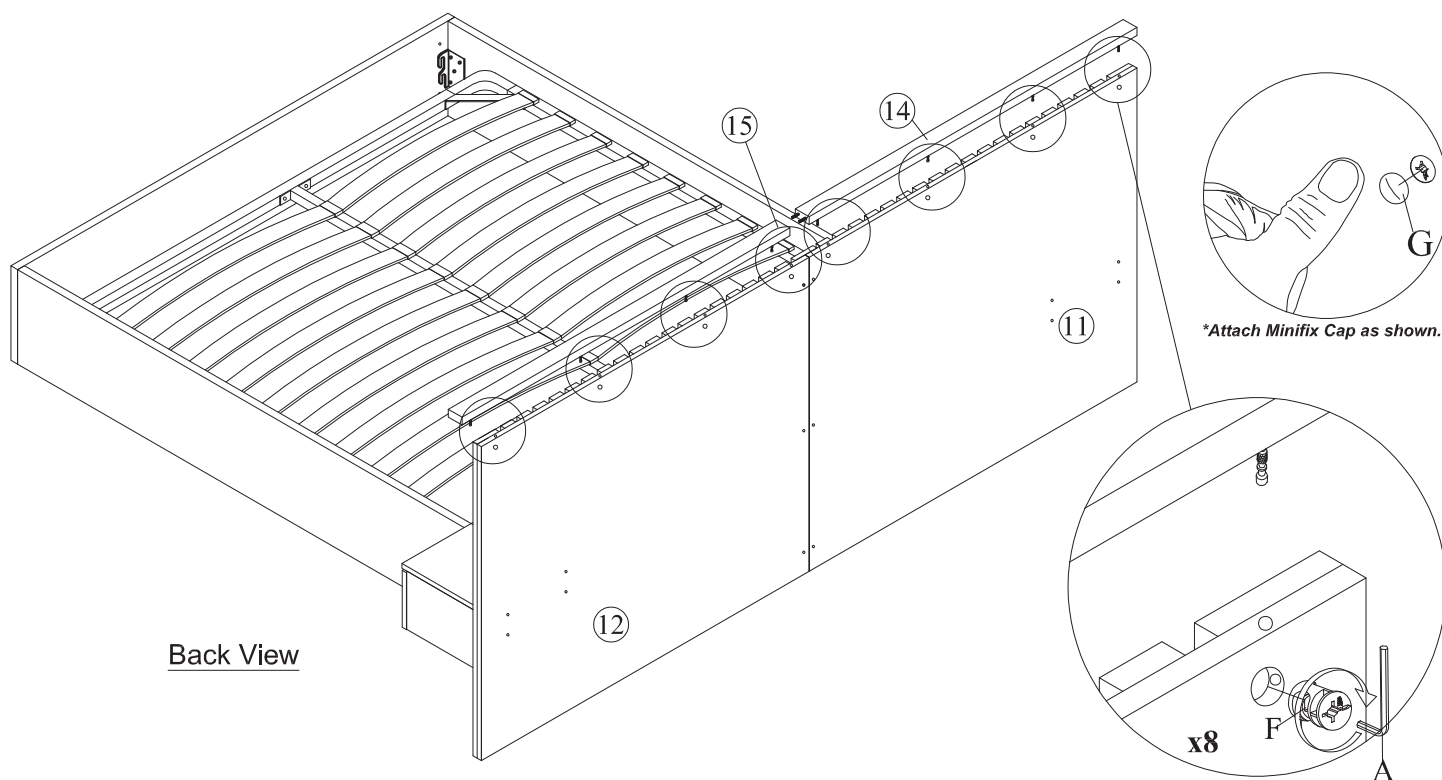

Additional Information:

- Caution. This bed uses a pressurised mechanism.
- Use caution when operating - Always use two hands at arm's length, and only where illustrated on the product.
- You must ensure the mattress is on the bed frame before lifting the mechanism - Failure to do so may result in injury.
- Please ensure Children and pets are kept away from the bed when operating the bed mechanism.
- If removing the mattress, make sure that the frame is secured as it could flip open.
- Only use the storage compartment when the frame is fully raised in the 'up' position.
- No children and animals are left unattended when the frame is in the 'up' position.
- Do not remain on the bed whilst the lifting mechanism is in use.
- Beware of Entrapment - Keep both hands clear of mechanism when operating the mechanism.
- When lifting the bed remove all bedding - Except the fitted sheet.

